
Project Instructions for Coordinated Sediment Monitoring

Multiple Sites Carson and Wilmington, California

Prepared by:

**AECOM Environment
3995 Via Oro Avenue
Long Beach 90810**

Prepared for:

**BP West Coast Products LLC – Carson Refinery
ConocoPhillips – Los Angeles Refinery, Carson Plant
ExxonMobil Refining & Supply Company – Torrance Refinery**

September 2009

Project Instructions for Coordinated Sediment Monitoring

Various Sites Carson and Wilmington, California


Prepared by:

**AECOM Environment
3995 Via Oro Avenue
Long Beach 90810**

Prepared for:

**BP West Coast Products LLC – Carson Refinery
ConocoPhillips – Los Angeles Refinery, Carson Plant
ExxonMobil Refining & Supply Company – Torrance Refinery**

Prepared by:

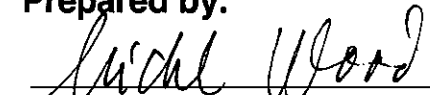

Michele Woods, Project Manager

Reviewed by:



Jay Francisco, Environmental Scientist

September 2009

Table of Contents

1	Project Scope	1-1
2	Project Objectives	2-1
3	Roles and Responsibilities	3-1
4	Schedule.....	4-1
5	Field Procedures.....	5-1
5.1	Event Preparation.....	5-1
5.2	Sampling Procedures	5-1
5.2.1	Field QA/QC Procedures	5-1
5.2.2	Sample Collection	5-1
5.2.3	Sample Handling.....	5-2
5.2.4	Nomenclature / Sample Identification.....	5-2
5.2.5	Documentation.....	5-3
5.2.6	Decontamination.....	5-3
5.2.7	Waste Disposal.....	5-3
5.2.8	Chain of Custody Forms	5-3
5.2.9	Sample Analysis and Laboratories.....	5-4
6	Permitting.....	6-1
7	Project Quality Assurance/Quality Control Objectives	7-1
7.1	Field QA/QC Protocol and Record Keeping.....	7-1
7.1.1	Documentation.....	7-1
7.1.2	Chain of Custody	7-1
7.2	Laboratory QA/QC Requirements.....	7-1
7.3	Data Validation	7-2
8	Reports and Deliverables	8-1
9	Budgets.....	9-1
10	Internal Communications	10-1
11	Client Communications	11-1
12	Environmental, Health, and Safety	12-1
13	Project File.....	13-1

List of Tables

Table of Contents

Table 1 Mobilization Checklist

List of Figures

Figure 1 Sediment Monitoring Location Map

List of Appendices

Appendix A	Project Directory
Appendix B	Hospital Directions
Appendix C	JSA Sediment Monitoring
Appendix D	Sediment Monitoring Health and Safety Plan (HASP)
Appendix E	Sample Chain of Custody Form
Appendix F	SOP 120 Decontamination
Appendix G	SOP 110 Packing and Shipping
Appendix H	Field Form

1 Project Scope

The purpose of this document is to provide project instructions for personnel to safely and efficiently perform sediment monitoring activities for the coordinated sediment monitoring events. The monitoring event occurs annually during September. The annual event includes the following tasks:

- Planning and scheduling
- Reviewing and updating the Job Safety Analysis (JSA) and Project-Specific Health and Safety Plan (HASP)
- Recording observations and sampling 7 locations along the Dominguez Channel
- Submitting samples for analysis
- Preparing a monitoring report

As required in the facilities' NPDES permits, sediment samples will be collected from the following sediment sampling locations (see Figure 1) in the Dominguez Channel:

- S1 - Anaheim Road
- S2 - Pacific Coast Highway
- S3 - Sepulveda Boulevard
- S4 - Alameda Street
- S5 - Wilmington Avenue
- S6 - Avalon Boulevard
- S7 - Main Street

2 Project Objectives

The information collected during sediment monitoring is used in the sediment monitoring reports, which are submitted to the Los Angeles Regional Water Quality Control Board (LARWQCB). The objectives for these project instructions are to:

- Provide a site map showing sediment sampling locations
- Provide a mobilization checklist to be completed prior to commencement of field activities
- Present procedures and guidelines for sediment monitoring activities
- Outline client-specific requirements and identify report templates

All sediment monitoring activities will be performed according to these project instructions.

3 Roles and Responsibilities

The project team is comprised of the following people:

Role	Resource
Project Manager	Michele Woods
Environmental Scientists	Jay Francisco Anu Berry
Technical Staff	Miguel Monterosso (field technician) Shannon Ashurst (bioassay specialist) Sue Milcan (QA/QC specialist) Galen Cooter (EH&S Coordinator)

The Project Manager is responsible for:

- Managing implementation of the project to ensure that appropriate resources are provided to complete defined project scope on schedule and within budget
- Ensuring that the project scope is updated as appropriate to complete the defined scope (i.e., complete change orders when appropriate)
- Scheduling resources to complete the task at hand

The Technical Advisor is responsible for:

- Providing historical regulatory and technical support for the project

The Client Service Managers are responsible for:

- Ensuring that client-specific requirements are implemented
- Reviewing all documents to ensure that they receive appropriate internal (AECOM) and external (client) review

The Senior Reviewers are primarily responsible for:

- Providing senior expertise
- Reviewing all work products

The Technical Staff (database administrator, scientists, engineers, and others) are primarily responsible for:

- Completing assigned work within scope, on schedule, and within budget

4 Schedule

Sediment monitoring events commence at the beginning of March, and take approximately one day. Preparation activities are begun two to three weeks before the event begins. Two technicians/field engineers, a field supervisor, and a database administrator are required to perform the work.

Refer to the task schedule listed below:

Task	Schedule Due Date
Sampling	Early September 2009
Analysis	Mid-October 2009
Data Validation	Late October 2009
Draft report	1 st week of November 2009
Report comments	2 nd week of November 2009
Final report	3 rd week of November 2009

5 Field Procedures

All field activities will be conducted in a safe manner and according to the *Project-Specific Health and Safety Plan Dominguez Channel Sediment Sampling (AECOM, 2009)*. All team members are responsible for ensuring that work is conducted safely.

5.1 Event Preparation

Preparation for this event requires approximately two to three weeks. During this time, the JSEA (Appendix C) and chain-of-custody are reviewed and updated as necessary; field equipment is decontaminated, inspected, checked for proper operation and repaired as necessary, or rented as applicable; and the analytical laboratory is informed of the upcoming event to coordinate sample bottle delivery and courier service. This document will be reviewed and updated prior to each event to reflect changes in procedures, analytical parameters, laboratories, and important contact numbers prior to each event.

5.2 Sampling Procedures

This section describes the sampling methods, handling, nomenclature, documentation, decontamination, and disposal procedures to be used during sediment sampling. Before beginning sediment sampling, it is necessary to complete the mobilization checklist. This form is presented as Table 1. Do not attempt to conduct sediment sampling until this checklist has been completed.

5.2.1 Field QA/QC Procedures

Two different kinds of field quality assurance/quality control (QA/QC) samples are to be obtained during the sediment monitoring event.

- Equipment blank: Collect at the first location where sampling is performed. Pour deionized water through sampling equipment into sample containers.
- Blind duplicate sample: Collect an identical sample at a sampled location. Each sample is collected in an identical manner as the primary sample.

5.2.2 Sample Collection

Sampling will be conducted from the bridges that cross the Dominguez Channel at each sampling station. Sediment will be recovered from the channel bottom at approximately the center of the channel at each location using an Eckman-type grab sampler.

The Eckman-type grab sampler will be securely attached with a rope to a stationary object and lowered into the channel from the bridge access location. When the sampler is in the correct position a small metal device called a messenger will be sent down the rope line to the sampler, causing the device to close. Subsequently, the sampler will be pulled up and the grab sample will be transferred to a stainless steel bowl.

A second attempt to obtain a sample will be made at the initial sampling location if the sampler is unable to recover a sediment sample. If the sampler is still not able to obtain a sample, sampling will be reattempted 10 feet to the right and 10 feet to the left of the specified location. If a useable sample is not obtained after the six attempts, a sample will not be taken from this location.

The distance from the bridge to the channel bottom will be measured by measuring the length of rope with a measuring tape, and the lateral distance from the end of the bridge will be measured.

5.2.3 Sample Handling

Sediment grab samples will be composited in a stainless steel bowl, placed into the required sample containers for the monitoring event with minimal headspace, labeled, and stored on ice in insulated coolers while in the field; all under proper chain-of-custody (COC) procedures. Following the completion of each day's sample collection, chain of custody forms will be completed for each set of samples.

Sediment samples will be turned over to the laboratory courier as soon as possible. All samples delivered to the laboratory will be properly packed in coolers and maintained at 4°C. Original COC forms and analysis request forms will accompany the samples to the laboratory.

Sample holding time begins when the last grab sample for a location is collected. The bioassay samples must be delivered to the bioassay laboratory no later than 36 hours after collection (EPA 1000 series, and 100.4 methods – EPA Report #600/R-95-136).

5.2.4 Nomenclature / Sample Identification

There are seven sampling locations identified as R1-R7 (see Figure 1). Sample names will follow the following prescribed nomenclature to ensure that each sample will be both easily identified and unique.

R#-MMDDYY

Note: R# refers to the sampling location number in series from R1-R7.

Duplicates and equipment blanks will be identified as R8-MMDDYY and R9-MMDDYY, respectively.

5.2.5 Documentation

Field activity logs will be completed daily by the sampler. Sample characteristics will be noted in the field log and include the following:

- Sampling location, time, depth to water, depth to channel bottom, and tide elevation
- Sediment type, density/consistency, color
- Sediment sample ID number
- Aquatic life visible
- Odors
- Other distinguishing characteristics or features

Sample quality and texture will be described using ASTM specifications (ASTM 2488, 1993; ASTM 2487, 1993).

5.2.6 Decontamination

Decontamination methods will be conducted in accordance with AECOM SOP 120 (Appendix F). At a minimum, all sampling equipment (including compositing bowls and utensils) will be decontaminated prior to initial use and between sampling stations. Decontamination procedures include washing and scrubbing with a Liquinox soap solution, rinsing with tap water, and rinsing with deionized water.

5.2.7 Waste Disposal

Leftover or rejected sediment generated during field sampling activities will be returned to the Channel where the sample was collected. Any spilled sediment will be washed back to the Channel. Any leftover or rejected sediments that are collected and not analyzed will be disposed of by the laboratory.

5.2.8 Chain of Custody Forms

Electronic chain-of-custody (COC) forms are used for sample tracking. An example form and template is provided on:

- Projects\COOR-Coordinated Clients\DCCO\Technical, Field Data

Prior to sampling, edit the electronic COC form for proper sample ID, analytes, times, dates, and special instructions to the laboratory. COC forms are to be filled out with the appropriate information (e.g., analytes, sampling methods, wells, etc.), as listed in Section 6.2.9, prior to conducting the sampling and approved by the project manager. The requested subcontracted laboratories should be listed on the COC. All copies are to be signed by the sample relinquisher and receiver. An example is provided in Appendix E.

5.2.9 Sample Analysis and Laboratories

Samples will be submitted to a certified environmental analytical laboratory for testing for the required biological, chemical and physical parameters. ENSR currently subcontracts Calscience Environmental Laboratories (Calscience) to perform chemical and physical testing.

Chemical and physical testing will be conducted using the following methods:

Metals	Method	PAHs	Method
Cadmium	EPA 6010	Acenaphthene	EPA 8270
Chromium	EPA 6010	Anthracene	EPA 8270
Copper	EPA 6010	1,2-Benzanthracene	EPA 8270
Lead	EPA 6010	3,4-Benzofluoranthene	EPA 8270
Nickel	EPA 6010	Benzo(k)fluoranthene	EPA 8270
Zinc	EPA 6010	1,12-Benzoperylene	EPA 8270
		Benzo(a)pyrene	EPA 8270
		Chrysene	EPA 8270
		Dibenz(a,h)anthracene	EPA 8270
		Fluoranthene	EPA 8270
		Fluorene	EPA 8270
		Indeno(1,2,3-cd)pyrene	EPA 8270
		Pyrene	EPA 8270
Pesticides	Method	Miscellaneous Parameters	Method
Arochlor 1016	EPA 8081/8082	Sediment grain size	ASTM D4464M
Arochlor 1221	EPA 8081/8082	Chronic toxicity (E. Estuarius)	EPA/600/R-94/025
Arochlor 1232	EPA 8081/8082	Total organic carbon	EPA 9060
Arochlor 1242	EPA 8081/8082	TPH (C7-C44)	EPA 3550B/TPH - Carbon Range
Arochlor 1248	EPA 8081/8082		GC/MS
Arochlor 1254	EPA 8081/8082		
Arochlor 1260	EPA 8081/8082		
4,4'-DDT	EPA 8081/8082		
4,4'-DDD	EPA 8081/8082		
4,4'-DDE	EPA 8081/8082		
2,4'-DDT	EPA 8081/8082		
2,4'-DDD	EPA 8081/8082		
2,4'-DDE	EPA 8081/8082		

AECOM coordinates with Calscience to ensure compliance with state protocols, detection limits, and QA/QC criteria. The current Calscience contact is listed below:

- Vik Patel: 714-895-5494 x211

For prompt service during the event, the laboratory should be given a one-week advance notice of the sampling event. The laboratory will provide the coolers, sample containers, and a courier service for sample container delivery and sample pickup. A pickup is usually scheduled at the end of each day.

6 Permitting

AECOM personnel must have a current copy of the Los Angeles County Department of Public Works (LADPW) – Flood Control District permit. This Flood Control District permit outlines restrictions for performing activities while working near or on the Dominguez Channel. The permit needs to be renewed annually each September. Refer to the following link for an example of the permit renewal application and a copy of the current permit:

- **Projects\COOR\DCCO\4 – Permits, Agreements, Orders\LADPW Flood Control District Permit**

7 Project Quality Assurance/Quality Control Objectives

Field personnel and the analytical laboratory will address the following specific QA/QC requirements to verify that data produced during the sediment investigation will be of sufficient quality for reporting. All laboratory data will be validated, as described below, prior to their use in project reporting. *Contact AECOM's Fort Collins QA/QC group three weeks in advance of receiving laboratory results to ensure data will be validated on time.*

7.1 Field QA/QC Protocol and Record Keeping

Proper sample collection, identification, preservation, storage and handling procedures, and COC records will be used to ensure that sampling data will be valid and usable. Procedures for these steps are discussed in the previous sections of this sampling plan.

7.1.1 Documentation

In addition to sample labels and chain of custody forms, field activity logs will be completed by the sampler to provide a daily record of significant events. The type of information that should be recorded in the field logs is described in the sampling methods. All entries will be signed and dated, made in non-erasable ink, and errors will be crossed out with a single line and initialed. The logs will be kept as a permanent record. All field measurements will be recorded on the appropriate sampling log forms.

7.1.2 Chain of Custody

Samples are considered to be in one's custody if they are:

- (1) in the custodian's possession or view;
- (2) in a secured location (under lock) with restricted access; or
- (3) in a container that is secured with an official seal(s) such that the sample cannot be reached without breaking the seal(s).

The principal documents used to identify samples and to document possession are COC records, field logbooks, and field tracking forms. COC procedures will be used for all samples at all stages in the analytical or transfer process and for all data and data documentation, whether in hard copy or electronic format.

7.2 Laboratory QA/QC Requirements

Sediment samples will be stored and analyzed in accordance with the holding time requirements of the specified methods. Analyses will be required to conform to accepted standard methods and rigorous internal QA/QC checks prior to final approval and reporting by the laboratory.

The laboratory will provide data reports that will include a cover letter describing any problems or deviations from standard protocols, results, and associated QA/QC materials. The bioassay laboratory will provide reference toxicant tests documenting that in-house breeding cultures are within sensitivity criteria.

7.3 Data Validation

After receipt of the analytical results, AECOM will review all raw data to verify that the laboratory has supplied the required QA/QC deliverables. Toxicity data will be validated by a bioassay specialist. Where data fail the laboratory will be contacted, and the data will be: 1) reanalyzed, 2) qualified, or 3) discarded.

Chemical and physical data will be validated by a QA/QC specialist. Where data fail, the data will be qualified or rejected. Data quality issues will be summarized in a brief data validation report.

8 Reports and Deliverables

The project team will report data collected in a sediment monitoring report submitted to the LARWQCB. Client-specific preparation of the report is detailed in this section.

BP Carson Refinery

- Requires two copies of the sediment report, one for agency submittal and one for their files
- Reports need to be 3-ring bound
- A BP cover letter needs to be prepared for the client representative's review and signature

ConocoPhillips Los Angeles Refinery

- Requires two copies of the sediment report, one for agency submittal and one for their files
- Reports need to be comb bound
- No tributyltin results should be included in these reports.

ExxonMobil Torrance Refinery

- Requires three copies of the sediment report, one for agency submittal and two for their files
- Reports need to be comb bound
- No tributyltin or Chronic toxicity results should be included in these reports.

9 Budgets

Each person working on a given task will be given a budgeted number of hours. If the scope of work changes due to site conditions, it is the responsibility of the Task Manager to notify the Project Manager that budgeted hours need to be revised. This is to be communicated before the budgeted hours are depleted. The Project Manager is responsible to then obtain written approval from the client for any changes in budget, scope, and schedule.

10 Internal Communications

Project work should be discussed only on a "need to know basis." Work scope should not be discussed with family members, friends, or coworkers who are not directly involved in this project.

Avoid discussing project issues in restaurants, elevators, and on airplanes where others that you do not know may hear the conversation. You should be especially sensitive to this issue when eating at restaurants that are located near the refineries and other petroleum and chemical facilities in the area.

Day-to-day project communications will be the responsibility of the Project and Task Managers. This would include daily update reports, resource needs, schedule issues, and data management. A project directory is provided in Appendix A.

Teleconference. Teleconferences will be used on an as needed basis to discuss specific project issues. Teleconferences should be scheduled a minimum of 48 hours in advance. Meetings should be announced via e-mail. Teleconference announcements should include a recommended date and time, list of participants, anticipated length, and brief agenda.

Faxes. Sensitive written material should be sent via fax if information is time critical.

Courier (e.g., FedEx). A courier should be used for distributing sensitive paper or e-copy (i.e., CD-ROM) information.

E-mail. E-mail should be used to convey brief messages, meeting announcements, and published information. For potentially sensitive items, couriers and faxes should be used for transferring draft deliverables and data.

Email may be used to facilitate coordinated client feedback, discussions and consensus when appropriate.

11 Client Communications

All team members will communicate with the client representatives as needed, but with the Client Service Managers and Project Manager's knowledge of the purpose of the communication.

12 Environmental, Health, and Safety

Field staff must review this project instruction and coordinate with the Project Manager to verify that all up-front logistics are completed. A Project-Specific Health and Safety Plan (HASP) for sediment monitoring activities are included in Appendix D. Additionally, a tailgate meeting must be attended at the beginning of each day; all activities programmed for the day must be documented and reviewed in a Job Safety Analysis (JSA) Form (Appendix C).

13 Project File

The Administrative Assistant maintains the central project files in the AECOM Long Beach office. The project files should be filed using the Long Beach office file procedures.

Personal files should be managed such that all materials identified as privileged and confidential are maintained as separate files and labeled accordingly. This includes both paper and electronic documents.

Draft documents distributed to the team are for review and comment only. Once a document has been issued as final, draft documents should be removed from the central project files and from personal files and destroyed. This applies to both paper and electronic documents.

When filing both paper and electronic documents, adhere to the following file structure:

For field forms, field data, and laboratory reports:

COOR – Coordinated Work (Multiple Clients)
DCCO – Dominguez Channel Compliance
9 – Technical / Field Data

For reports and transmittal letters:

COOR
DCCO – Dominguez Channel Compliance
6 – Reports

For invoices and monthly status reports:

COOR
DCCO – Dominguez Channel Compliance
1 – Invoices

For NPDES permits, agency orders, and LADPW permits:

COOR
DCCO – Dominguez Channel Compliance
4 – Permits / Agreements / Orders

For hardcopy and electronic correspondence with clients and agencies:

COOR
DCCO – Dominguez Channel Compliance
7 – Correspondence

Table

Sediment Sampling Mobilization Checklist

- Eckman Dredge
- 100 ft. of rope + extra rope
- Measuring tape
- Stainless steel collection bowl & spoon
- Liquinox
- Distilled water (5-10 gallons)
- De-ionized water from the laboratory (4-5 liters)
- Towels
- Sample bottles & coolers
- Chemical-resistant gloves
- Appropriate work gloves
- Field activity logs
- Sharpie pen
- Sample labels
- Ziplock bags (freezer type)
- Ice – bagged
- Cell Phone
- Orange cones or barricades
- PPE: Steel-toed boots, traffic vest, safety glasses, and hardhat
- Other (list):
 - Copy of the HASP
 - Copy of the Project Instructions
 - Copy of the reviewed and signed JSEA
 - Copy of the reviewed and signed STAR form

Figure

TOWARDS EXXONMOBIL
TORRANCE REFINERY

TORRANCE FLOOD
CONTROL LATERAL

CARSON ST.

223rd ST.

MAIN ST.

AVALON BLVD.

WILMINGTON AVE.

SEPULVEDA BLVD.

LOMITA BLVD.

CONOCOPHILLIPS LAR

PACIFIC COAST HWY.

ANAHEIM ST.

ALAMEDA ST.

R7

R6

R5

R4

R3

R2

R1

BP CARSON
REFINERY

SHELL LAR



LEGEND

● R1 SEDIMENT SAMPLING LOCATION



NPDES SEDIMENT SAMPLING BP, ConocoPhillips, ExxonMobil and Shell		SAMPLING LOCATIONS DOMINGUEZ CHANNEL	
DATE: 04/30/03	DRWN: FC/LB	FILE: 4355S001	LAYOUT: LAYDLT1
			FIGURE 1

Appendix A
Project Directory

Project Directory

Clients

Chris Huy
BP Carson Refinery
1801 E. Sepulveda Boulevard
Carson, CA 90749
Phone: (310) 847-5263
Chris.Huy@bp.com

Stephen Mallon
ConocoPhillips Los Angeles Refinery
1660 W. Anaheim Street
Wilmington, CA 90748
Phone: (310) 522-8038
Fax: (310) 552-6014
steve.mallon@conocophillips.com

James Phelan
ExxonMobil Torrance Refinery
3700 W. 190th Street
Torrance, CA 90504
Phone: (310) 212-4783
Fax: (310) 505-7510
James.M.Phelan@exxonmobil.com

Subcontractor

Calscience Environmental Laboratories
Vik Patel
Project Manager
7440 Lincoln Way
Garden Grove, CA 92841-1427
Phone: 714-895-5494 x211

AECOM

AECOM
3995 Via Oro Avenue
Long Beach, CA 90810
(562) 420-2933 Phone
(562) 420-2915 Fax

Client Service Managers –
Jennifer Bell (ConocoPhillips, ExxonMobil)
Bill Martin (BP)

Michele Woods – Project Manager
Jay Francisco – Environmental Scientist
Miguel Monterroso – Field Technician
Faraneh Chamran – Database Administrator
Galen Cooter – EH&S Coordinator

Shannon Ashurst – Bioassay Specialist

Sue Milcan – QA/QC Specialist

Appendix B
Directions to Hospital

Directions from each site to the Harbor/UCLA Medical Center (on the corner of Carson Street and Vermont Avenue):

From R1: 1. Head west on Anaheim Street.
2. Turn RIGHT onto Avalon Blvd.
3. Turn LEFT onto Carson Street.

From R2: 1. Head west on Pacific Coast Highway.
2. Turn RIGHT onto Avalon Blvd.
3. Turn LEFT onto Carson Street.

From R3: 1. Head west on Sepulveda Blvd.
2. Turn LEFT onto Carson Blvd.

From R4: 1. Head south on Alameda Street.
2. Turn RIGHT onto Sepulveda Blvd.
3. Turn RIGHT onto Main Street.
4. Turn LEFT onto Carson Blvd.

From R5: 1. Head north on Wilmington Avenue.
2. Turn LEFT onto Carson Street.

From R6: 1. Head south on Avalon Blvd.
2. Turn RIGHT onto Carson Street.

From R7: 1. Head south on Main Street.
2. Turn RIGHT onto Carson Street.

Appendix C
Job Safety and Environmental Analysis (JSEA)

Job Safety Analysis

JSEA Type: <input checked="" type="checkbox"/> Field Operations <input type="checkbox"/> Office <input type="checkbox"/> Construction		<input type="checkbox"/> New <input checked="" type="checkbox"/> Revised	Date: 08/26/2009
Office: Long Beach		Clients: BP, ConocoPhillips, ExxonMobil	Loc: Carson and Wilmington, CA
Work Type: Environmental Compliance		Work Activity: Coordinated Sediment Monitoring	
Personal Protective Equipment (PPE): Minimum PPE is safety glasses or goggles, steel-toed boots, traffic vest, chemical-resistant gloves, and work gloves, with hearing protection and hardhat, as needed.			
Development Team	Position/Title	Reviewed By	Date
Michele Woods	Project Manager	Shelley Brown, Regional EHS Manager	08/26/2009
Field staff must review the sediment project instructions and coordinate with the project manager to verify that all up-front logistics are completed prior to starting work including, but not limited to, permitting, access agreements, and notification to required contacts (e.g. site managers, inspectors, clients, subcontractors, etc.). Additionally, a tailgate safety meeting must be performed and the JSA reviewed at the beginning of each workday.			
Task Description			
Location: Bridges over the Dominguez Channel. Refer to the project instructions for sampling location details.			
Site Features (terrain, utilities, structures): The 7 sampling points are located at bridges along high traffic streets. AECOM's vehicles can generally park at the entrance/exit to the access roads during sampling. At some locations, the vehicles need to be parked on side streets, requiring equipment and supplies to be transported to the sample location by foot. Caution should be used both when backing out of the access road and walking on the sidewalks due to high vehicular traffic on the streets. A spotter should be used when backing up as necessary.			
Field Work			
<ul style="list-style-type: none"> Once field personnel have set-up at each sample location, samples will be collected using an Eckman-type dredge and visual observations of the samples will be made. The distance from the Dominguez Channel bank to the sample location will be measured along with the distance from the bridge to the water and the distance from the bridge to the bottom of the channel. Once all work has been completed, load the samples and equipment into the vehicle and place disposable items in the proper receptacle. 			
HSE Observations & Reporting			
<ul style="list-style-type: none"> In the case that other hazards are observed not covered by this JSA, the observation should be reported to the project manager and an HSE Observation card should be filled out. Submit the HSE Observation card to the project manager for review. Submit the HSE Observation card to the EHS Coordinator. The HSE Manager and project manager will evaluate the need to update the JSA. 			
Evacuation/Emergency Response			
<ul style="list-style-type: none"> If an injury should occur to AECOM personnel, the injury must be reported to the project manager, EHS Coordinator, and client representative. Administer the appropriate medical response for the injured person. If the injury requires hospital attention, personnel should be taken to the Los Angeles County Harbor/UCLA Medical Center. Hospital directions specific to each sampling location are included as an attachment to this JSA. 			
① Job Steps	② Potential Hazard	③ Critical Actions	
1. Loading and driving vehicle	<ul style="list-style-type: none"> Heavy lifting Dropping equipment (i.e. onto hand and/or foot) Traffic and stationary structures Spills or leaks 	<ul style="list-style-type: none"> Use two people for carrying/lifting heavy objects and use proper lifting techniques Wear leather gloves and/or chemical-resistant gloves for hand protection if necessary Watch for oncoming traffic, traffic poles and structures Help guide driver if necessary 	
2. Unloading equipment and sample bottles from the vehicle	<ul style="list-style-type: none"> Heavy lifting Dropping equipment (i.e. onto 	<ul style="list-style-type: none"> Use two people for carrying/lifting heavy objects and use proper lifting techniques 	

and carrying them to the sample locations	hand and/or foot)	<ul style="list-style-type: none"> • Wear leather gloves and/or chemical-resistant gloves for hand protection if necessary
3. Sampling sediment from bridges	<ul style="list-style-type: none"> • Rope burn and/or hand injuries • Pinch points • Potential contact with chemical preservatives from sample bottles • Repetitive motion injury • Working on sidewalks near moving traffic 	<ul style="list-style-type: none"> • Work with AECOM partner to assist in operating the equipment if necessary • Wear heavy/thick work gloves for hand protection • Wear chemical-resistant gloves when handling sample bottles containing chemical preservatives • Take breaks from retrieving dredge • Team member not collecting sampling should be paying attention to traffic in the sampling vicinity.
4. Loading and driving vehicle	<ul style="list-style-type: none"> • Heavy lifting • Dropping equipment (i.e. onto hand and/or foot) • Traffic and stationary structures 	<ul style="list-style-type: none"> • Use two people for carrying/lifting heavy objects and use proper lifting techniques • Wear leather gloves and/or chemical-resistant gloves for hand protection if necessary • Watch for oncoming traffic, traffic poles and structures • Help guide driver if necessary

Appendix D
Health and Safety Plan



Project-Specific Health & Safety Plan Sediment Monitoring

BP Carson Refinery, ConocoPhillips Los Angeles Refinery and ExxonMobil Torrance Refinery

Project Information

Project Name:	Carson LNAPL - Refinery O&M Recovery/Line Integrity Management
Project Location:	Multiple Refineries
Date HASP Issued or Updated: (Note: HASP must be updated annually at a minimum)	8/27/2009
Updated By:	Galen Cooter
Project Number:	See email briefing
Project Manager:	Michele Woods
Field Task Manager:	TBD

Emergency Contacts

Location	Contact Name	Telephone
Off Site	Carson Sherriff	9-1-1
Off Site	Fire Department	9-1-1
Off Site	Ambulance	9-1-1
Office	AECOM Office	(562) 420-2933

(Evacuation map and hospital route map included in Appendix B of the Project Instructions)

Incident Reporting Contacts (Also Refer to Incident Management Flowchart)

Contact Priority	Name	Office Phone	Cell/Home Phone	Pager	Text Pager
1	Galen Cooter HSSE Manager	(562) 213-4164	(805) 452-3523	--	--
2	Michele Woods Project Manager	(562) 213-4146	(562) 480-8789	--	--
4	AECOM Emergency Pager	--	--	(562) 685-8940	5626858940@ airmessage.net
5	Shelley Brown District SH&E Mgr.	(562) 213-4129	(562) 544-3506		

Note: Initiate contact in the order listed immediately after stabilizing situation. Make verbal contact: do not leave messages.

PURPOSE OF HASP

The AECOM Corporation developed this HASP on behalf of BP, ConocoPhillips, and ExxonMobil to outline pertinent information needed for employees, contractors, subcontractors, and regulatory agents to safely carry out field activities for this project.

Before starting fieldwork, all personnel will review this HASP at a project kick-off meeting. They will then sign the acknowledgement form at the end of this document to demonstrate their review.

TRAINING

All applicable project personnel are required to have completed at a minimum:

- The required 40-hour, Occupational Safety and Health Administration training for hazardous waste site activities with annual 8-hour refresher training
- The requirements of annual medical surveillance
- Individualized respirator fit testing

PROJECT DESCRIPTION

Project Name: Carson LNAPL - Refinery O&M

Project No.:

Multiple

Site Features (*terrain, utilities, structures*):

All sampling activities will be conducted on bridges spanning the Dominguez Channel. Terrain will consist of paved sidewalks and possibly dirt roads. No structures will be entered during sampling.

Scope of Work:

Refer to the Project Instructions for detailed scope.

Planning

- Prior to the sediment monitoring event, a sample kit for each of the sampling locations, a vehicle reservation, and a laboratory sample pick-up need to be made. Any necessary sample containers need to be requested from the designated contract laboratory.

Field Work

- Load the AECOM vehicle with the required equipment from the sediment sampling mobilization checklist.
- A health and safety meeting needs to be held with all AECOM personnel assigned to the task, the office HSSE Manager, and/or project manager. A JSA form is filled out during the meeting.
- Collect samples from each of the seven designated locations using an Eckman dredge. Perform visual observations of the sediment samples and Dominguez Channel. Record all field activities and visual observations on Field Activity Daily Log forms.
- Once all possible samples have been collected return to the AECOM office to unload samples and equipment and prepare sample pickup from the laboratory courier.

The Job Safety Analysis (JSA) for the above bulleted tasks has been emailed along with this HASP. The JSEA identifies the tasks to be performed, the hazards associated with the tasks, and the procedures/provisions used to eliminate, or minimize the hazards. The JSA will be reviewed with the site crew before the tasks begin on site. The JSA will be modified or changed if and when tasks and hazards change. The modified JSA will be reviewed with the site crews as a new JSA.

PROJECT DESCRIPTION	
Project Name: Carson LNAPL - Refinery O&M	Project No.: Multiple
Subcontractor(s): No subcontractors will be utilized for this project. Note: All subcontractors must have approved Subcontractor Safety Qualifications in place. For information on SQF status, see the Project Cost Accountant, or call Tina McHugh in the AECOM Monroeville office at (412) 380-0140.	
Schedule: <ul style="list-style-type: none"> • Annual. • Work for 2009 is scheduled to begin on #####, 2009. 	

WASTE MANAGEMENT PLAN				
Waste Types and Description:	Solid: <input type="checkbox"/>	Sludge: <input type="checkbox"/>	Liquid: <input type="checkbox"/>	LNAPL: <input type="checkbox"/>
Waste Management Plan:				
None	No waste will be generated by this project.			

POTENTIAL CHEMICAL HAZARDS	
Chemicals to Be Used	MSDS Available On-Site
<input checked="" type="checkbox"/> Acids (HCl, H ₂ SO ₄ , or HNO ₃)	<input checked="" type="checkbox"/>
<input type="checkbox"/> Alcohols (Methanol or Isopropyl alcohol)	<input type="checkbox"/>
<input type="checkbox"/> Gasoline	<input type="checkbox"/>
<input type="checkbox"/> Diesel Fuel	<input type="checkbox"/>
<input checked="" type="checkbox"/> Detergents (Liquinox, Simple Green)	<input checked="" type="checkbox"/>
<input type="checkbox"/> Lubricants/Oils	<input type="checkbox"/>
<input type="checkbox"/> Calibration Solutions/Gases	<input type="checkbox"/>
<input checked="" type="checkbox"/> Dry Chemical Fire Extinguisher: Powder	<input checked="" type="checkbox"/>
<input type="checkbox"/> Other (list):	<input type="checkbox"/>

Note: Updated MSDS binder will be assigned to each member of the field team and should always accompany this HASP.

CHEMICAL HAZARD DATA

Chemical of Concern for Task	Chemical Name	Skin Absorbption. Hazard (Y/N)	TWA			ACGIH STEL	IDLH	Routes of Exposure
			NIOSH REL	OSHA PEL	ACGIH TLV			
<input type="checkbox"/>	PAHs	Yes	0.1 mg/m ³	0.05 mg/m ³	0.2 mg/m ³	NA	80 mg/m ³	I, C
<input type="checkbox"/>	Diesel Fuel	Yes	NA	NA	15 ppm	NA	80 mg/m ³	I, G, C
<input type="checkbox"/>	Gasoline	No	NA	NA	300 ppm	500 ppm	NA	I, S, G, C
<input type="checkbox"/>	Benzene	Yes	0.1 ppm	1.0 ppm	0.5 ppm	2.5 ppm	500 ppm	I, S, G, C
<input type="checkbox"/>	Toluene	No	100 ppm	200 ppm	50 ppm	NA	500 ppm	I, S, G, C
<input type="checkbox"/>	Ethylbenzene	No	100 ppm	100 ppm	100 ppm	125 ppm	800 ppm	I, G, C
<input type="checkbox"/>	Xylenes, Total	Yes	100 ppm	100 ppm	100 ppm	150 ppm	NA	I, S, G, C
<input type="checkbox"/>	MTBE	Yes	NA	100 ppm	100 ppm	150 ppm	NA	I, S, G, C
<input type="checkbox"/>	Carbon Monoxide	No	35 ppm	50 ppm	25 ppm	NA	NA	I
<input type="checkbox"/>	Hydrogen Sulfide	No	10 ppm Ceiling = 10 min max	20 ppm (ceiling) 50 ppm (10 min max)	10 ppm	15 ppm (ACGIH)	100 ppm	I, C
<input type="checkbox"/>	Lead (inorganic)	No	0.01 mg/m ³	0.05 mg/m ³	0.05 mg/m ³	NA	100 mg/m ³	I, G, C
<input type="checkbox"/>	Other (list):	No	NE	NE	NE	NE	NE	
<input type="checkbox"/>	Other (list): Butane	No	800 ppm	NE	800 ppm	NE	NE	I, S, G, C

TWA = Time-Weighted Average
 STEL = Short Term Exposure Limit

IDLH = Immediately Dangerous To Life or Health
 REL = Recommended Exposure Limit
 OSHA = Occupational Safety and Health Administration
 PEL = Permissible Exposure Limit
 ACGIH = American Conference of Governmental Industrial Hygienists

TLV = Threshold Limit Value
 Routes of exposure: I = inhalation, S = skin absorption, G = ingestion, C = skin contact
 mg/m³ = milligrams per cubic meter
 NA = not applicable
 ppm = parts per million
 NIOSH = National Institute for Occupational Safety and Health
 * = See JSEA for handling instructions.

SAFE WORK PROCEDURE SUMMARY

Potential Hazards Associated with Task	Pertinent Section of AECOM HSEMP
<input checked="" type="checkbox"/> Incident Reporting and Notification	Section 7
<input checked="" type="checkbox"/> Site Control	Section 5
<input type="checkbox"/> Traffic Control	Section 15
<input checked="" type="checkbox"/> PPE Selection	Section 3
<input checked="" type="checkbox"/> Decontamination	Section 6
<input checked="" type="checkbox"/> Emergency Response and Evacuation	Section 7
<input type="checkbox"/> Drum Handling/Sampling	Section 8
<input type="checkbox"/> Excavations and Trenching	Section 9
<input type="checkbox"/> Confined Space Entry	Section 10
<input type="checkbox"/> Lockout/Tagout	Section 11
<input type="checkbox"/> Fall Protection	Section 12
<input type="checkbox"/> Drilling Safety	Section 13
<input type="checkbox"/> Work Near Railroads	Section 14
<input checked="" type="checkbox"/> Preventing Heat/Cold Stress	Appendix L and M
<input type="checkbox"/> Obtaining Permits	Section 5
<input checked="" type="checkbox"/> Chemical Hazard Information	Section 2.4

Note: Check each procedure applicable to work and ensure the work conducted in accordance with the pertinent procedure provided in the AECOM HSEMP.

PERSONAL PROTECTIVE EQUIPMENT FOR TASK

MINIMUM LEVEL OF PROTECTION REQUIRED FOR EACH STEP IN THE TASK	
Step	Level of Protection
Entering/exiting the vehicle at each sample location	Level D (Safety glasses, steel-toed boots), traffic vests; Have chemical-resistant gloves and work gloves available
Loading/unloading equipment and sample bottles from the vehicle	Level D, traffic vests, work gloves
Sample sediment from bridges	Level D, traffic vests, chemical-resistant gloves, work gloves

AIR MONITORING PROGRAM

Monitoring Parameters

- No Air Monitoring Required
- Organic Vapors
- Hydrogen Sulfide
- Combustible Gases
- Oxygen
- Carbon Monoxide
- Dust
- Other (list):

Personal Sampling

No Air Monitoring Required

DECONTAMINATION

All equipment contacting potentially contaminated materials will require proper disposal, decontamination with detergent (soap, Alconox, or Liquinox) and water.

DECONTAMINATION PROCEDURES

Items to Decon	Decon Method	Detergent/Solution	Waste Management	
			Solid	Liquid
Skin contact of sample preservatives	Wash with soap and water	Simple Green or Alconox	N/A	N/A

EXCLUSION ZONE

Minimum Size: To be determined by the HSSE Manager and/or Project Manager. The use of traffic cones and/or flagging is encouraged to isolate the work area. Be aware of unauthorized individuals entering the exclusion zone during work activities.

PERMITS REQUIRED

<input checked="" type="checkbox"/>	Flood Control District Permit
-------------------------------------	-------------------------------

ATTACHMENTS TO THIS HASP

Attached (check if yes)	Project Instruction Appendix:	Title/Contents
<input checked="" type="checkbox"/>	A	Hospital Route Directions
<input checked="" type="checkbox"/>	A	Completed Job Safety and Environmental Analysis
<input checked="" type="checkbox"/>	Email	Pertinent Field Forms


PREPARED BY:

Michele Woods

Date: 8/25/09


APPROVALS:

Michele Woods (Project Manager)

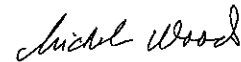


Date: 8/27/09

Galen Cooter (HSSE Manager)

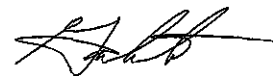

Date: 8/27/09

Appendix E
Example Chain of Custody Form

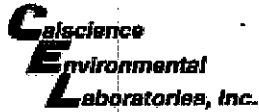

7440 LINCOLN WAY
 GARDEN GROVE, CA 92841-1432
 TEL: (714) 895-5494 . FAX: (714) 894-7501

CHAIN OF CUSTODY RECORD

DATE: _____
 PAGE: 1 OF 1

LABORATORY CLIENT: AECOM						CLIENT PROJECT NAME / NUMBER: Sediment Sampling										P.O. NO.:																																																																																																																																																																																																																																																																																																	
ADDRESS: 3995 Via Oro Avenue						PROJECT CONTACT: Jennifer Bell										QUOTE NO.:																																																																																																																																																																																																																																																																																																	
CITY: Long Beach, CA 90810						SAMPLER(S): (SIGNATURE)										LAB USE ONLY																																																																																																																																																																																																																																																																																																	
TEL: 562/420-2933		FAX: 562/420-2915		E-MAIL:		REQUESTED ANALYSIS																																																																																																																																																																																																																																																																																																											
TURNAROUND TIME <input type="checkbox"/> SAME DAY <input type="checkbox"/> 24 HR <input type="checkbox"/> 48 HR <input type="checkbox"/> 72 HR <input type="checkbox"/> 5 DAYS <input type="checkbox"/> 10 DAYS						<table border="1" style="width:100%; border-collapse: collapse; text-align: center;"> <tr> <th>Chronic Bioassay (E. Estuarius)</th> <th>Sediment Grain Size ASTM D4464M</th> <th>2,4'-DDT EPA 8081A</th> <th>2,4'-DDD EPA 8081A</th> <th>2,4'-DDE EPA 8081A</th> <th>4,4'-DDT EPA 8081A</th> <th>4,4'-DDD EPA 8081A</th> <th>4,4'-DDE EPA 8081A</th> <th>PCBs EPA 8082</th> <th>TPH Carbon Chain (C7-C44)</th> <th>Total Organic Carbon EPA 9060</th> <th>Metals EPA 6010</th> <th>PNAs EPA 8270</th> <th></th> <th></th> </tr> <tr> <td></td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> </table>														Chronic Bioassay (E. Estuarius)	Sediment Grain Size ASTM D4464M	2,4'-DDT EPA 8081A	2,4'-DDD EPA 8081A	2,4'-DDE EPA 8081A	4,4'-DDT EPA 8081A	4,4'-DDD EPA 8081A	4,4'-DDE EPA 8081A	PCBs EPA 8082	TPH Carbon Chain (C7-C44)	Total Organic Carbon EPA 9060	Metals EPA 6010	PNAs EPA 8270				X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X			X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																										
Chronic Bioassay (E. Estuarius)	Sediment Grain Size ASTM D4464M	2,4'-DDT EPA 8081A	2,4'-DDD EPA 8081A	2,4'-DDE EPA 8081A	4,4'-DDT EPA 8081A															4,4'-DDD EPA 8081A	4,4'-DDE EPA 8081A	PCBs EPA 8082	TPH Carbon Chain (C7-C44)	Total Organic Carbon EPA 9060	Metals EPA 6010	PNAs EPA 8270																																																																																																																																																																																																																																																																																							
	X	X	X	X	X															X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																							
X	X	X	X	X	X															X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																							
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																																					
SPECIAL REQUIREMENTS (ADDITIONAL COSTS MAY APPLY) <input type="checkbox"/> RWQCB REPORTING <input type="checkbox"/> ARCHIVE SAMPLES UNTIL ___/___/___ <input checked="" type="checkbox"/>						<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th>LAB USE ONLY</th> <th>SAMPLE ID</th> <th>LOCATION/ DESCRIPTION</th> <th colspan="2">SAMPLING</th> <th>MAT- RIX</th> <th>NO. OF CONT.</th> <th>Chronic Bioassay (E. Estuarius)</th> <th>Sediment Grain Size ASTM D4464M</th> <th>2,4'-DDT EPA 8081A</th> <th>2,4'-DDD EPA 8081A</th> <th>2,4'-DDE EPA 8081A</th> <th>4,4'-DDT EPA 8081A</th> <th>4,4'-DDD EPA 8081A</th> <th>4,4'-DDE EPA 8081A</th> <th>PCBs EPA 8082</th> <th>TPH Carbon Chain (C7-C44)</th> <th>Total Organic Carbon EPA 9060</th> <th>Metals EPA 6010</th> <th>PNAs EPA 8270</th> <th></th> <th></th> </tr> <tr> <td></td> <td>R8-MMDDYY</td> <td></td> <td>DATE</td> <td>TIME</td> <td>SO</td> <td>4</td> <td></td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R7-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R6-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R5-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R4-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R3-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R2-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td> <td>R1-MMDDYY</td> <td></td> <td></td><td></td><td>SO</td><td>4</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td></td><td></td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>														LAB USE ONLY	SAMPLE ID	LOCATION/ DESCRIPTION	SAMPLING		MAT- RIX	NO. OF CONT.	Chronic Bioassay (E. Estuarius)	Sediment Grain Size ASTM D4464M	2,4'-DDT EPA 8081A	2,4'-DDD EPA 8081A	2,4'-DDE EPA 8081A	4,4'-DDT EPA 8081A	4,4'-DDD EPA 8081A	4,4'-DDE EPA 8081A	PCBs EPA 8082	TPH Carbon Chain (C7-C44)	Total Organic Carbon EPA 9060	Metals EPA 6010	PNAs EPA 8270				R8-MMDDYY		DATE	TIME	SO	4		X	X	X	X	X	X	X	X	X	X	X	X				R7-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X				R6-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X				R5-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X				R4-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X				R3-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X				R2-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X				R1-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																										
LAB USE ONLY	SAMPLE ID	LOCATION/ DESCRIPTION	SAMPLING		MAT- RIX															NO. OF CONT.	Chronic Bioassay (E. Estuarius)	Sediment Grain Size ASTM D4464M	2,4'-DDT EPA 8081A	2,4'-DDD EPA 8081A	2,4'-DDE EPA 8081A	4,4'-DDT EPA 8081A	4,4'-DDD EPA 8081A	4,4'-DDE EPA 8081A	PCBs EPA 8082	TPH Carbon Chain (C7-C44)	Total Organic Carbon EPA 9060	Metals EPA 6010	PNAs EPA 8270																																																																																																																																																																																																																																																																																
	R8-MMDDYY		DATE	TIME	SO	4		X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R7-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R6-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R5-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R4-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R3-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R2-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
	R1-MMDDYY				SO	4	X	X	X	X	X	X	X	X	X	X	X	X	X																																																																																																																																																																																																																																																																																														
SPECIAL INSTRUCTIONS <input type="checkbox"/> Sediment Grain Size to PT <input type="checkbox"/> Chronic Bioassay to Nautilus Environmental DDT, DDD, and DDE Isomers (2,4' and 4,4') and PCBs to Lancaster Metals: 6010 (Cu,Cd,Cr,Pb,Ni,Zn)						<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td colspan="2">Relinquished by: (Signature)</td> <td colspan="10">Received by: (Signature)</td> <td>Date:</td> <td>Time:</td> </tr> <tr> <td colspan="2">Relinquished by: (Signature)</td> <td colspan="10">Received by: (Signature)</td> <td>Date:</td> <td>Time:</td> </tr> <tr> <td colspan="2">Relinquished by: (Signature)</td> <td colspan="10">Received by: (Signature)</td> <td>Date:</td> <td>Time:</td> </tr> </table>														Relinquished by: (Signature)		Received by: (Signature)										Date:	Time:	Relinquished by: (Signature)		Received by: (Signature)										Date:	Time:	Relinquished by: (Signature)		Received by: (Signature)										Date:	Time:																																																																																																																																																																																																																																																				
Relinquished by: (Signature)		Received by: (Signature)																		Date:	Time:																																																																																																																																																																																																																																																																																												
Relinquished by: (Signature)		Received by: (Signature)										Date:	Time:																																																																																																																																																																																																																																																																																																				
Relinquished by: (Signature)		Received by: (Signature)										Date:	Time:																																																																																																																																																																																																																																																																																																				
<p>Do not analyze R8-MMDDYY for chronic toxicity.</p>																																																																																																																																																																																																																																																																																																																	

Appendix F
SOP 120
Decontamination

RETEC Standard Operating Procedure

(SOP) 120

Decontamination

1.0 Purpose and Applicability

The RETEC Group, Inc. (RETEC) SOP 120 describes the methods to be used for the decontamination of items which may become contaminated during field operations. Decontamination is performed as a quality assurance measure and as a safety precaution. It prevents cross-contamination between samples and also helps maintain a clean working environment. Equipment requiring decontamination may include hand tools, monitoring and testing equipment, personal protective equipment, or heavy equipment (e.g., loaders, backhoes, drill rigs, etc.).

Decontamination is achieved mainly by rinsing with liquids which may include: soap and/or detergent solutions, tap water, distilled water, and methanol. Equipment may be allowed to air dry after being cleaned or may be wiped dry with paper towels or chemical-free cloths.

All sampling equipment will be decontaminated prior to use and between each sample collection point. Waste products produced by the decontamination procedures such as rinse liquids, solids, rags, gloves, etc. will be collected and disposed of properly based on the nature of contamination and site protocols. Any materials and equipment which will be reused must be decontaminated or properly protected before being taken off site.

Specific project requirements as described in an approved Work Plan, Sampling Plan, Quality Assurance Project Plan, or Health & Safety Plan will take precedence over the procedures described in this document.

2.0 Responsibilities

It is the responsibility of the field sampling coordinator to ensure that proper decontamination procedures are followed and that all waste materials produced by decontamination are properly managed. It is the responsibility of any subcontractors (e.g., drilling or sampling contractors) to follow the proper designated decontamination procedures that are stated in their contracts and outlined in the project health and safety plan. It is the responsibility of all personnel involved with sample collection or decontamination to maintain a clean working

environment and to ensure that no contaminants are negligently introduced into the environment.

3.0 Supporting Materials

The following materials should be on hand in sufficient quantity to ensure that proper decontamination methods and procedures may be followed:

- Cleaning liquids and dispensers (soap and/or detergent solutions, tap water, distilled water, methanol, or isopropyl, etc.)
- Personal safety gear, as defined in the project health and safety plan
- Paper towels or chemical-free cloths
- Disposable gloves
- Waste-storage containers (e.g., drums, boxes, plastic bags)
- Drum labels, if necessary
- Cleaning containers (e.g., plastic and/or galvanized steel pans or buckets)
- Cleaning brushes
- Plastic sheeting

4.0 Methods and Procedures

The extent of known contamination will determine the degree of decontamination required. When the extent of contamination cannot be readily determined, cleaning should be done according to the assumption that the equipment is highly contaminated.

Standard operating procedures listed below describe the method for full field decontamination. If different technical procedures are required for a specific project, they will be spelled out in the project plans.

Such variations in decontamination may include all or an expanded scope of these decontamination procedures:

- Remove gross contamination from the equipment by brushing and then rinse with tap water.
- Wash with detergent or soap solution (e.g., Alconox and tap water).

- Rinse with tap water.
- Rinse with methanol or isopropyl.
- Rinse with distilled water.
- Repeat entire procedure or any parts of the procedure as necessary.
- After decontamination procedure is completed, avoid placing equipment directly on ground surface to avoid re-contamination.

Downhole drilling equipment, such as augers, split spoons, Shelby tubes, and sandlines, will be decontaminated with pressurized hot water or steam wash, followed by a fresh water rinse. No additional decontamination procedures will be required if the equipment appears to be visually clean. If contamination is visible after hot water/steam cleaning, then a detergent wash solution with brushes (if necessary) will be used.

5.0 Quality Assurance/Quality Control

To assess the adequacy of decontamination procedures, rinsate blanks should be collected and analyzed for the same parameters as the field samples. Specific number of blanks will be defined in the project specific sampling plan. In general, one rinsate blank will be collected per ten samples.

6.0 Documentation

Field notes describing procedures used to decontaminate equipment/personnel and for collection of the rinsate blanks will be documented by on-site personnel. Field notes will be retained in the project files.

Appendix G
SOP 110
Packing and Shipping

RETEC Standard Operating Procedure 110 (SOP)

Packing and Shipping Samples

1.0 Purpose And Applicability

The RETEC Group, Inc. (RETEC) Standard Operating Procedure (SOP) 110 describes proper packaging methods and shipment of samples to minimize the potential for sample breakage, leakage, or cross contamination, and provide a clear record of sample custody from collection to analysis. Specific project requirements as described in an approved Work Plan, Sampling Plan, Quality Assurance Project Plan, or Health & Safety Plan will take precedence over the procedures described in this document.

The EPA RCRA regulations (40 CFR Section 261.4 [d]) specify that samples of solid waste, water, soil, or air collected for the purpose of testing are exempt from regulation when any of the following conditions apply:

- Samples are being transported to a laboratory for analysis
- Samples are being transported to the collector from the laboratory after analysis
- Samples are being stored:
 - By the collector prior to shipment for analyses
 - By the analytical laboratory prior to analyses
 - By the analytical laboratory after testing but prior to return of sample to the collector or pending the conclusion of a court case

Samples collected by RETEC are generally qualified for these exemptions. RETEC SOP 110 deals only with these sample types.

2.0 Responsibilities

The field sampling coordinator is responsible for the enactment and completion of the chain-of-custody, and the packaging and shipping requirements outlined here and in project-specific sampling plans.

3.0 Supporting Materials

The following materials must be on hand and in sufficient quantity to ensure that proper packing and shipping methods and procedures may be followed:

- Chain-of-custody forms and tape
- Sample container labels
- Coolers or similar shipping containers
- Duct tape or transparent packaging tape
- Zip-lock type bags
- Protective wrapping and packaging materials
- Ice or cold packs
- Shipping labels for the exterior of the ice chest
- Transportation carrier forms (Federal Express, Airborne, etc.)

4.0 Methods And Procedures

All samples must be packaged so that they do not leak, break, vaporize, or cause cross-contamination of other samples. Waste samples and environmental samples (e.g., groundwater, soil, etc.) should not be placed in the same container. Each individual sample must be properly labeled and identified. Each shipping container must be accompanied by a chain-of-custody record. When refrigeration is required for sample preservation, samples must be kept cool during the time between collection and final packaging.

All samples must be clearly identified immediately upon collection. Each sample bottle label (Figure 1) will include the following information:

- Client or project name, or unique identifier, if confidential
- A unique sample description
- Sample collection date and time
- Sampler's name or initials
- Indication of filtering or addition of preservative, if applicable
- Analyses to be performed

After collection, identification, and preservation (if necessary), the samples will be maintained under chain-of-custody procedures as described below.

4.1 Chain-Of-Custody

A sample is considered to be under custody if it is in one's possession, view, or in a designated secure area. Transfers of sample custody must be documented by chain-of-custody forms (Figure 2). The chain-of-custody record will include, at a minimum, the following information:

- Client or project name, or unique identifier, if confidential
- Sample collector's name
- Company's (RETEC) mailing address and telephone number
- Designated recipient of data (name and telephone number)
- Analytical laboratory's name and city
- Description of each sample (i.e., unique identifier and matrix)
- Date and time of collection
- Quantity of each sample or number of containers
- Type of analysis required
- Date and method of shipment

Additional information may include type of sample containers, shipping identification air bill numbers, etc.

When transferring custody, both the individual(s) relinquishing custody of samples and the individual(s) receiving custody of samples will sign, date, and note the time on the form. If samples are to leave the collector's possession for shipment to the laboratory, the subsequent packaging procedures will be followed.

4.2 Packing for Shipment

To prepare a cooler for shipment, the sample bottles should be inventoried and logged on the chain-of-custody form. At least one layer of protective material should be placed in the bottom of the container. As each sample bottle is logged on the chain-of-custody form, it should be wrapped with protective material (e.g., bubble wrap, matting, plastic gridding, or similar material) to prevent breakage. Each sample bottle should be placed upright in the shipping container. Each sample bottle cap should be checked during wrapping and tightened if needed. Avoid over tightening, which may cause bottle cap to crack and allow leakage. Additional packaging material such as bubble wrap or styrofoam pellets should be spread throughout the voids between the sample bottles.

Most samples require refrigeration as a minimum preservative. Reusable cold packs or ice placed in heavy duty zip-lock type bags should be distributed over the top of the samples. Two

or more cold packs or bags should be used. Additional packing material should then be placed to fill the balance of the cooler or container.

Place the original completed chain-of-custody record in a zip-lock type plastic bag and place the bag on the top of the contents within the cooler or shipping container. Alternatively, the bag may be taped to the underside of the container lid. Retain a copy of the chain-of-custody record with the field records.

Close the top or lid of the cooler or shipping container and rotate/shake the container to verify that the contents are packed so that they do not move. Add additional packaging if needed and reclose. Place signed and dated chain-of-custody seal (Figure 3) at two different locations (front and back) on the cooler or container lid and overlap with transparent packaging tape. The chain-of-custody tape should be placed on the container in such a way that opening the container will destroy the tape. Packaging tape should encircle each end of the cooler at the hinges.

Sample shipment should be sent via an overnight express service that can guarantee 24-hour delivery. Retain copies of all shipment records as provided by the shipper.

5.0 Quality Assurance/Quality Control

Recipient of sample container should advise shipper and/or transporter immediately of any damage to container, breakage of contents, or evidence of tampering.

6.0 Documentation

The documentation for support of proper packaging and shipment will include RETEC or the laboratory chain-of-custody records and transportation carrier's airbill or delivery invoice. All documentation will be retained in the project files.

Appendix H
Field Activity Daily Log Sheet

Field Activity Daily Log

Project _____
 Job No. _____
 Day & Date _____

Completed By _____
 Approved By _____
 Sheet _____ of _____

Field Activity Subject:	
Time	Description of Daily Activities and Events:
Visitors On Site:	Changes from Plans and Specifications, and other special orders and important decisions:
Weather Conditions:	Important Telephone Calls:
Personnel on Site	

*Form Version: 2
 Reviewed by: Greg Jirak on 11/17/04
 Last Revision Date: 3/18/02
 Action Assistant\Field Forms\Field Activity Daily Log*

QUALITY SYSTEMS MANUAL FOR ENVIRONMENTAL ANALYTICAL SERVICES



**Version 5.3
July 2010**

Prepared By


**Calscience Environmental Laboratories, Inc.
7440 Lincoln Way
Garden Grove, CA 92841-1427
Telephone: (714) 895-5494
Facsimile: (714) 894-7501**

Based On


**National Environmental Laboratory Accreditation Program (NELAP)
Chapter 5 (Quality Systems)
NELAC Standard Effective July 01, 2004**



Larry Lem
QUALITY ASSURANCE MANAGER



Virginia Huang
TECHNICAL DIRECTOR



Steven L. Lane
LABORATORY DIRECTOR

TABLE OF CONTENTS
QUALITY SYSTEMS MANUAL

PREFACE TO THE QUALITY SYSTEMS MANUAL	4
ACROYNM LIST	5
QUALITY SYSTEMS	6
1.0 SCOPE	6
2.0 REFERENCES	6
3.0 DEFINITIONS	6
4.0 ORGANIZATION AND MANAGEMENT	7
4.1 Legal Definition of Laboratory	7
4.2 Organization	7
5.0 QUALITY SYSTEM – ESTABLISHMENT, AUDITS, ESSENTIAL QUALITY CONTROLS, AND DATA VERIFICATION	8
5.1 Establishment	8
5.2 Quality Systems Manual (QSM) Elements	9
a) Policy Statement	9
b) Organization and Management Structure	10
c) Relationships	10
d) Records Procedures	10
e) Job Descriptions, Roles and Responsibilities	13
f) Approved Siganatories	21
g) Policies on Traceability of Measurements	21
h) List of Methods	21
i) Review of New Work	21
j) Calibration Procedures	21
k) Sample Receiving and Handling	21
l) Major Equipment	22
m) Calibration, Verification and Maintenance of Equipment	22
n) Verification Practices	22
o) Corrective Actions	23
p) Permitting Exceptions and Departures	24
q) Complaints	24
r) Confidentialty / Proprietary Rights	24
s) Audits and Data Review	24
t) Personnel Experience and Training	25
u) Ethics Policy Statement	25
v) Reporting of Results	27
w) Table of Contents, References, Glossaries and Appendices	29
5.3 Audits	29
5.3.1 Internal Audits	29
5.3.2 Managerial Review	29
5.3.3 Audit Review	29
5.3.4 Performance Audits	30
5.3.5 Corrective Actions	30
5.4 Essential Quality Control Procedures	30
6.0 PERSONNEL	31
6.1 General Requirements for Laboratory Staff	31
6.2 Laboratory Management Responsibilities	32
6.3 Records	33
7.0 PHYSICAL FACILITIES – ACCOMMODATION AND ENVIRONMENT	33
7.1 Environment	33
7.2 Work Areas	33
8.0 EQUIPMENT AND REFERENCE MATERIALS	34
9.0 MEASUREMENT TRACEABILITY AND CALIBRATION	35

9.1	General Requirements	35
9.2	Traceability of Calibration	35
9.3	Reference Standards	35
9.4	Calibration	35
	9.4.1 Support Equipment.....	36
	9.4.2 Instrument Calibration	36
10.0	TEST METHODS AND STANDARD OPERATING PROCEDURES	38
10.1	Methods Documentation	38
	10.1.1 Standard Operating Procedures (SOPs) Administrative	38
	10.1.2 Standard Operating Procedures (SOPs) Analytical	39
10.2	Exceptionally Permitting Departures from Documented Policies / Procedures	40
10.3	Test Methods	41
10.4	Demonstration of Capability	41
10.5	Sample Aliquots	41
10.6	Data Verification	41
10.7	Documentation and Labeling of Standards and Reagents	41
10.8	Computers and Electronic Data Related Requirements	41
11.0	SAMPLE HANDLING, SAMPLE ACCEPTANCE POLICY AND SAMPLE RECEIPT	42
11.1	Sample Tracking	42
11.2	Sample Acceptance Policy	42
11.3	Sample Receipt Protocols.....	43
11.4	Storage Conditions	44
11.5	Sample Disposal	45
12.0	RECORDS	45
12.1	Record Keeping System and Design	45
12.2	Records Management and Storage	46
12.3	Laboratory Sample Tracking.....	46
	12.3.1 Sample Handling	46
	12.3.2 Laboratory Support Activities.....	47
	12.3.3 Analytical Records.....	47
	12.3.4 Administrative Records.....	48
13.0	LABORATORY REPORT FORMAT AND CONTENTS	48
14.0	SUBCONTRACTING ANALYTICAL SAMPLES	50
15.0	OUTSIDE SUPPORT SERVICES AND SUPPLIES	50
16.0	INQUIRIES AND COMPLAINTS	50
<u>APPENDIX B - GLOSSARY</u>		54
<u>APPENDIX C - DEMONSTRATION OF CAPABILITY.....</u>		63
C.1	PROCEDURE FOR DEMONSTRATION OF CAPABILITY	63
C.2	CERTIFICATION STATEMENT	64
<u>APPENDIX D - ESSENTIAL QUALITY CONTROL REQUIREMENTS</u>		66
D.1	CHEMICAL TESTING.....	66
	D1.1 Positive and Negative Controls.....	66
	D1.2 Analytical Variability / Reproducibility	67
	D1.3 Method Evaluation	67
	D1.4 Analytical Measurement Uncertainty	67
	D1.5 Detection Limits	69
	D1.6 Data Reduction	70
	D1.7 Quality of Standards and Reagents.....	70
	D1.8 Selectivity	70
	D1.9 Constant and Consistent Test Conditions	71

PREFACE TO THE QUALITY SYSTEMS MANUAL

Purpose

The purpose of this document is to provide implementation guidance on the establishment and management of quality systems for Calscience Environmental Laboratories, Inc and is based on the National Environmental Laboratory Accreditation Conference's (NELAC) Quality System requirements.

Background

To be accredited under the National Environmental Laboratory Accreditation Program (NELAP), laboratories shall have a comprehensive quality system in place, the requirements for which are outlined in NELAP Chapter 5 (Quality Systems).

Project Specific Requirements

Project-specific requirements or regulations may supersede requirements contained in this manual. The laboratory bears the responsibility for meeting all **State requirements**. Nothing in this document relieves the laboratory from complying with contract requirements, or with **Federal, State, and/or local regulations**.

Results and Benefits

- **Standardization of Processes** – Because this manual provides the laboratory with a comprehensive set of requirements that meet the needs of many clients, as well as the NELAP, the laboratory may use it to create a standardized quality system. Ultimately, this standardization saves laboratory resources by establishing one set of consistent requirements for all environmental work. Primarily, the laboratory bears the responsibility for meeting all State requirements as outlined in their respective certification programs.
- **Deterrence of Improper, Unethical, or Illegal Actions** – Improper, unethical, or illegal activities committed by only a few laboratories have implications throughout the industry, with negative impacts on all laboratories. This manual establishes a minimum threshold program for all laboratories to use to deter and detect improper, unethical, or illegal actions.
- **Foundations for the Future** – A standardized approach to quality systems, shared by laboratories and the NELAP, paves the way for the standardization of other processes. For example, this manual might serve as a platform for a standardized strategy for Performance Based Measurement System (PBMS) implementation.

Document Format

This Calscience Environmental Laboratories, Inc. (Calscience) *Quality Systems Manual* (QSM) is designed to implement NELAP Chapter 5 (Quality Systems) and the NELAP Chapter 5 document serves as the primary text for this implementation manual. This Calscience QMS is also a complement to NELAP chapter 5. The section numbering has been changed from that of NELAP Chapter 5 as the manual is meant to be a stand-alone document. The number 5 has been eliminated from all section and subsection headings. However, second-level numbering has been retained to ensure maintenance of a parallel organization to the NELAC Quality Systems requirements. For instance, Section 5.4.2 in NELAP Chapter 5 (referencing Chapter 5 of the NELAC standards) is equivalent to Section 4.2 in this manual. In addition, there is one set of NELAC appendices.

ACROYNM LIST

°C: Degrees Celsius
ANSI/ASQC: American National Standards Institute/American Society for Quality Control
ASTM: American Society for Testing and Materials
CAS: Chemical Abstract Service
CCV: Continuing calibration verification
CFR: Code of Federal Regulations
CLP: Contract Laboratory Program
COC: Chain of custody
CV: Coefficient of variation
DO: Dissolved oxygen
DOC: Demonstration of capability
DQOs: Data quality objectives
EPA: Environmental Protection Agency
g/L: Grams per liter
GC/MS: Gas chromatography/mass spectrometry
ICP-MS: Inductively coupled plasma-mass spectrometer
ICV: Initial calibration verification
ID: Identifier
ISO/IEC: International Standards Organization/International Electrotechnical Commission
LCS: Laboratory control sample
LCSD: Laboratory control sample duplicate
LQMP: Laboratory Quality Management Plan
MDL: Method detection limit
mg/kg: Milligrams per kilogram
MS: Matrix spike
MSD: Matrix spike duplicate
NELAC: National Environmental Laboratory Accreditation Conference
NELAP: National Environmental Laboratory Accreditation Program
NIST: National Institute of Standards and Technology
OSHA: Occupational Safety and Health Administration
PBMS: Performance Based Measurement System
PC: Personal computer
PCBs: Polychlorinated biphenyls
PT: Proficiency testing
QA: Quality assurance
QAD: Quality Assurance Division (EPA)
QAMS: Quality Assurance Management Section
QAPP: Quality Assurance Project Plan
QSM: Quality Systems Manual
QC: Quality control
RL: Reporting limit
RPD: Relative percent difference
RSD: Relative standard deviation
SD: Serial dilutions
SOP: Standard operating procedure
TSS: Total suspended solids
UV: Ultraviolet
VOC: Volatile organic compound

QUALITY SYSTEMS

Quality Systems include all quality assurance (QA) policies and quality control (QC) procedures that are delineated in a Quality Systems Manual (QSM) and followed to ensure and document the quality of the analytical data. Calscience, accredited under the National Environmental Accreditation Program (NELAP), assures implementation of all QA policies and the applicable QC procedures specified in this Manual. The QA policies, which establish essential QC procedures, are applicable to all areas of Calscience, regardless of size and complexity.

The intent of this document is to provide sufficient detail about quality management requirements so that all accrediting authorities evaluate laboratories consistently and uniformly.

The National Environmental Laboratory Accreditation Institute (NELAP) is committed to the use of Performance Based Measurement Systems (PBMS) in environmental testing and provides the foundation for PBMS implementation in these standards. While this standard may not currently satisfy all the anticipated needs of PBMS, NELAC will address future needs within the context of State statutory and regulatory requirements and the finalized EPA implementation plans for PBMS.

Chapter 5 is organized according to the structure of ISO/IEC 17025, 1999. Where deemed necessary, specific areas within this Chapter may contain more information than specified by ISO/IEC 17025.

All items identified in this QSM shall be available for on-site inspection or data audit.

1.0 SCOPE

- a) This QSM sets the general requirements that Calscience must successfully demonstrate to be recognized as competent to perform specific environmental tests.
- b) This QSM includes additional requirements and information for assessing competence or for determining compliance by the organization or accrediting authority that grants approval.

If more stringent standards or requirements are included in a mandated test method or by regulation, the laboratory demonstrates that such requirements are met. If it is not clear which requirements are more stringent, the standard from the method or regulation is to be followed.

- c) Calscience uses this QSM in the development and implementation of its quality systems. Accreditation authorities use this NELAC based standard to assess the competence of environmental laboratories.

2.0 REFERENCES

See Appendix A.

3.0 DEFINITIONS

The relevant definitions from ISO/IEC Guide 2, ANSI/ASQC E-4, 1994, the EPA "Glossary of Quality Assurance Terms and Acronyms," and the *International vocabulary of basic and general terms in metrology (VIM)* are applicable. The most relevant is quoted in Appendix A, Glossary, of Chapter 1 of NELAC, together with further definitions applicable for the purposes of this Standard.

4.0 ORGANIZATION AND MANAGEMENT

4.1 Legal Definition of Laboratory

Calscience is legally definable as evidenced by its business license, and current California Department of Health Services Environmental Laboratory Accreditation Program (CADHS ELAP) certificate. It is organized and operates in such a way that its facilities meet the requirements of the Standard. See the graphical presentations of the Organization and QA responsibility in Figures 1 and 2, respectively.

4.2 Organization

Calscience:

- a) Has a managerial staff with the authority and resources necessary to discharge their duties;
- b) Has processes to ensure that its personnel are free from any commercial, financial and other undue pressure that adversely affect the quality of their work;
- c) Is organized in such a way that confidence in its independence of judgment and integrity is maintained at all times;
- d) Specifies and documents the responsibility, authority, and interrelationship of all personnel who manage, perform or verify work affecting the quality of calibrations and tests;

Such documentation includes:

- 1) A clear description of the lines of responsibility in the laboratory, and is proportioned such that adequate supervision is ensured, and
 - 2) Job descriptions for all positions.
- e) Provides supervision by persons familiar with the calibration or test methods and procedures, the objective of the calibration or test, and the assessment of the results.

The ratio of supervisory to non-supervisory personnel ensures adequate supervision and adherence to laboratory procedures and accepted techniques.

- f) Has a technical director who has overall responsibility for the technical operation of Calscience.

The technical director certifies that personnel who perform the tests for which the laboratory is accredited have the appropriate educational and/or technical background. Such certification is documented.

The technical director meets the requirements specified in the Accreditation Process. (See NELAC Section 4.1.1.1.)

- g) Has a quality assurance manager who has responsibility for the quality system and its implementation.

The quality assurance officer has direct access to the technical director and to the highest level of management at which decisions are made regarding laboratory policy or resources.

The quality assurance manager (and/or his/her designees):

- 1) Serves as the focal point for QA/QC activities, and is responsible for the oversight and/or review of quality control data;
 - 2) Has functions independent from laboratory operations for which she/he has quality assurance oversight;
 - 3) Is able to evaluate data objectively and perform assessments without outside (e.g., managerial) influence;
 - 4) Has documented training and/or experience in QA/QC procedures and is knowledgeable in the quality system, as defined under NELAC;
 - 5) Has a general knowledge of the analytical test methods for which data review is performed;
 - 6) Arranges for and conduct internal audits as per Calscience QSM section 5.3 annually; and
 - 7) Notifies Calscience management of deficiencies in the quality system and monitors corrective action.
- h) Nominates, by way of the “Alternates List,” deputies in case of absence of the technical director and/or the quality assurance officer;
- i) Calscience makes every effort to ensure the protection of its clients' information as confidential and proprietary.
- ii) Calscience is sensitive to the fact that much of the analytical work performed for clientele may be subject to litigatory processes. Calscience, therefore, holds all information in strict confidence with laboratory release only to the client.
 - iii) Information released to entities other than the client is performed only upon written request from the client.
 - iv) Due to the investigative nature of most site assessments, analytical information may become available to regulatory agencies or other evaluating entities during site assessment of the laboratory for the specific purpose of attaining laboratory certifications, accreditations, or evaluation of laboratory qualification for future work. During these occurrences, the laboratory will make every effort to maintain the confidence of client specific information.
- j) For purposes of qualifying for and maintaining accreditation, participates in a proficiency test program as outlined in Chapter 2 of NELAC. Results of Calscience’s performance in rounds of proficiency testing are available by request.

5.0 QUALITY SYSTEM – ESTABLISHMENT, AUDITS, ESSENTIAL QUALITY CONTROLS, AND DATA VERIFICATION

5.1 Establishment

Calscience establishes and maintains quality systems based on the required elements contained in this Manual and appropriate to the type, range and volume of environmental testing activities it undertakes.

- a) The elements of this quality system are documented in this quality manual.
- b) The quality documentation is available for use by all laboratory personnel.
- c) The laboratory defines and documents its policies and objectives for, and its commitment to accepted laboratory practices and quality of testing services.

- d) The laboratory management ensures that these policies and objectives are documented in the quality manual and are communicated to, understood and implemented by all laboratory personnel concerned.
 - i. All staff members are issued a copy of the quality manual at the commencement of work at Calscience. Employees read and endorse the following statement when they receive their quality manual: “By signature below, I acknowledge that I have received a copy of Revision [number] of Calscience’s Quality Assurance Program Manual dated [effective date of the subject manual]. Furthermore, I agree to read and abide by the policies contained therein.”
 - ii. A controlled copy of the quality manual is also available at the designated data reduction areas.
- e) The quality manual is maintained current under the responsibility of the quality assurance officer. This manual is reviewed on an annual basis or more frequently, and revised as necessary. The review process begins in January of each year, and concludes on/before March of the same year. Where no revision is required, the manual is reissued in its entirety and review is scheduled for January of the following year.

5.2 Quality Systems Manual (QSM) Elements

This quality systems manual and related quality documentation state Calscience's policies and operational procedures established in order to meet the requirements of this Standard.

This Manual lists on the title page: a document title; the laboratory's full name and address; the name, address, and telephone number of individuals responsible for the laboratory; the name of the quality assurance manager; the identification of all major organizational units that are covered by this quality manual and the effective date of the version.

This quality manual and related quality documentation also contains:

- a) A quality **policy statement**, including objectives and commitments, by top management;
 - i. Calscience Environmental Laboratories, Inc. (Calscience) is committed to providing the highest quality environmental analytical services available. To ensure the production of scientifically sound, legally defensible data of known and proven quality, an extensive Quality Assurance program has been developed and implemented. This document, Calscience’s Quality Systems Manual for Environmental Analytical Services, presents an overview of the essential elements of our Quality Assurance program. Calscience has modeled this systems manual after EPA guidelines as outlined in “Guidance for Quality Assurance Project Plans (EPA QA/G-5)”, Office of Monitoring Systems and Quality Assurance, Office of Research and Development, U.S. EPA, EPA/240-R-02/009 December 2002. Calscience’s QA Program is closely monitored at the Corporate, Divisional, and Group levels, and relies on clearly defined objectives, well-documented procedures, a comprehensive quality assurance/quality control system, and management support for its effectiveness.
 - ii. This QA Program Systems Manual is designed to control and monitor the quality of data generated at Calscience. The essential elements described herein are geared toward generating data that is in compliance with federal regulatory requirements specified under the Clean Water Act, the Safe Drinking Water Act, the Resource Conservation and Recovery Act, the Comprehensive Environmental Response, Compensation, and Liability Act, and applicable amendments, and state and DoD/DoE equivalents. Although the quality control requirements of these various programs are not completely consistent, each of the programs base data quality

judgments on the following three types of information, the operational elements of each being described elsewhere in this manual.

- ⇒ Data which indicates the overall qualifications of the laboratory to perform environmental analyses;
 - ⇒ Data which measures the laboratory's daily performance using a specific method; and
 - ⇒ Data which measures the effect of a specific matrix on the performance of a method.
- iii. It is important to note that the QA guidelines presented herein will always apply unless adherence to specific Quality Assurance Project Plans (QAPPs) or client and/or regulatory agency specific requirements are directed. In these cases, the elements contained within specified direction or documentation shall supersede that contained herein.
- iv. This manual is a living document subject to periodic modifications to comply with regulatory changes and technological advancements. All previous versions of this document are obsolete. Users are urged to contact Calscience to verify the current revision of this document.
- b) The organization and management structure of the laboratory, its place in any parent organization and relevant organizational charts;
- See Figure 1 Organizational Chart, and Figure 2 QA Responsibility Chart.
- c) The relationship between management, technical operations, support services and the quality system;
- d) Procedures to ensure that all records required under the NELAP are retained, as well as procedures for control and maintenance of documentation through a document control system which ensures that all standard operating procedures, manuals, or documents clearly indicate the time period during which the procedure or document was in force;
- i. Ensuring a high quality work product in the environmental laboratory not only requires adherence to the quality issues discussed in the previous sections, but also requires the ability to effectively archive, restore, and protect the records that are generated.
 - ii. Procedures are in place to ensure that all records are retained. In addition, a documentation control system is employed to clearly indicate the time period during which a standard operating procedure, manual, or document was in force. These procedures are outlined in the laboratory standard operating procedure SOP-T002.
 - iii. All laboratory logbooks, instrument response printouts, completed analytical reports, chain-of-custodies, and laboratory support documentation are stored for a minimum of five years. Project specific data are stored in sequentially numbered project files and include copies of the applicable laboratory logbooks, instrument response printouts, completed analytical reports, chain-of-custodies, and any other pertinent supporting documentation.
 - iv. When complete, the project specific data are high speed optically scanned and transformed into digital CD media. Additional copies of these records are created at the time of scanning and are stored off-site for protection of the data. These records are stored for a minimum of five years.

FIGURE 1: ORGANIZATIONAL CHART


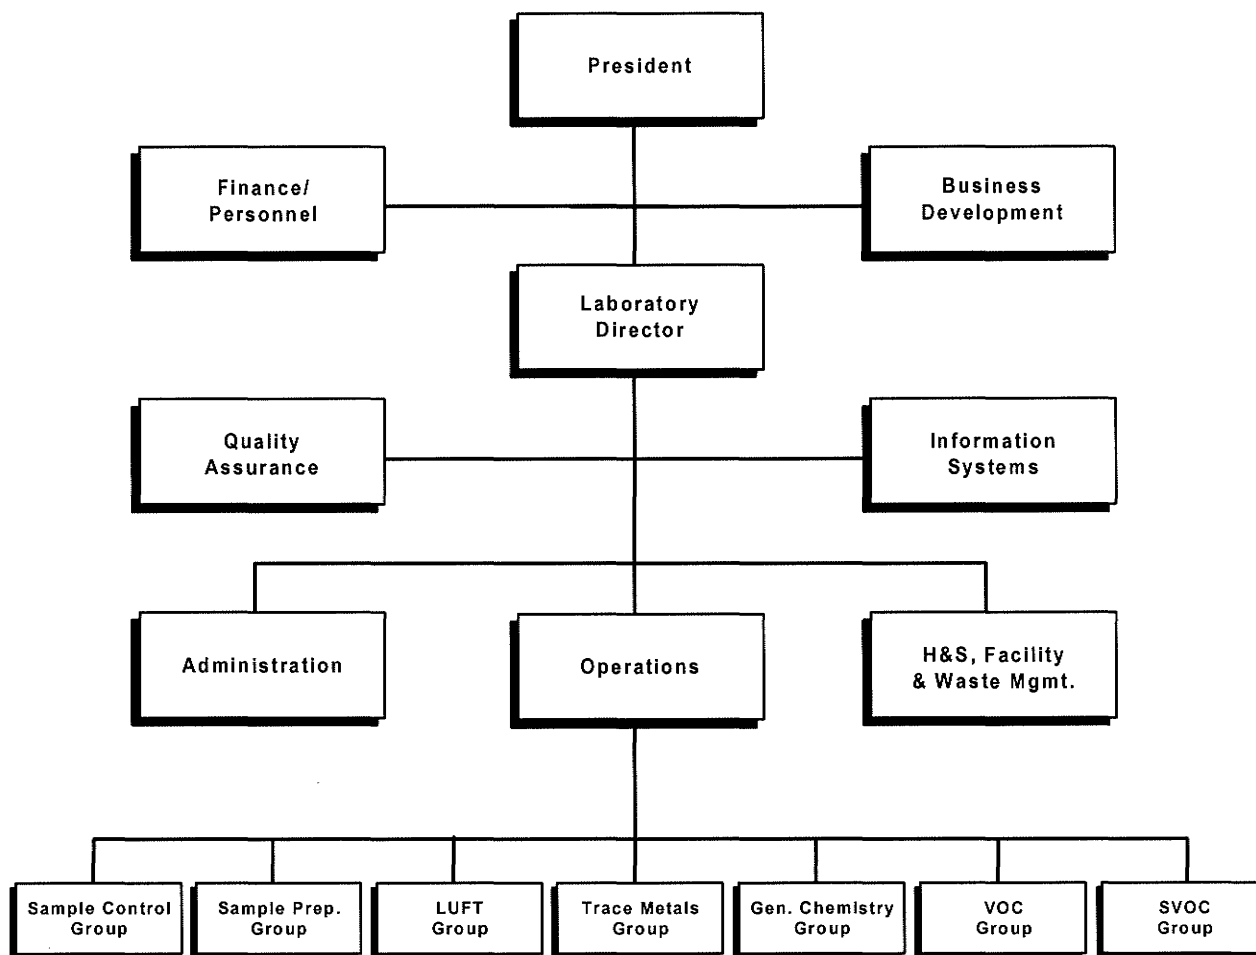


FIGURE 2: QA RESPONSIBILITY CHART

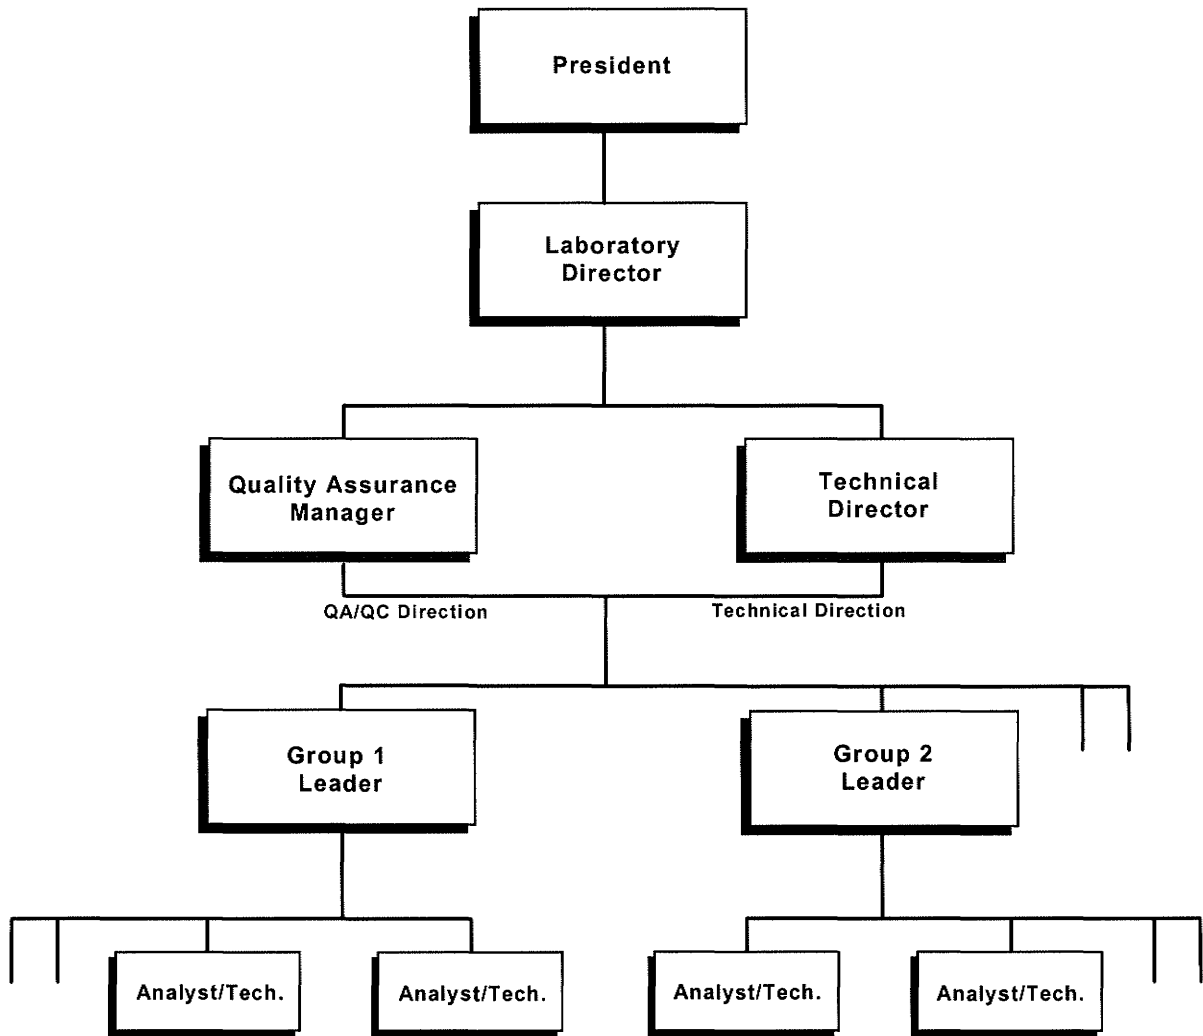

- v. Access to all systems is limited by use of log-in and password protection and is maintained by the system administrator.

There are four forms of electronic data that are generated in the laboratory and a synopsis of the archiving of these data follows:

LIMS Database

Backup frequency:	Daily
Backup media:	Hard Disk
Backup software:	MS SQL Server Backup
Backup versions kept:	Ten previous versions
Onsite copy:	Redundancy by using mirrored hard drive

Instrument Data

Backup frequency:	Weekly
Backup media:	Quantum 4000 DLT Raid Tape and DLT Tape
Backup software:	Computer Associates ArcServIT
Backup versions kept:	All versions
Offsite copy:	One

Manual Data

Backup frequency:	Weekly
Backup media:	Quantum 4000 DLT Raid Tape and DLT Tape
Backup software:	Computer Associates ArcServIT
Backup versions kept:	All versions
Offsite copy:	One

Hard Copy Data

Backup media:	Digital CD
Backup software:	Xerox Pagis
Backup versions kept:	All versions
Offsite copy:	One

- vi. All electronic records are stored for a minimum of five years.

e) Job Descriptions, Roles and Responsibilities

In order for the Quality Assurance Program to function properly, all members of the staff must clearly understand and meet their individual responsibilities as they relate to their job function and the quality program as a whole.

The responsibility for quality lies with every employee at Calscience. As such, all employees have access to the Quality Assurance Manual and are responsible for knowing the content of this manual and upholding the standards therein. Each employee is expected to conduct themselves in a manner consistent with the goals and in accordance with the procedures in this manual and the laboratory's SOPs. The following descriptions define the primary roles and their relationship to the Quality Assurance Program.

Laboratory Director:

Calscience's Laboratory Director, through its President, is the final authority on all issues dealing with data quality and has the authority to require that procedures be amended or discontinued, or analytical results voided or repeated. He or she also has the authority to suspend or terminate employees on the grounds of non-compliance with QA/QC procedures. In addition, the Laboratory Director:

- ⇒ Ensures that Calscience remains current with all regulations which affect operations and disseminate all such changes in regulatory requirements to the QA Manager, Technical Director, and Group Leaders;
- ⇒ Provide one or more Technical Directors for the appropriate fields of testing. The name(s) of the Technical Director will be included in the national database. (The Laboratory Director may also act in the Technical Director capacity.) If the Technical Director is absent for a period of time exceeding 15 consecutive calendar days, the Laboratory Director must designate another full time staff member meeting the qualifications of the Technical Director to temporarily perform this function. If the absence exceeds 65 consecutive calendar days, the primary accrediting authority must be notified in writing;
- ⇒ Ensures that all analysts and supervisors have the appropriate education and training to properly carry out the duties assigned to them and ensures that this training has been documented;
- ⇒ Ensures that personnel are free from any commercial, financial and other undue pressures which might adversely affect the quality of their work;
- ⇒ Oversees the development and implementation of the QA Program which assures that all data generated will be scientifically sound, legally defensible, and of known quality;
- ⇒ In conjunction with the QA Manager, conducts annual reviews of the QA Program;
- ⇒ Oversees the implementation of new and revised QA procedures to improve data quality;
- ⇒ Ensures that appropriate corrective actions are taken to address analyses identified as requiring such actions by internal and external performance or procedural audits. Procedures that do not meet the standards set forth in the QAM or laboratory SOPs may be temporarily suspended by the Laboratory Director;
- ⇒ Reviews and approves all SOPs prior to their implementation and ensures all approved SOPs are implemented and adhered to;
- ⇒ Oversees all laboratory accreditation efforts; and
- ⇒ Oversees in-house training on quality assurance and control.

Operations Manager:

The Operations Manager manages and directs the analytical production sections of the laboratory. He or she reports directly to the Laboratory Director and assists in determining the most efficient instrument utilization. More specifically, they:

- ⇒ Evaluates the level of internal/external non-conformances for all departments;
- ⇒ Continuously evaluates production capacity and improves capacity utilization;
- ⇒ Continuously evaluates turnaround time and addresses any problems that may hinder meeting the required and committed turnaround time from the various departments;
- ⇒ Develops and improves the training of all analysts in cooperation with the Laboratory Director, QA Manager and Group Leaders, and in compliance with regulatory requirements;
- ⇒ Ensures that scheduled instrument maintenance is completed;
- ⇒ Is responsible for efficient utilization of supplies;
- ⇒ Constantly monitors and modifies the processing of samples through the departments; and
- ⇒ Maintains sufficient personnel, equipment and supplies to achieve production goals.

Quality Assurance Manager:

The QA Manager has full authority through the Laboratory Director in matters dealing within the laboratory. The QA Manager can make recommendations to the Laboratory Director regarding the suspension or termination of employees on the grounds of non-compliance with QA/QC procedures. An alternate QA Manager is always assigned. In the absence of the primary designate, the alternate will act in the QA Manager's capacity with the full authority of the position as allowed by Calscience governing documents. In addition, the QA Manager performs the following:

- ⇒ Maintains and updates the QAM on an annual basis;
- ⇒ Implements Calscience's QA Program;
- ⇒ Monitors the QA Program within the laboratory to ensure complete compliance with its objectives, QC procedures, holding times, and compliance with client or project specific data quality objectives;
- ⇒ Distributes performance evaluation (PE) samples on a routine basis to ensure the production of data that meets the objectives of its QA Program;
- ⇒ Maintains all SOPs used at Calscience;
- ⇒ Maintains records and archives of all PE results, audit comments, and customer inquiries concerning the QA program;
- ⇒ Performs statistical analyses of QC data and establish controls that accurately reflect the performance of the laboratory;
- ⇒ Conducts periodic performance and system audits to ensure compliance with the elements of Calscience's QA Program;
- ⇒ Prescribes and monitors corrective action;
- ⇒ Serves as in-house client representative on all project inquiries involving data quality issues;
- ⇒ Coordinates data review process to ensure that thorough reviews are conducted on all project files;
- ⇒ Develops revisions to existing SOPs;
- ⇒ Reports the status of in-house QA/QC to the Laboratory Director;
- ⇒ Maintains records and archives of all QA/QC data including but not limited to method detection limit (MDL) studies, accuracy and precision control charts, and completed log books; and
- ⇒ Conducts and/or otherwise ensures that an adequate level of QA/QC training is conducted within the laboratory.

Quality Assurance Assistant:

The QA Assistant reports to the QA Manager and performs the following functions:

- ⇒ Assists the QA Manager and lab staff with internal audits, corrective action review and overall implementation of the QA program;
- ⇒ Generates and reviews, in conjunction with the QA Manager, Control Charts and Method Detection Limit (MDL) studies;
- ⇒ Reviews and revises SOPs as needed;
- ⇒ Distributes new SOPs to all applicable lab areas.

Business Development Director:

The Business Development Director reports to the Laboratory Director and serves as the interface between the laboratory's technical departments and the laboratory's clients. The staff consists of the Project Management team, Business Development team and satellite office Operations Managers. With the overall goal of total client satisfaction, the functions of this position are outlined below:

- ⇒ Technical training and growth of the Project Management team;
- ⇒ Business liaison for the Project Management team;
- ⇒ Human resource management of the Project Management team;
- ⇒ Responsible for the review and negotiation of client contracts and terms and conditions;
- ⇒ Responsible for establishing standard fee schedules for the laboratory;
- ⇒ Responsible for preparation of proposals and quotes for clients and client prospects;
- ⇒ Accountable for response to client inquiries concerning sample status;

- ⇒ Responsible for assistance to clients regarding the resolution of problems concerning Chains-of-Custody;
- ⇒ Ensuring that client specifications, when known, are met by communicating project and quality assurance requirements to the laboratory;
- ⇒ Notifying the department managers of incoming projects and sample delivery schedules;
- ⇒ Accountable to clients for communicating sample progress in daily status meeting with agreed-upon due dates;
- ⇒ Responsible for discussing with client any project-related problems, resolving service issues, and coordinating technical details with the laboratory staff;
- ⇒ Responsible for staff familiarization with specific quotes, sample log-in review, and final report completeness; and
- ⇒ Ensure that all non-conformance conditions are reported to the QA Manager, Operations Manager, and/or Laboratory Director via the Corrective Action process.

Technical Directors:

The Technical Director(s) report directly to the Laboratory Director. They are accountable for all analyses and analysts within their scope of responsibility. The scope of responsibility ranges from the new-hire process and existing technology through the ongoing training and development programs for existing analysts.

Specific responsibilities include, but are not limited to:

- ⇒ Coordinating, writing, and reviewing test methods and SOPs, with regard to quality, integrity, regulatory requirements and efficient production techniques;
- ⇒ Reviewing and approving, with input from the QA Manager and Business Development Manager, business proposals, in accordance with established procedures for the review of requests and contracts. This procedure addresses the adequate definition of methods to be used for analysis and any limitations, the laboratory's capability and resources, the client's expectations. Differences are resolved before the contract is signed and work begins. A system documenting any significant changes is maintained, as well as pertinent discussions with the client regarding his requirements or the results of the analyses during the performance of the contract. All work subcontracted by the laboratory must be approved and requested by the client. Any deviations from the contract must be disclosed to the client. Once the work has begun, any amendments to the contract must be discussed with the client and so documented;
- ⇒ Monitoring the validity of the analyses performed and data generated in the laboratory. This activity begins with reviewing and supporting all new business contracts, insuring data quality, analyzing internal and external non-conformances to identify root cause issues and implementing the resulting corrective and preventive actions, facilitating the data review process and providing technical and troubleshooting expertise on routine and unusual or complex problems;
- ⇒ Providing training and development programs to applicable laboratory staff as new hires and, subsequently, on a scheduled basis; and
- ⇒ Coordinates audit responses with supervisors and QA Manager.

Group Leaders:

The Group Leaders report directly to the Operations Manager. They have the authority to accept or reject data based on pre-defined QC criteria. In addition, with the approval of the QA Manager, the Group Leaders may accept data that falls outside of normal QC limits if, in his or her professional judgment, there are technical justifications for the acceptance of such data. The circumstances must be well documented and any need for corrective action identified must be defined and initiated. The authority of the Group Leaders in QC related matters results directly from the QA Manager. The Group Leaders also

- ⇒ Actively support the implementation of Calscience's QA Program;
- ⇒ Ensure that their employees are in full compliance with Calscience's QA Program;
- ⇒ Maintain accurate SOPs (by reviewing and implementing updates) and enforce routine compliance with SOPs;
- ⇒ Conduct technical training of new staff and when modifications are made to existing procedures;
- ⇒ Maintain a work environment which emphasizes the importance of data quality;
- ⇒ Ensure all logbooks are current, reviewed and properly labeled or archived;
- ⇒ Ensure that all non-conformance conditions are reported to the QA Manager, Operations Manager, and/or Laboratory Director via Corrective Action reports;
- ⇒ Provide guidance to analysts in resolving problems encountered daily during sample prep/analysis in conjunction with the Technical Director, Operations Manager, and/or QA Manager. Each is responsible for 100% of the data review and documentation, nonconformance issues, and the timely and accurate completion of performance evaluation samples and MDLs, for his/her department;
- ⇒ Encourage the development of analysts to become cross-trained in various methods and/or operate multiple instruments efficiently while performing maintenance and using appropriate documentation techniques;
- ⇒ Ensure that preventive maintenance is performed on instrumentation as detailed in the QA Manual or SOPs. He or she is responsible for developing and implementing a system for preventive maintenance, troubleshooting, and repairing or arranging for repair of instruments;
- ⇒ Provide written responses to external and internal audit issues; and
- ⇒ Provide support to all levels of Calscience Management.

Sample Control Group Leader:

The Sample Control Group Leader reports to the Operations Manager. The responsibilities are outlined below:

- ⇒ Direct the receipt, handling, labeling and proper storage of samples in compliance with laboratory procedures and policies;
- ⇒ Oversee the training of Sample Control Technicians regarding the above items;
- ⇒ Direct the logging of incoming samples into the LIMS and ensure the verification of data entry from login;
- ⇒ Oversee all sample courier operations;
- ⇒ Acts as a liaison between Project Managers and Analytical departments in respect to handling rush orders and resolving inconsistencies and problems with chain-of-custody forms, and routing of subcontracted analyses; and
- ⇒ Oversees the handling of samples in accordance with the Waste Disposal SOP, the Hazardous Waste Contingency Plan in the Chemical Hygiene/Safety Manual, and the U. S. Department of Agriculture requirements.

Laboratory Analysts

Laboratory analysts are responsible for conducting analysis and performing all tasks assigned to them by the group leader or supervisor. The responsibilities of the analysts are listed below:

- ⇒ Perform analyses by adhering to analytical and quality control protocols prescribed by current SOPs, this QA Manual, the Data Integrity Policy, and project-specific QA plans honestly, accurately, timely, safely, and in the most cost-effective manner.
- ⇒ Document standard and sample preparation, instrument calibration and maintenance, data calculations, sample matrix effects, and any observed non-conformance on work sheets, bench sheets, preparation logbook, and/or a Non-Conformance report;

- ⇒ Report all non-conformance situations, instrument problems, matrix problems and QC failures, which might affect the reliability of the data, to the Group Leader and/or the QA Manager;
- ⇒ Perform 100% review of the data generated prior to entering and submitting for secondary level review; and
- ⇒ Work cohesively as a team in their department to achieve the goals of accurate results, optimum turnaround time, cost effectiveness, cleanliness, complete documentation, and personal knowledge of environmental analysis.

Laboratory Technicians:

- ⇒ Prepare samples for analysis by weighing, extracting or digesting, filtering, or concentrating samples; and
- ⇒ Prepare method specific QC Samples with each preparation batch. All personnel must adhere to all QC procedures specified in the analytical method and in accordance to procedures or policies and are responsible for the full documentation of these procedures.

Project Manager:

The Project Manager normally reports to the Senior Project Manager and/or Business Development Director. Typical responsibilities include:

- ⇒ Serving as the laboratories' primary point of contact for assigned clients;
- ⇒ Working with laboratory chemists to resolve questions on data;
- ⇒ Scheduling of courier deliveries and pick-ups;
- ⇒ Tracking the progress of all laboratory production efforts;
- ⇒ Advising clients of any scheduling conflicts, possible delays, or other problems which may arise;
- ⇒ Resolving any questions or issues that clients may have with regard to our services, especially our reports;
- ⇒ Preparation of bottle kits for use by clients in their sampling efforts (as necessary);
- ⇒ Reviewing of reports/EDDs (Electronic Data Deliverables) as necessary prior to release;
- ⇒ Invoice preparation and review prior to release to client;
- ⇒ Serving as back-up contact person for other Project Managers in the event of his/her absence;
- ⇒ Coordination of all subcontracting efforts for projects assigned;
- ⇒ Preparation and implementation of program QAPPs (Quality Assurance Project Plans), if needed;
- ⇒ Preparation of project Case Narratives, as needed; and
- ⇒ Assembly of full data packages in accordance with company or client protocol, as needed.

Project Management Assistant:

The Project Management Assistant normally receives direction from the Project Manager(s) for which he/she is assigned. Typical responsibilities include:

- ⇒ Working with laboratory chemists to resolve questions on data;
- ⇒ Scheduling of courier deliveries and pick-ups;
- ⇒ Tracking the progress of all laboratory production efforts;
- ⇒ Advising clients of any scheduling conflicts, possible delays, or other problems which may arise;
- ⇒ Resolving any questions or issues that clients may have with regard to our services, especially our reports;
- ⇒ Preparation of bottle kits for use by clients in their sampling efforts;
- ⇒ Reviewing of reports/EDDs (Electronic Data Deliverables) prior to release;

- ⇒ Invoice preparation and review prior to release to client;
- ⇒ Serving as back-up contact person for the project managers in the event of his/her absence;
- ⇒ Coordination of all subcontracting efforts for projects assigned; and
- ⇒ Preparation and implementation of program QAPPs (Quality Assurance Project Plans), if needed.
- ⇒ As part of the administrative staff, this person may also be required to answer phones, do occasional filing, mailing, etc.

Environmental Health & Safety Manager:

The Health and Safety Manager reports to the Laboratory Director and ensures that systems are maintained for the safe operation of the laboratory. The EHS Manager is responsible to:

- ⇒ Conduct ongoing, necessary safety training and conduct new employee safety orientation;
- ⇒ Assist in developing and maintaining the Chemical Hygiene/Safety Manual;
- ⇒ Oversee the inspection and maintenance of general safety equipment – fire extinguishers, safety showers, eyewash fountains, etc. and ensure prompt repairs as needed; and
- ⇒ Complete accident reports, follow up on root causes and define corrective actions.

Hazardous Waste Coordinator:

The Hazardous Waste Coordinator reports directly to the Environmental Health & Safety Manager. The duties of the HWC consist of:

- ⇒ Staying current with the hazardous waste regulations and continuing training on hazardous waste issues;
- ⇒ Contacting the hazardous waste subcontractors for review of procedures and opportunities for minimization of waste;
- ⇒ Supervise the recording of the transfer of samples from refrigerated conditions to ambient conditions [in the sample disposal log sheets (SDLS)];
- ⇒ Check the records in SDLS against the logbook (LIMS) records;
- ⇒ Coordinate the collection of waste throughout the laboratory that will be disposed of through “Lab Packs”;
- ⇒ Coordinate and supervise Hazardous Waste Technician(s);
- ⇒ Dispose of solid waste to an assigned Tote;
- ⇒ Supervise the recording and disposal of acid and soil with methylene chloride extracts into appropriate drums;
- ⇒ Prepare and discharge treated wastewater to the sewer system;
- ⇒ Maintain Uniform Hazardous Waste Manifest files;
- ⇒ Prepare weekly sample disposal schedules;
- ⇒ Coordinate and schedule waste pick-up;
- ⇒ Check all waste containers for appropriate labels; and
- ⇒ Maintain safe housekeeping and practices.

Education and Experience

Calscience makes every effort to hire analytical staff that possess a college degree (AA, BA, BS) in an applied science with some chemistry in the curriculum. Exceptions are made based upon experience and an individual's ability to learn as there are many in the industry that are more than competent, experts perhaps, who have not earned a college degree.

Selection of qualified individuals for employment begins with documentation of minimum education, training, and experience prerequisites needed to perform the prescribed task. Experience and specialized

training may be accepted in lieu of a college degree (basic lab skills such as using a balance, aseptic or quantitation techniques, etc. are also considered).

Included in Section 5.2 (e) of this Quality Assurance Manual are the basic job titles and personnel responsibilities for anyone who manages, performs or verifies work affecting the quality of the environmental testing that the laboratory performs. Minimum education and training requirements are summarized in the following table:

When an analyst does not meet these minimum requirements, they can perform a task under the direct supervision of a qualified analyst, peer reviewer or Group Leader, and are considered an analyst in training. The person supervising an analyst in training is directly accountable for the quality of the analytical data and must review and approve data and associated corrective actions.

Job Type	Education	Experience
Extractions, Digestions, some electrode methods (pH, DO, Redox, etc.), Titrimetric and Gravimetric Analyses,	H.S. Diploma or GED	On the job training
GFAA, CVAA, FLAA, Single component or short list Chromatography (e.g., Fuels, BTEX-GC, IC	A college degree in an applied science or 2 years of college and at least 1 year of college chemistry, or	2 years prior analytical experience is required
ICP, ICPMS, Long List or complex chromatography (e.g., Pest, PCB, Herb, HPLC, etc.), GCMS	A college degree in an applied science or 2 years of college chemistry, or	5 years of prior analytical experience in
Spectra Interpretation	A college degree in an applied science or 2 years of college Chemistry, and	2 years relevant experience Or, 5 years of prior analytical experience
Group Leaders – Advanced Instrumentation	Bachelors Degree in an applied science with 16 semester hours in chemistry An advanced (MS, PhD.) degree may substitute for one year of experience, and	2 years experience in the analytical technique for environmental analysis of representative analytes for which they will oversee
Group Leaders – Wet Chemistry (Basic Skills)	Associates degree in an applied science or 2 years of college with 16 semester hours in Chemistry, and	2 years relevant experience

- f) Identification of the laboratory's approved signatories; at a minimum, the title page of the quality manual has the signed and dated concurrence (with appropriate titles) of all responsible parties including the QA manager, technical director, and the laboratory director;
- g) The laboratory's procedures for achieving traceability of measurements;
- h) A list of all test methods under which the laboratory performs its accredited testing may be found in the Index of Standard Operating Procedures, a separate document.
- i) Mechanisms for ensuring that the laboratory reviews all new work to ensure that it has the appropriate facilities and resources before commencing such work;
- j) Reference to the calibration and/or verification test procedures used;

Calibration procedures and verification of acceptability for each set of required calibrations are defined in Section 13 (Calibration) and Section 12 (Quality Control) of each standard operating procedure.

- k) Procedures for handling samples received;

The generation of quality analytical data begins with the collection of the sample and, therefore, the integrity of the sample collection process is of importance to Calscience. Samples must be collected in such a way that foreign material is not introduced into the samples and that analytes of interest do not escape from the samples or degrade prior to their analysis. To ensure sample integrity and representativeness, the following items must be considered:

- ⇒ Samples must be collected in appropriate containers. In general, glass containers are used for organic analytes and polyethylene for inorganic/metal analytes;
- ⇒ Only new sample containers which are certified and documented clean in accordance with U.S. EPA OSWER Directive No. 9240.0-0.05 specifications shall be provided by Calscience for sample collection;
- ⇒ Certain extremely hazardous samples or samples that have the potential to become extremely hazardous will not be accepted. These include (but are not limited to)
 1. Radioactive samples that exceed background levels
 2. Biohazardous samples (medical wastes, body fluids, etc.)
 3. Explosive samples (Flash or gunpowder, ammunition, flares, etc.)
 4. Neurological or other toxic agents (Sarin, Anthrax, Ricin, etc.)

Calscience's chain-of-custody document is used to forward samples from the client to the laboratory. As the basic elements of most all chain-of-custody (COC) documents are similar, clientele may choose to use their own chain-of-custody document to forward samples to Calscience.

Any discrepancies in the COC must be documented on the Sample Receipt Form and resolved prior to analysis of samples. Further guidance may be found in SOP T100 "Sample Receipt and Log-In Procedures".

Upon receipt by Calscience, samples proceed through an orderly processing sequence designed to ensure continuous integrity of both the sample and its documentation from sample receipt through its analysis and beyond.

All coolers that are received by the Sample Control Group undergo a preliminary examination in accordance with Part A of the Sample Receipt Form. Specifically, each sample is carefully examined for label identification, proper container (type and volume), chemical preservation when applicable, container condition, and chain-of-custody documentation consistency with sample labels. Discrepancies are noted on the Sample Receipt Form, the chain-of-custody and, if possible,

discussed with the client prior to his or her departure. If this is not possible, the discrepancies are communicated to the client for resolution prior to the completion of the log-in process. The temperature of the cooler is measured and, with other observations, is recorded in Part B of the Sample Receipt Form. Additional comments are recorded in Part C of the Sample Receipt Form.

During the log-in process each sample is assigned a unique laboratory identification number through a computerized Laboratory Information Management System (LIMS), which stores all essential project information. Calscience maintains multiple security levels of access into LIMS to prevent unauthorized tampering/release of sample and project information.

Once all analyses for a sample have been completed and the sample container is returned to Sample Control, it shall remain in refrigerated storage for a period not less than 30 days following sample receipt unless the client requests return/forwarding of the sample. Following the 30-day refrigerated storage period, the samples are placed into ambient storage for another period not less than 30 days after which the samples are bulked into drums for later disposal.

Extended storage may be requested at prevailing per sample rates.

- l) Reference to the major equipment and reference measurement standards used as well as the facilities and services used by the laboratory in conducting tests;

A list of major equipment is kept up-to-date on the List of Major Assets. This, as well as a list of reference measurement standards and their certificates of calibration, is maintained by the QA Manager or in the respective departments.

- m) Reference to procedures for calibration, verification and maintenance of equipment; Laboratory SOPs (T042, T050 and T051) are available to staff for calibration, verification and maintenance of equipment.
- n) Reference to verification practices which may include interlaboratory comparisons, proficiency testing programs, use of reference materials and internal quality control schemes;

Instrument calibration is required to ensure that the analytical system is operating correctly and functioning at the proper sensitivity such that required reporting limits can be met. Each instrument is calibrated with standard solutions appropriate to the type of instrument and the linear range established for the analytical method. The manufacturer's guidelines, the analytical method, and/or the requirements of special contracts determine the frequency of calibration and the concentration of calibration standards, whichever is most applicable. The following are very general guidelines and are not meant to be all-inclusive. Detailed calibration procedures are specified in the SOP for each method performed.

Gas Chromatography/Mass Spectroscopy (GC/MS): Each day prior to analysis of samples, all GC/MS instruments are tuned with 4-bromofluorobenzene (BFB) for VOCs and decafluorotriphenylphosphine (DFTPP) for SVOCs in accordance with the tuning criteria specified in the applicable methods. Samples are not analyzed until the method-specific tuning requirements have been met.

After the tuning criteria are met, the instrument is then calibrated for all target analytes and an initial multipoint calibration curve established. Alternatively, the previous calibration curve may be used if validated by a calibration verification (CV) standard. All target analytes are represented in the calibration and certain key target analytes referred to as system performance calibration compounds (SPCCs) and calibration check compounds (CCCs) are used for curve acceptance determination. For the initial calibration to be deemed acceptable, the SPCCs and CCCs must meet established acceptance criteria and must be re-evaluated and meet the acceptance criteria, at a minimum, every twelve (12) hours thereafter.

Non-GC/MS Chromatography: The field of chromatography involves a variety of instrumentation and detectors. While calibration standards and control criteria vary depending upon the type of system and analytical methodology required for a specific analysis, the general principles of calibration apply uniformly. Each chromatographic system is calibrated prior to sample analysis. An initial multipoint calibration curve is generated using all target analytes. All target analytes must meet the acceptance criteria for the calibration to be deemed acceptable. The continued validity of the initial multipoint calibration is verified every 12 hours using a calibration verification (CV) standard containing all target analytes. If the CV fails to meet the acceptance criteria, the system is re-calibrated and all samples analyzed since the last acceptable CV must be re-analyzed.

Inductively Coupled Plasma Emission Spectroscopy: Initial calibration consists of a calibration blank (CB) plus one calibration standard. The calibration is verified by the re-analysis of the standard and initial calibration verification (ICV) standard. If the standard and the ICV fail to meet the acceptance criteria, the initial calibration is considered invalid and is re-performed.

Continuing calibration verification (CCV) consists of a mid-concentration standard plus a calibration blank (CB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CB must be re-analyzed.

ICP/MS Spectroscopy: Each day prior to the analysis of samples, all ICP/MS instruments undergo mass calibration and resolution checks prior to initial calibration. Initial calibration consists of a calibration blank (CB) and at least one calibration standard. The calibration is verified by the re-analysis of the standard and initial calibration verification (ICV) standards. If the standard and the ICV fail to meet the acceptance criteria, the initial calibration is considered invalid and is re-performed.

Continuing calibration verification (CCV) consists of a mid-concentration standard plus a calibration blank (CB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CB must be re-analyzed.

Flame and Graphite Furnace Atomic Absorption Spectroscopy: Initial calibration consists of a calibration blank plus a low, medium, and high calibration standard. Continuing calibration verification (CCV) consists of midpoint calibration standard plus a calibration blank (CB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CB must be re-analyzed. If the calibration blanks contain target analyte concentrations exceeding the acceptance limits, the cause must be determined and corrected.

General Inorganic Analyses: General inorganic (non-metal) analyses involve a variety of instrumental and wet chemistry techniques. While calibration procedures vary depending on the type of instrumentation and methodology, the general principles of calibration apply universally. Each system or method is initially calibrated using standards prior to analyses being conducted with continual verification that the calibration remains acceptable throughout analytical processing. If continual calibration verification fails to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV must be re-analyzed.

- o) Procedures to be followed for feedback and corrective action whenever testing discrepancies are detected, or departures from documented policies and procedures occur;

These procedures may be found in SOP-T015 (Correction/Prevention of Errors in Test Records) and SOP-T022 (Corrective/Preventive Actions).

- p) The laboratory management arrangements for permitting exceptions and departures from documented policies and procedures or from standard specifications;

Calscience's SOPs are in substantial conformity with their corresponding published method references. Departure from approved SOPs shall be approved if necessary or appropriate due to the nature or composition of the sample or otherwise based on the reasonable judgment of Calscience's Laboratory Director, Technical Director, or QA Manager. Departures shall be made on a case-by-case basis consistent with recognized standards of the industry. In no case shall departures be approved without written communication between Calscience and the affected client.

- q) Procedures for dealing with complaints;

Procedures for dealing with complaints may be found in SOP-T018, Handling of Inquiries and Complaints.

- r) Procedures for protecting confidentiality (including national security concerns) and proprietary rights;

Calscience is sensitive to the fact that much of the analytical work performed for clientele may be subject to litigatory processes. Calscience, therefore, holds all information in strict confidence with laboratory release only to the client or designee. Information released to entities other than the client is performed only upon written, facsimile or e-mail request from the client.

Due to the investigative nature of most site assessments, analytical information may become available to regulatory agencies or other evaluating entities during site assessment of the laboratory for the specific purpose of attaining laboratory certifications, accreditations, or evaluation of laboratory qualification for future work. During these occurrences, the laboratory will make its best effort to maintain the confidence of client specific information.

- s) Procedures for audits and data review;

Calscience participates in a wide variety of system and performance audits conducted by numerous federal and state agencies, as well as through its major clientele. These audits are conducted to verify that analytical data produced conforms to industry standards on a routine basis.

A System Audit is a qualitative evaluation of the measurement systems utilized at Calscience, specifically, that Calscience has, in place, the necessary facilities, staff, procedures, equipment, and instrumentation to generate acceptable data. This type of audit typically involves an on-site inspection of the laboratory facility, operations, and interview of personnel by the auditing agency.

A Performance Audit verifies the ability of Calscience to correctly identify and quantitate compounds in blind check samples. This type of audit normally is conducted by the auditing agency through laboratory participation in round robin Performance Evaluation (PE) programs. Examples of current PE program involvement include those offered by commercial suppliers like ERA (WSWP/SOIL and DMR-QA), or other inter-laboratory studies not required for certification but done to ensure laboratory performance, as well as programs administered by major industry.

Outliers in required PE samples will be investigated and corrective actions documented using the Corrective/Preventive Action Record.

Should the result of any audit detect a significant error, which has been identified to adversely affect released data, the situation shall be thoroughly investigated. Corrective measures shall be enacted to include system re-evaluation, the determined affect on released data and client notification, as necessary. These measures shall be documented using the Corrective/Preventive Action Record.

- t) Processes/procedures for establishing that personnel are adequately experienced in the duties they are expected to carry out and are receiving any needed training;

Quality control begins prior to sample(s) receipt at the laboratory. The selection of well qualified personnel, based upon education and/or experience is the first step in successful laboratory management. A thorough screening of job applicants and selection of the best candidate to fulfill a well-defined need is as important an aspect of a successful QA/QC program as a careful review of analytical data.

Employee training and approval procedures used at Calscience are specified in SOP-T010, “Employee Training”, and includes but is not limited to the following:

- ⇒ A thorough understanding of the applicable regulatory method and Calscience SOP;
- ⇒ A review of Calscience's QA Program Manual and thorough understanding of the specifics contained therein that are directly related to the analysis to be performed;
- ⇒ Instruction by the applicable Group Leader on all aspects of the analytical procedure;
- ⇒ Performance of analyses under supervision of experienced laboratory personnel, which shall include analysis of blind QC check samples, when deemed appropriate;
- ⇒ Participation in in-house seminars on analytical methodologies and procedures;
- ⇒ Participation in job related seminars outside of the laboratory; and
- ⇒ Participation in conventions and meetings, i.e., ACS, etc.

- u) Ethics policy statement developed by the laboratory and processes/procedures for educating and training personnel in their ethical and legal responsibilities including the potential punishments and penalties for improper, unethical, or illegal actions;

A vital part of Calscience Environmental Laboratories' analytical laboratory services is their Laboratory Ethics Training Program. An effective program starts with an Ethics Policy Statement that is supported by all staff, and is reinforced with initial and ongoing ethics training.

“It shall be the policy of Calscience to conduct all business with integrity and in an ethical manner. It is a basic and expected responsibility of each staff member and manager to hold to the highest ethical standard of professional conduct in the performance of all duties.”

A proactive ethics training program is the most effective means of deterring and detecting improper, unethical, or illegal actions in the laboratory. There are six facets to the program: (1) clearly define improper, unethical, and illegal actions; (2) outline elements of prevention and detection programs for improper, unethical, or illegal actions; and (3) identify examples of inappropriate (i.e., potentially fraudulent) laboratory practices; (4) Annual Ethics and Data Integrity Training to be documented and maintained in the personnel file of each employee., (5) Documented training on new revisions of the Quality Systems Manual (QSM) and for new employees as needed. (6) Signed Ethics and Data Integrity Agreement (to be completed for new employees and annually thereafter)

Definition of Improper, Unethical, and Illegal Actions

Improper actions are defined as deviations from contract-specified or method-specified analytical practices and may be intentional or unintentional.

Unethical or illegal actions are defined as the deliberate falsification of analytical or quality assurance results, where failed method or contractual requirements are made to appear acceptable.

Prevention of laboratory improper, unethical, or illegal actions begins with a zero-tolerance philosophy established by management. Improper, unethical, or illegal actions are detected through the implementation of oversight protocols.

Prevention and Detection Program for Improper, Unethical, or Illegal Actions

Calscience management has implemented a variety of proactive measures to promote prevention and detection of improper, unethical, or illegal activities. The following components constitute the basic program:

- ⇒ Data Integrity Standard Operating Procedure (SOP) T065
- ⇒ Data Integrity Documentation Procedures
- ⇒ An Ethics and Data Integrity Agreement that is read and signed by all personnel;
- ⇒ Initial and annual ethics training;
- ⇒ Internal audits;
- ⇒ Inclusion of anti-fraud language in subcontracts;
- ⇒ Analyst notation and sign-off on manual integration changes to data;
- ⇒ Active use of electronic audit functions when they are available in the instrument software; and
- ⇒ A “no-fault” policy that encourages laboratory personnel to come forward and report fraudulent activities.

A proactive, “beyond the basics” approach to the prevention of improper, unethical, or illegal actions are a necessary part of laboratory management. As such, in addition to the requirements above, Calscience has a designated ombudsman (data integrity officer) to whom laboratory personnel can report improper, unethical, or illegal practices, or provide routine communication of training, lectures, and changes in policy intended to reduce improper, unethical, or illegal actions.

Examples of Improper, Unethical, or Illegal Practices

Documentation that clearly shows how all analytical values were obtained are maintained by Calscience and supplied to the data user as needed. To avoid miscommunication, Calscience clearly documents all errors, mistakes, and basis for manual integrations within the project file and case narrative as applicable. Notification is also made to the appropriate supervisor so that appropriate corrective actions can be initiated. Gross deviations from specified procedures are investigated for potential improper, unethical, or illegal actions, and findings of fraud are fully investigated by senior management. Examples of improper, unethical, or illegal practices are identified below:

- ⇒ Improper use of manual integrations to meet calibration or method QC criteria (for example, peak shaving or peak enhancement are considered improper, unethical, or illegal actions if performed solely to meet QC requirements);
- ⇒ Intentional misrepresentation of the date or time of analysis (for example, intentionally resetting a computer system’s or instrument’s date and/or time to make it appear that a time/date requirement was met);
- ⇒ Falsification of results to meet method requirements;
- ⇒ Reporting of results without analyses to support (i.e., dry-labbing);
- ⇒ Selective exclusion of data to meet QC criteria (for example, initial calibration points dropped without technical or statistical justification);
- ⇒ Misrepresentation of laboratory performance by presenting calibration data or QC limits within data reports that are not linked to the data set reported, or QC control limits presented within QAPP that are not indicative of historical laboratory performance or used for batch control;
- ⇒ Notation of matrix inference as basis for exceeding acceptance limits (typically without implementing corrective actions) in interference-free matrices (for example, method blanks or laboratory control samples);
- ⇒ Unwarranted manipulation of computer software (for example, improper background subtraction to meet ion abundance criteria for GC/MS tuning, chromatographic baseline manipulations);
- ⇒ Improper alteration of analytical conditions (for example, modifying EM voltage, changing GC temperature program to shorter analytical run time) from standard analysis to sample analysis;

- ⇒ Misrepresentation of QC samples (for example, adding surrogates after sample extraction, omitting sample preparation steps for QC samples, over- or underspiking); and
- ⇒ Reporting of results from the analysis of one sample for those of another.

v) Reference to procedures for reporting analytical results;

Standard operating procedures pertaining to the reporting of results are available to all laboratory personnel. They are: SOP-T009, Significant Figures, Rounding, and Reporting of Results; SOP-T025, Reporting of Tentatively Identified Compounds (TICs); and T-026, Reporting of Data Qualifiers.

All analytical data generated within Calscience is thoroughly checked for accuracy and completeness. The data validation process consists of data generation, reduction, and four levels of review as described below.

The analyst generating the analytical data has the primary responsibility for its correctness and completeness. All data is generated and reduced following protocols specified in the appropriate SOPs. Each analyst reviews the quality of his or her work based upon an established set of guidelines specified in the SOPs or as specified by project requirements. The analyst reviews the data package to ensure that:

- ⇒ Holding times have not been exceeded;
- ⇒ Sample preparation information is correct and complete;
- ⇒ Analysis information is correct and complete;
- ⇒ The appropriate procedures were employed;
- ⇒ Analytical results are correct and complete;
- ⇒ All associated QC is within established control limits and, if not, out-of-control forms are completed thoroughly explaining the cause and corrective action taken;
- ⇒ Any special sample preparation and analytical requirements have been met; and
- ⇒ Documentation is complete, i.e., all anomalies in the preparation and analysis have been documented; out-of-control forms, if required, are complete, etc.

The data reduction and validation steps are documented, signed, and dated by the analyst on the QC Review coversheet accompanying each data package. This initial review step, performed by the analyst, is designated as primary review. The analyst then forwards the data package to his or her Group Leader, or designated data reviewer, who performs a secondary review. Secondary reviews consist of an independent check equivalent to that of the primary review and are designed to ensure that:

- ⇒ Calibration data is scientifically sound, appropriate to the method, and completely documented;
- ⇒ QC data is within established guidelines or reported with appropriate clarification/qualification;
- ⇒ Qualitative identification of sample components is correct;
- ⇒ Quantitative results are correct;
- ⇒ Documentation is complete and any anomalies properly addressed and documented;
- ⇒ The data is ready for incorporation into the final report package; and
- ⇒ The data package is complete and ready for archiving.

A significant component of the secondary review is the documentation of any errors that have been identified and corrected during the review process. Calscience believes that the data package that is submitted for a secondary review should be free from errors. Errors that are discovered are documented and formally transmitted to the appropriate Group Leader. The cause of the errors are then addressed by additional training or clarification of procedures (SOP revisions) to ensure that similar errors do not recur and high quality data will be generated.

Signature of Data Reviewer and the date of review document the completion of secondary reviews on the QC Review coversheet. These constitute approval for data release and generation of analytical report.

During both of the QC review processes, 100% of the raw data associated with the entire project is available to the reviewer. Data packages are checked back to the raw data as deemed necessary by the reviewer.

Following draft report generation, the report is reviewed by the Project Manager to ensure that the data set and quality control data is complete and meets the specific requirements of the project. When available, the data is also evaluated against historical site information. Once all requested analytical work has been verified as complete, a final report is generated and signed by the Project Manager.

Following approval for release by the Project Manager, the Quality Assurance Manager or Designee to ensure that the analytical and quality control data is correct performs a final review. The Quality Assurance Manager may review 10% of the project files back to the raw data as an additional check.

A variety of reporting formats, from Portable Document File (PDF), normal typed reports to computerized data tables to complex reports discussing regulatory issues are available. In general, Calscience reports contain the following information.

Analytical Data

Analytical data is reported by sample identification (both client and laboratory) and test. Pertinent information including date(s) sampled, received, prepared, and analyzed; any required data qualifiers are included on each results page. The reporting limit for each method analyte is also listed. Additional data may include Method Detection Limits (MDLs).

QC Data

A QC Summary is provided with each final report. Unless otherwise specified in a QAPP or requested by the client, QC Summaries include results for method blanks, matrix spikes, matrix spike duplicates, and surrogate spikes. Laboratory control sample and method blank surrogates are routinely included if matrix interference results in a QC outlier. The effective control limits for the reported QC values are also provided on the QC Summary as well as explanations for any QC outliers. Case Narratives may be included as appropriate.

As required for the project, data reports from “results only” through “full CLP” will be generated and provided. Included in this range are reports for the major DoD programs including NFESC, AFCEE, and USACE.

Methodology

References for the preparative and analytical methodology employed is included on all preliminary or final analytical reports.

Signatory

Final reports are ready for release to the client following review and approval by the Project Manager, as evidenced by his/her signature on the final report cover page.

Preliminary Data

Upon client request, preliminary data shall be released prior to completion of a full QC review. Preliminary data is subject to change pending QC review and, therefore, shall be clearly marked as “Preliminary, QC Pending” and not include a signature of approval. This qualification is provided as notification to the client that the data review process has not been completed yet and that the data is subject to possible modification resulting therefrom.

Revised Data

Analytical reports that have been revised for any reason from the original sent report shall be noted as being revised with a report note, case narrative or indication as to the revision.

Formatting

At a minimum, an analytical report shall consist of the Report Cover Page, Analytical Results, QA/QC Data (Default), Footnotes/Comments Page, Sample Receipt Form and COC. Paginated reports shall be employed for all reports unless used for non-NELAP analysis.

w) A Table of Contents and applicable lists of references and glossaries, and appendices.

5.3 Audits

5.3.1 Internal Audits

The laboratory arranges streamlined quarterly and comprehensive annual internal audits to verify that its operations continue to comply with the requirements of the laboratory's said quality system. The quality assurance officer or the Quality Assurance Assistant plans and organizes audits as required by a predetermined schedule and requested by management. The Quality Assurance Assistant, independent of the activity to be audited, will carry out such audits. Personnel do not audit their own activities except when it can be demonstrated that an effective audit will be carried out. Where the audit findings cast doubt on the correctness or validity of the laboratory's calibrations or test results, the laboratory takes immediate corrective action and immediately notifies, in writing, any client whose work was involved.

Any outside audit findings will also be included in the Internal Audits.

5.3.2 Managerial Review

Calscience management conducts an annual review of its quality system and its testing and calibration activities to ensure its continuing suitability and effectiveness and to introduce any necessary changes or improvements in the quality system and laboratory operations. This review takes account of reports from managerial and supervisory personnel, the outcome of recent internal audits, assessments by external bodies, the results of inter-laboratory comparisons or proficiency tests, any changes in the volume and type of work undertaken, feedback from clients, corrective actions, and other relevant factors. The laboratory shall have a procedure for review by management, and maintain records of review findings and actions.

5.3.3 Audit Review

All audit and review findings and any corrective actions that arise from them are documented. The laboratory management ensures that these actions are discharged within the agreed time frame as indicated in the quality manual and/or SOPs.

5.3.4 Performance Audits

In addition to periodic audits, the laboratory ensures the quality of results provided to clients by implementing checks to monitor the quality of the laboratory's analytical activities. Examples of such checks are:

- a) Internal quality control procedures using statistical techniques (see Section 5.4 below);
- b) Participation in proficiency testing or other interlaboratory comparisons;
- c) Use of certified reference materials and/or in-house quality control using secondary reference materials as specified in Calscience QSM Section 5.4;
- d) Replicate testing using the same or different test methods;
- e) Re-testing of retained samples;
- e) Correlation of results for different but related analysis of a sample (for example, total phosphorus should be greater than or equal to orthophosphate).

5.3.5 Corrective / Preventive Actions

- a) In addition to providing acceptance criteria and specific protocols for corrective/preventive actions in SOP-T022, the laboratory implements general procedures to be followed to determine when departures from documented policies, procedures and quality control have occurred. These procedures include but are not limited to the following:
 - 1) Identify the individual(s) responsible for assessing each QC data type;
 - 2) Identify the individual(s) responsible for initiating and/or recommending corrective/preventive actions;
 - 3) Define how the analyst shall treat a data set if the associated QC measurements are unacceptable;
 - 4) Specify how out-of-control situations and subsequent corrective actions are to be documented; and
 - 5) Specify procedures for management (including the QA officer) to review corrective/preventive action reports.
- b) To the extent possible, sample results are reported only if all quality control measures are acceptable. If a quality control measure is found to be out of control, and the data are to be reported, all samples associated with the failed quality control measure are reported with the appropriate data qualifier(s).

5.4 Essential Quality Control Procedures

These general quality control principles apply, where applicable, to all testing at Calscience. The manner in which each is implemented is dependent on the types of tests performed by the laboratory and is further described in Appendix D and in SOP-T020 (Internal Quality Control Checks). The standards for any given test type assures that the applicable principles are addressed:

- a) All laboratories have detailed written protocols in place to monitor the following quality controls:

- 1) Positive and negative controls (blanks, spikes, reference toxicants, etc.) to monitor tests;
 - 2) Tests to define the variability and/or repeatability of the laboratory results such as replicates;
 - 3) Measures to assure the accuracy of the test method including calibration and/or continuing calibrations, use of certified reference materials, proficiency test samples, or other measures;
 - 4) Measures to evaluate test method capability, such as detection limits and quantitation limits or range of applicability such as linearity;
 - 5) Selection of appropriate formulae to reduce raw data to final results such as regression analysis, comparison to internal/external standard calculations, and statistical analyses;
 - 6) Selection and use of reagents and standards of appropriate quality;
 - 7) Measures to assure the selectivity of the test for its intended purpose; and
 - 8) Measures to assure constant and consistent test conditions (both instrumental and environmental) where required by the test method, such as temperature, humidity, light, or specific instrument conditions.
- b) All quality control measures are assessed and evaluated on an on-going basis, and quality control acceptance criteria are used to determine the usability of the data. (See Appendix D.)
- c) The laboratory has procedures for the development of acceptance/rejection criteria where no method or regulatory criteria exist. (See Calscience QSM Section 11.2, Sample Acceptance Policy.)
- d) The quality control protocols specified in the method manual (Calscience QSM Section 10.1.2) is followed. Calscience ensures that the essential standards outlined in NELAC 5, Appendix D, or mandated methods or regulations (whichever are more stringent) are incorporated into the method manuals. When it is not apparent which is more stringent the QC in the mandated method or regulations is to be followed.

The essential quality control measures for testing are found in Appendix D.

6.0 PERSONNEL

6.1 General Requirements for Laboratory Staff

Calscience's testing departments have a sufficient level of personnel with the necessary education, training, technical knowledge and experience to perform the assigned functions.

All personnel are responsible for complying with all quality assurance/quality control requirements that pertain to their organizational/technical function. Each technical staff member must have a combination of experience and education to adequately demonstrate a specific knowledge of their particular function and a general knowledge of laboratory operations, test methods, quality assurance/quality control procedures and records management.

6.2 Laboratory Management Responsibilities

In addition to Calscience QSM Section 4.2.d, the laboratory management:

- a) Defines the minimum level of qualification, experience and skills necessary for all positions in the laboratory. In addition to education and/or experience, basic laboratory skills such as using a balance and quantitative techniques, are considered.
- b) Ensures that all technical laboratory staff members demonstrate capability in the activities for which they are responsible. Such demonstration is documented (See Appendix C).

Note: In departments with specialized “work cells” (a well-defined group of analysts that together perform the method analysis), the group as a unit meets the above criteria and this demonstration is fully documented.

- c) Ensures that the training of each member of the technical staff is kept up-to-date (on-going) by the following:
 - 1) Keeping evidence on file that demonstrates that each employee has read, understood, and is using the latest version of the laboratory's in-house quality documentation that relates to his/her job responsibilities.
 - 2) Documenting training courses or workshops on specific equipment, analytical techniques, or laboratory procedures.
 - 3) Documenting employee attendance at training courses on ethical and legal responsibilities including the potential punishments and penalties for improper, unethical or illegal actions. Keeping on file evidence that demonstrates that each employee has read, acknowledges, and understands their personal ethical and legal responsibilities including the potential punishments and penalties for improper, unethical or illegal actions.
 - 4) Maintains up-to-date analyst training records that contain a certification that technical personnel have read, understood and agreed to perform the most recent version of the test method (the approved method or standard operating procedure as defined by the laboratory document control system, Calscience QSM Section 5.2.d) and documentation of continued proficiency by at least one of the following once per year:
 - i. Acceptable performance of a blind sample (single blind to the analyst);
 - ii. Another demonstration of capability;
 - iii. Successful analysis of a blind performance sample on a similar test method using the same technology (e.g., GC/MS volatiles by purge and trap for Methods 524.2, 624, or 5035/8260) would only require documentation for one of the test methods;
 - iv. At least four consecutive laboratory control samples with acceptable levels of precision and accuracy;
 - v. If i-iv cannot be performed, analysis of authentic samples with results statistically indistinguishable from those obtained by another trained analyst.
- d) Documents all analytical and operational activities of the laboratory;
- e) Supervises all personnel employed by the laboratory;

- f) Ensures that all sample acceptance criteria (Calscience QSM Section 11.0) are verified and that samples are logged into the sample tracking system and properly labeled and stored.
- g) Documents the quality of all data reported by the laboratory.
- h) Develops a proactive program for the prevention and detection of improper, unethical, or illegal actions. Components of this program could include: internal proficiency testing (single and double blind); post-analysis electronic and magnetic tape audits; effective reward program to improve employee vigilance and co-monitoring; and separate SOPs identifying appropriate and inappropriate laboratory and instrument manipulation practices.

6.3 Records

Records on the relevant qualifications, training, skills and experience of the technical personnel are maintained by the laboratory (see Calscience QSM Section 6.2.c), including records on demonstrated proficiency for each laboratory test method, such as the criteria outlined in Calscience QSM Section 10.2.1 for chemical testing.

7.0 PHYSICAL FACILITIES – ACCOMMODATION AND ENVIRONMENT

7.1 Environment

- a) Laboratory accommodations, test areas, energy sources, lighting, heating and ventilation are such that they facilitate proper performance of tests.
- b) The environment in which these activities are undertaken does not invalidate the results or adversely affect the required accuracy of the measurements. Particular care shall be taken when such activities are undertaken at sites other than the permanent laboratory premises.
- c) The laboratory shall provide for the effective monitoring, control and recording of environmental conditions as appropriate. Such environmental conditions may include biological sterility, dust, electromagnetic interference, humidity, main voltage, temperature, and sound and vibration levels.
- d) In instances where monitoring or control of any of the above-mentioned items is specified in a test method or by regulation, the laboratory meets and documents adherence to the laboratory facility requirements.

7.2 Work Areas

- a) There is effective separation between neighboring areas when the activities therein are incompatible including volatile organic chemicals handling areas.
- b) Access to and use of all areas affecting the quality of these activities are defined and controlled.
- c) Adequate measures are taken to ensure good housekeeping in the laboratory and to ensure that any contamination does not adversely affect data quality.
- d) Workspaces are available to ensure an unencumbered work area. Work areas include:
 - 1) Access and entryways to the laboratory;
 - 2) Sample receipt areas;

- 3) Sample storage areas;
- 4) Chemical and waste storage areas; and
- 5) Data handling and storage areas.

8.0 EQUIPMENT AND REFERENCE MATERIALS

- a) Calscience is furnished with all items of equipment (including reference materials) required for the correct performance of tests for which accreditation is maintained. Note that Calscience does not use equipment outside its permanent control.
- b) All equipment is properly maintained, inspected, and cleaned. Maintenance procedures are documented.
- c) Any equipment item that has been subjected to overloading or mishandling, or that gives suspect results, or has been shown by verification or otherwise to be defective, is taken out of service, clearly identified and wherever possible stored at a specified place until it has been repaired and shown by calibration, verification or test to perform satisfactorily. The laboratory shall examine the effect of this defect on previous calibrations or tests.
- d) When appropriate, each item of equipment, including reference materials, is labeled, marked, or otherwise identified to indicate its calibration status.
- e) Records are maintained of each major item of equipment and all reference materials significant to the tests performed. These records include documentation on all routine and non-routine maintenance activities in assigned log books and reference material verifications.

The records include:

- 1) The name of the item of equipment;
- 2) The manufacturer's name, type identification, and serial number or other unique identification;
- 3) Date received and date placed in service (if available);
- 4) Current location, where appropriate;
- 5) If available, condition when received (e.g., new, used, reconditioned);
- 6) Copy of the manufacturer's instructions, where available;
- 7) Dates and results of calibrations and/or verifications and date of the next calibration and/or verification;
- 8) Details of maintenance carried out to date and planned for the future; and
- 9) History of any damage, malfunction, modification or repair.

9.0 MEASUREMENT TRACEABILITY AND CALIBRATION

9.1 General Requirements

All measuring operations and testing equipment having an effect on the accuracy or validity of tests are calibrated and/or verified before being put into service and on a continuing basis. The laboratory has an established program for the calibration and verification of its measuring and test equipment. This includes balances, thermometers and control standards.

9.2 Traceability of Calibration

- a) The overall program of calibration and/or verification and validation of equipment is designed and operated so as to ensure that measurements made by the laboratory are traceable to national standards of measurement.
- b) Calibration certificates indicate the traceability to national standards of measurement and provide the measurement results and associated uncertainty of measurement and/or a statement of compliance with an identified metrological specification. The laboratory maintains records of all such certification in the QA office.
- c) Where traceability to national standards of measurement is not applicable, the laboratory provides satisfactory evidence of correlation of results, for example, by participation in a suitable program of interlaboratory comparisons, proficiency testing, or independent analysis.

9.3 Reference Standards

- a) Reference standards of measurement held by the laboratory (such as Class S or equivalent weights, or traceable thermometers) are used for calibration only and for no other purpose, unless it can be demonstrated that their performance as reference standards has not been invalidated. A body that can provide traceability calibrates reference standards of measurement. Where possible, this traceability is to a national standard of measurement.
- b) There is a program of calibration and verification for reference standards.
 - i. Two weeks prior to their date of calibration expiration, individual thermometers are removed from service and replaced by newly calibrated units from the supplier.
 - ii. Calscience keeps two sets of Class S weights on hand for use in the laboratory. One set is used for daily calibration checks, and the second set is kept for back up use should the first set be damaged, lost or otherwise compromised. The second set of weights is also placed in service when the daily use set is shipped off site for recalibration.
 - iii. Analytical balances are serviced and calibrated on a routine, annual schedule.
- c) Where relevant, reference standards and measuring and testing equipment are subjected to in-service checks between calibrations and verifications. Reference materials are traceable. Where possible, traceability is to national or international standards of measurement, or to national or international standard reference materials.

9.4 Calibration

Calibration requirements are divided into two parts: (1) requirements for analytical support equipment, and (2) requirements for instrument calibration. In addition, the requirements for instrument calibration are divided into initial instrument calibration and continuing instrument calibration verification.

9.4.1 Support Equipment

These standards apply to all devices that may not be the actual test instrument, but are necessary to support laboratory operations. These include but are not limited to: balances, ovens, refrigerators, freezers, incubators, water baths, temperature measuring devices (including thermometers and thermistors), thermal/pressure sample preparation devices and volumetric dispensing devices (such as Eppendorf®, or automatic dilutor/dispensing devices) if quantitative results are dependent on their accuracy, as in standard preparation and dispensing or dilution into a specified volume.

- a) All support equipment is maintained in proper working order. The records of all repair and maintenance activities, including service calls is kept.
- b) All support equipment is calibrated or verified at least annually, using NIST traceable references when available, over the entire range of use. The results of such calibration are within the specifications required of the application for which this equipment is used or:
 - 1) The item is removed from service until repaired; or
 - 2) The laboratory maintains records of established correction factors to correct all measurements.
- c) Raw data records are retained to document equipment performance.
- d) Prior to use on each working day, balances, ovens, refrigerators, freezers, and water baths are checked in the expected use range, with NIST traceable references where available. The acceptability for use or continued use is according to the needs of the analysis or application for which the equipment is being used.
- e) Mechanical volumetric dispensing devices including burettes (except Class A glassware) is checked for accuracy on at least a quarterly use basis. Glass microliter syringes are to be considered in the same manner as Class A glassware, comes with a certificate attesting to established accuracy or the accuracy is initially demonstrated and documented by the laboratory.

9.4.2 Instrument Calibration

This manual specifies the essential elements that define the procedures and documentation for initial instrument calibration and continuing instrument calibration verification to ensure that the data are of known quality and be appropriate for a given regulation or decision. This manual does not specify detailed procedural steps (“how to”) for calibration, but establishes the essential elements for selection of the appropriate technique(s). This approach allows flexibility and permits the employment of a wide variety of analytical procedures and statistical approaches currently applicable for calibration. If more stringent standards or requirements are included in a mandated test method or by regulation, the laboratory demonstrates that such requirements are met. If it is not apparent which standard is more stringent, then the requirements of the regulation or mandated test method are to be followed.

Note: In the following sections, initial instrument calibration is directly used for quantitation and continuing instrument calibration verification is used to confirm the continued validity of the initial calibration.

9.4.2.1 Initial Instrument Calibrations

The following items are essential elements of initial instrument calibration:

- a) The details of the initial instrument calibration procedures including calculations, integrations, acceptance criteria and associated statistics are included or referenced in the test method SOP. When initial instrument calibration procedures are referenced in the test method, the referenced material is retained by the laboratory and is available for review.
- b) Sufficient raw data records are retained to permit reconstruction of the initial instrument calibration, e.g., calibration date, test method, instrument, analysis date, each analyte name, analyst's initials or signature; concentration and response, calibration curve or response factor; or unique equation or coefficient used to reduce instrument responses to concentration.
- c) Sample results are quantitated from the initial instrument calibration and may not be quantitated from any continuing instrument calibration verification.
- d) All initial instrument calibrations is verified with a standard obtained from a second manufacturer or lot. Traceability shall be to a national standard, when available.
- e) Criteria for the acceptance of an initial instrument calibration is established, e.g., correlation coefficient or relative percent difference. The criteria used is appropriate to the calibration technique employed.
- f) Results of samples not bracketed by initial calibration standards (within calibration range) are reported as having less certainty, e.g., defined qualifiers or flags or explained in the case narrative. As determined by the method, the lowest calibration standard is at or above the detection limit.
- g) If the initial instrument calibration results are outside established acceptance criteria, corrective actions are performed. Data associated with an unacceptable initial instrument calibration is not reported.
- h) Calibration standards include concentrations at or below the regulatory limit/decision level, if the laboratory knows these limits/levels, unless these concentrations are below the laboratory's demonstrated detection limits (See Calscience QSM Section Appendix D.1.4 Detection Limits).
- i) If a reference or mandated method does not specify the number of calibration standards, the minimum number is two, not including blanks or a zero standard. The laboratory's standard operating procedure defines the number of points for establishing the initial instrument calibration.

9.4.2.2 Continuing Instrument Calibration Verification

When an initial instrument calibration is not performed on the day of analysis, the validity of the initial calibration is verified prior to sample analyses by a continuing instrument calibration verification with each analytical batch. The following items are essential elements of continuing instrument calibration verification:

- a) The details of the continuing instrument calibration procedure, calculations and associated statistics must be included or referenced in the test method SOP.
- b) A continuing instrument calibration verification must be repeated at the beginning and end of each analytical batch. The concentrations of the calibration verification shall be varied within the established calibration range. If an internal standard is used, only one continuing instrument calibration verification must be analyzed per analytical batch.
- c) Sufficient raw data records must be retained to permit reconstruction of the continuing instrument calibration verification, e.g., test method, instrument, analysis date, each analyte name, concentration and response, calibration curve or response factor, or unique equations or coefficients used to

convert instrument responses into concentrations. Continuing calibration verification records must explicitly connect the continuing verification data to the initial instrument calibration.

- d) Criteria for the acceptance of a continuing instrument calibration verification must be established, e.g., relative percent difference.
- e) If the continuing instrument calibration verification results obtained are outside established acceptance criteria, corrective actions must be performed. If routine corrective action procedures fail to produce a second (consecutive and immediate) calibration verification within acceptance criteria, then the laboratory shall demonstrate performance after corrective action with two consecutive successful calibration verifications, or a new instrument calibration must be performed. If the laboratory has not demonstrated acceptable performance, sample analyses shall not occur until a new initial calibration curve is established and verified.

As an exception, sample data associated with an unacceptable calibration verification may be reported as qualified data under the following special conditions:

- i. When the acceptance criteria for the continuing calibration verification are exceeded high, i.e., high bias and there are associated samples that are non-detects, then those non-detects may be reported. Otherwise the samples affected by the unacceptable calibration verification are reanalyzed after a new calibration curve has been established, evaluated and accepted.
- ii. When the acceptance criteria for the continuing calibration verification are exceeded low, i.e., low bias, those sample results may be reported if they exceed a maximum regulatory limit/decision level. Otherwise the samples affected by the unacceptable verification are reanalyzed after a new calibration curve has been established, evaluated and accepted.

10.0 TEST METHODS AND STANDARD OPERATING PROCEDURES

10.1 Methods Documentation

- a) The laboratory has documented instructions on the use and operation of all relevant equipment, on the handling and preparation of samples and for calibration and/or testing, where the absence of such instructions could jeopardize the calibrations or tests.
- b) All instructions, standards, manuals, and reference data relevant to the work of the laboratory are maintained up-to-date and be readily available to the staff.

10.1.1 Standard Operating Procedures (SOPs) Administrative

Calscience maintains standard operating procedures that accurately reflect all phases of current laboratory activities such as instrument operation, assessing data integrity, corrective actions, handling customer complaints, reporting of test results, etc.

- a) These documents, for example, may be equipment manuals provided by the manufacturer or internally written documents.
- b) The test methods may be copies of published methods as long as any changes or selected options in the methods are documented and included in the SOP (See 10.1.2.)
- c) Copies of all SOPs are accessible to all personnel.

- d) The SOPs are organized.
- e) Each SOP clearly indicates the effective date of the document, the revision number and the signatures of the approving authorities.

10.1.2 Standard Operating Procedures (SOPs) Analytical

- a) The laboratory has and maintains SOPs for each accredited analyte or test method.
- b) This SOP may consist of copies of published or referenced test methods or standard operating procedures that have been written by the laboratory. In cases where modifications to the published method have been made by the laboratory or where the referenced test method is ambiguous or provides insufficient detail, these changes or clarifications are clearly described. Each test method includes or references where applicable:
 - 1) Identification of the test method;
 - 2) Applicable matrix or matrices;
 - 3) Detection limit;
 - 4) Scope and application, including components to be analyzed;
 - 5) Summary of the test method;
 - 6) Definitions;
 - 7) Interferences;
 - 8) Safety;
 - 9) Equipment and supplies;
 - 10) Reagents and standards;
 - 11) Sample collection, preservation, shipment, and storage;
 - 12) Quality control;
 - 13) Calibration and standardization;
 - 14) Procedure;
 - 15) Calculations;
 - 16) Method performance;
 - 17) Pollution prevention;
 - 18) Data assessment and acceptance criteria for quality control measures;
 - 19) Corrective actions for out-of-control data;
 - 20) Contingencies for handling out-of-control or unacceptable data;
 - 21) Waste management;
 - 22) References; and
 - 23) Any tables, diagrams, flowcharts, and validation data.

Laboratory procedures other than preparative or analytical procedure may use a shortened format as outlined in SOP T001.

10.2 Exceptionally Permitting Departures from Documented Policies / Procedures

- a) If it is necessary to depart from a documented procedure or policy due to circumstances outside of Calscience's control or due to conditions encountered while preparing or analyzing a sample, the following will be documented.
 - 1) The nature of the exception
 - 2) How the data or procedure may be impacted
 - 3) Any Corrective Action that may be needed.
 - 4) Any approval from a client that may be required.
 - 5) Approval by management to report or proceed with the exception.
 - 6) A Case Narrative with the Final Report explaining the exception.

10.3 Test Methods

The laboratory uses appropriate test methods and procedures for all tests and related activities within its responsibility (including, as applicable, sample collection, sample handling, transport and storage, sample preparation and sample analysis). The method and procedures shall be consistent with the accuracy required, and with any standard specifications relevant to the calibrations or tests concerned.

- a) When the use of specific test methods for a sample analysis is mandated or requested, only those methods are used.
- b) Where test methods are employed that are not required, as in the Performance Based Measurement System approach, the methods are fully documented and validated (see Calscience QSM Section 10.2.1 and Appendix C), and are available to the client and other recipients of the relevant reports.

10.4 Demonstration of Capability

- a) Prior to acceptance and institution of any test method, satisfactory demonstration of method capability is required. (See Calscience QSM Section Appendix C and 6.2.b.) This demonstration does not test the performance of the method in real world samples, but in the applicable and available clean matrix (sample of a matrix in which no target analytes or interferences are present at concentrations that impact the results of a specific test method), e.g., water, solids and air. In addition, for analytes that do not lend themselves to spiking, the demonstration of capability may be performed using quality control samples.
- b) Continuing demonstration of method performance, as per the quality control requirements in Appendix D (such as laboratory control samples) is required.
- c) In cases where Calscience analyzes samples using a test method that has been in use by the laboratory before July 1999, and there have been no significant changes in instrument type, personnel or test method, the continuing demonstration of method performance and the analyst's documentation of continued proficiency shall be acceptable. The laboratory shall have records on file to demonstrate that an initial demonstration of capability is not required.
- d) In all cases, the appropriate forms, such as the Certification Statement (Appendix C), is completed and retained by the laboratory to be made available upon request. The laboratory retains all associated supporting data necessary to reproduce the analytical results summarized in the Certification Statement. (See Appendix C for an example of a Certification Statement.)
- e) Demonstration of capability is completed each time there is a significant change in instrument type, personnel, or test method.
- f) In departments with specialized "work cell(s)" (a group consisting of analysts with specifically defined tasks that together perform the test method), the group as a unit must meet the above criteria and this demonstration of capability is fully documented.
- g) When a work cell is employed, and the members of the cell change, the new employee(s) must work with an experienced analyst in that area of the work cell where they are employed. This new work cell must demonstrate acceptable performance through acceptable continuing performance checks (appropriate sections of Appendix D, such as laboratory control samples). Such performance is documented and the four preparation batches following the change in personnel must not result in the failure of any batch acceptance criteria, e.g., method blank and laboratory control sample, or the

demonstration of capability must be repeated. In addition, if the entire work cell is changed or replaced, the new work cell must perform the demonstration of capability (Appendix C).

- h) Performance of the work cell is linked to the training records of the individual members of the work cell (See Calscience QSM Section 6.2).

10.5 Sample Aliquots

Where sampling (as in obtaining sample aliquots from a submitted sample) is carried out as part of the test method, the laboratory shall use documented procedures and appropriate techniques to obtain representative subsamples. Reference SOP M230 "Homogenization and Compositing of Solid, Soil and Sediment sample" for further guidance.

10.6 Data Verification

Calculations and data transfers are subject to appropriate checks.

- a) The laboratory has Standard Operating Procedures that ensure that the reported data are free from transcription and calculation errors.
- b) The laboratory has Standard Operating Procedures that ensure that all quality control measures are reviewed, and evaluated before data are reported.
- c) The laboratory has Standard Operating Procedures that address manual calculations including manual integrations.

10.7 Documentation and Labeling of Standards and Reagents

Documented procedures exist for the purchase, receipt and storage of consumable materials used for the technical operations of the laboratory.

- a) The laboratory retains records for all standards, reagents and media including the manufacturer/vendor, the manufacturer's Certificate of Analysis or purity (if supplied), the date of receipt, recommended storage conditions, and an expiration date after which the material is not used, unless the laboratory verifies its suitability for testing use.
- b) Original containers (such as those provided by the manufacturer or vendor) are labeled with an expiration date.
- c) Records are maintained on reagent and standard preparation. These records indicate traceability to purchased stocks or neat compounds, reference to the method of preparation, date of preparation, expiration date and preparer's initials.
- d) All containers of prepared reagents and standards bear a unique identifier and expiration date and are linked to the documentation requirements in Calscience QSM Section 10.5.c above.

10.8 Computers and Electronic Data Related Requirements

Where computers, automated equipment, or microprocessors are used for the capture, processing, manipulation, recording, reporting, storage or retrieval of test data, Calscience ensures that:

- a) All requirements of the NELAC Standard (i.e., Chapter 5 of NELAC) are met;
- b) Computer software is tested and documented to be adequate for use, e.g., internal audits, personnel training, focus point of QA and QC;

- c) Procedures are established and implemented for protecting the integrity of data. Such procedures include, but are not limited to, integrity of data entry or capture, data storage, data transmission and data processing;
- d) Computer and automated equipment are maintained to ensure proper functioning and provided with the environmental and operating conditions necessary to maintain the integrity of calibration and test data; and
- e) It establishes and implements appropriate procedures for the maintenance of security of data including the prevention of unauthorized access to, and the unauthorized amendment of, computer records.

11.0 SAMPLE HANDLING, SAMPLE ACCEPTANCE POLICY AND SAMPLE RECEIPT

While Calscience does not have control of field sampling activities, the following are essential to ensure the validity of the laboratory's data.

11.1 Sample Tracking

- a) The laboratory has a documented system for uniquely identifying the items to be tested, to ensure that there can be no confusion regarding the identity of such items at any time. This system includes identification for all samples, subsamples and subsequent extracts and/or digestates. The laboratory assigns a unique identification (ID) code to each sample container received in the laboratory. (The use of container shape, size, or other physical characteristic, such as amber glass, or purple top, is not an acceptable means of identifying the sample.)
- b) This laboratory code is maintained as an unequivocal link with the unique field ID code assigned each container.
- c) The laboratory ID code is placed on the sample container as a durable label.
- d) The laboratory ID code is entered into the laboratory records (see Calscience QSM Section 11.3.d) and is the link that associates the sample with related laboratory activities such as sample preparation or calibration.
- e) In cases where the sample collector and analyst are the same individual or the laboratory pre-assigns numbers to sample containers, the laboratory ID code may be the same as the field ID code.

11.2 Sample Acceptance Policy

The laboratory has a written sample acceptance policy that clearly outlines the circumstances under which samples are accepted or rejected. Data from any samples that do not meet the following criteria are flagged in an unambiguous manner, and the nature of the variation is clearly defined. The sample acceptance policy is available to sample collection personnel and includes, but is not limited to, the following areas of concern:

- a) Proper, full, and complete documentation, that includes sample identification, the location, date and time of collection, collector's name, preservation type, sample type and any special remarks concerning the sample;
- b) Proper sample labeling that includes a unique identification and a labeling system for the samples with requirements concerning the durability of the labels (water resistant) and the use of indelible ink;

- c) Use of appropriate sample containers;
- d) Adherence to specified holding times;
- e) Adequate sample volume. Sufficient sample volume must be available to perform the necessary tests; and
- f) Procedures to be used when samples show signs of damage, contamination or inadequate preservation.
- g) Samples are NOT accepted if classified as extremely hazardous, reference section 5.2 k for examples.

11.3 Sample Receipt Protocols

- a) Upon receipt, the condition of the sample, including any abnormalities or departures from standard condition as prescribed in the relevant test method, is recorded. All items specified in Calscience QSM Section 11.2 above are checked.
 - 1) All samples that require cold temperature preservation are considered acceptable if the arrival temperature is within 2°C of the required temperature or the method-specified range. For samples with a specified temperature of 4°C, samples with a temperature ranging from just above the freezing temperature of water to 6°C shall be acceptable. Samples that are hand delivered to the laboratory immediately after collection may not meet these criteria. In these cases, the samples shall be considered acceptable if there is evidence that the chilling process has begun, such as arrival on ice.
 - 2) The laboratory shall implement procedures for checking chemical preservation using readily available techniques, such as pH or free chlorine, prior to or during sample preparation or analysis.

With the exception of residual chlorine measurements in aquatic toxicity samples, certain measurements, such as pH, are performed and recorded just prior to analysis.
- b) The results of all checks are recorded.
- c) When there is any doubt as to the item's suitability for testing, when the sample does not conform to the description provided, and when the test required is not fully specified, the laboratory makes every attempt to consult the client for further instruction before proceeding. The laboratory establishes whether the sample has received all necessary preparation, or whether sample preparation has yet to be performed. If the sample does not meet the sample receipt acceptance criteria listed in this standard, the laboratory:
 - 1) Retains correspondence and/or records of conversations concerning the final disposition of rejected samples; or
 - 2) Fully documents any decision to commence with the analysis of samples not meeting acceptance criteria.
 - i. The condition of these samples is, at a minimum, noted on the chain of custody record or transmittal form, and laboratory receipt documents.

- ii. The analysis data is/are appropriately "qualified" on the final report.
- d) The laboratory utilizes a permanent chronological record such as a logbook or electronic database to document receipt of all sample containers.
- 1) This sample receipt log records the following:
 - i. Client/Project Name;
 - ii. Date and time of laboratory receipt;
 - iii. Unique laboratory ID code (see Calscience QSM Section 11.1); and
 - iv. Signature or initials of the person making the entries.
 - 2) During the login process, the following information is linked to the log record or included as a part of the log. If such information is recorded/documented elsewhere, that document becomes part of the laboratory's permanent records, easily retrievable upon request, and readily available to individuals who will process the sample. Note: The placement of the laboratory ID number on the sample container is not considered a permanent record.
 - i. The field ID code that identifies each container is linked to the laboratory ID code in the sample receipt log.
 - ii. The date and time of sample collection is linked to the sample container and to the date and time of receipt in the laboratory.
 - iii. The requested analyses (including applicable approved test method numbers) are linked to the laboratory ID code.
 - iv. Any comments resulting from inspection for sample rejection are linked to the laboratory ID code.
- e) All documentation (i.e., memos or transmittal forms) that are conveyed to the laboratory by the sample submitter is retained.
- f) A complete chain of custody record form is maintained.

11.4 Storage Conditions

The laboratory has documented procedures and appropriate facilities to avoid deterioration, contamination, and damage to the sample during storage, handling, preparation, and testing; any relevant instructions provided with the item are followed. Where items must be stored or conditioned under specific environmental conditions, these conditions are maintained, monitored, and recorded.

- a) Samples are stored according to the conditions specified by preservation protocols:
- 1) Samples that require thermal preservation are stored under refrigeration at $\pm 2^\circ$ of the specified preservation temperature unless method-specified criteria exist. For samples with a specified storage temperature of 4°C , storage at a temperature above the freezing point of water to 6°C is acceptable.
 - 2) Samples are stored away from all standards, reagents, food, and other potentially contaminating sources. Samples are stored in such a manner to prevent cross contamination.

- b) Sample fractions, extracts, leachates, and other sample preparation products are stored according to Calscience QSM Section 11.4.a above or according to specifications in the test method.
- c) When a sample or portion of a sample needs to be held secure (for example, for reasons of record, safety or value, or to enable check calibrations or tests to be performed later), the laboratory has storage and security arrangements that protect the condition and integrity of the secured items or portions concerned.

11.5 Sample Disposal

The laboratory has standard operating procedures for the disposal of samples, digestates, leachates and extracts or other sample preparation products.

12.0 RECORDS

The laboratory maintains a record system to suit its particular circumstances and comply with any applicable regulations. The system produces unequivocal, accurate records that document all laboratory activities. The laboratory retains all original observations, calculations and derived data, calibration records and a copy of the test report for a minimum of five years.

There are two levels of sample handling: 1) sample tracking and 2) legal chain of custody protocols that are used for evidentiary or legal purposes. All essential requirements for sample tracking (e.g., chain of custody form) are outlined in Calscience QSM Sections 12.1, 12.2 and 12.3. Calscience has a written SOP that describes how it will carry out legal chain of custody for example, ASTM D 4840-95 and Manual for the Certification of Laboratories Analyzing Drinking Water, March 1997, Appendix A.

12.1 Record Keeping System and Design

The Calscience record keeping system allows historical reconstruction of all laboratory activities that produced the analytical data. The history of the sample is readily understood through the documentation. This includes inter-laboratory transfers of samples and/or extracts.

- a) The records include the identity of personnel involved in sampling, sample receipt, preparation, calibration or testing.
- b) All information relating to the laboratory facilities equipment, analytical test methods, and related laboratory activities, such as sample receipt, sample preparation, or data verification, are documented.
- c) The record keeping system facilitates the retrieval of all working files and archived records for inspection and verification purposes, e.g., set format for naming electronic files.
- d) All changes to records are signed or initialed by responsible staff. The reason for the signature or initials is clearly indicated in the records such as “sampled by,” “prepared by,” or “reviewed by.”
- e) All generated data, except those that are generated by automated data collection systems, are recorded directly, promptly, and legibly in permanent ink.
- f) Entries in records are not be obliterated by methods such as erasures, overwritten files or markings. All corrections to record-keeping errors are made by one line marked through the error. The individual making the correction signs (or initials) and dates the correction. These criteria also apply to electronically maintained records.

- g) Refer to 10.6 for Computer and Electronic Data.

12.2 Records Management and Storage

- a) All records (including those pertaining to calibration and test equipment), certificates and reports are safely stored, and held secure and in confidence to the client. NELAP-related records are available to the accrediting authority.
- b) All records, including those specified in Calscience QSM Section 12.3, are retained for a minimum of five years from generation of the last entry in the records. The laboratory maintains all information necessary for the historical reconstruction of data. Records stored only on electronic media are supported by the hardware and software necessary for their retrieval.
- c) Records that are stored or generated by computers or personal computers have hard copy or write-protected backup copies.
- d) The laboratory has an established record management system for control of laboratory notebooks, instrument logbooks, standards logbooks, and records for data reduction, validation storage and reporting.
- e) Access to archived information is documented with an access log. These records are protected against fire, theft, loss, environmental deterioration, vermin, and in the case of electronic records, electronic or magnetic sources.
- f) The laboratory has a plan to ensure that the records are maintained or transferred according to the clients' instructions (see 4.1.8.e of NELAC) in the event of Laboratory Transfer of Ownership, Going out of Business or Bankruptcy. In all cases, appropriate regulatory and state legal requirements concerning laboratory records will be followed. Reference SOP T-002 for detailed policies and procedures for handling of client records and data in these situations.

12.3 Laboratory Sample Tracking

12.3.1 Sample Handling

A record of all procedures to which a sample is subjected while in Calscience's possession is maintained. These include but are not limited to all records pertaining to:

- a) Sample preservation, including appropriateness of sample container and compliance with holding time requirement;
- b) Sample identification, receipt, acceptance or rejection, and log-in;
- c) Sample storage and tracking, including shipping receipts, sample transmittal forms (chain of custody form); and
- d) Documentation procedures for the receipt and retention of test items, including all provisions necessary to protect the integrity of samples.

12.3.2 Laboratory Support Activities

In addition to documenting all the above-mentioned activities, the following is retained:

- a) All original raw data, whether hard copy or electronic, for calibrations, samples and quality control measures, including analysts work sheets and data output records (chromatograms, strip charts, and other instrument response readout records);
- b) A written description or reference to the specific test method used, which includes a description of the specific computational steps used to translate parametric observations into a reportable analytical value;
- c) Copies of final reports;
- d) Archived standard operating procedures;
- e) Correspondence relating to laboratory activities for a specific project;
- f) All corrective/preventive action reports, audits and audit responses;
- g) Proficiency test results and raw data; and,
- h) Results of data review, verification, and cross-checking procedures.

12.3.3 Analytical Records

The essential information associated with analyses, such as strip charts, tabular printouts, computer data files, analytical notebooks, and run logs, include:

- a) Laboratory sample ID code;
- b) Date of analysis and time of analysis if the method-specified holding time is 72 hours or less, or when time critical steps are included in the analysis, e.g., extractions, and incubations;
- c) Instrument identification and instrument operating conditions/parameters (or reference to such data);
- d) Analysis type;
- e) All manual calculations e.g., manual integrations;
- f) Analyst's or operator's initials/signature;
- g) Sample preparation including cleanup, separation protocols, incubation periods or subculture, ID codes, volumes, weights, instrument printouts, meter readings, calculations, reagents;
- h) Sample analysis;
- i) Standard and reagent origin, receipt, preparation, and use;
- j) Calibration criteria, frequency and acceptance criteria;
- k) Data and statistical calculations, review, confirmation, interpretation, assessment and reporting conventions;
- l) Quality control protocols and assessment;

- m) Electronic data security, software documentation and verification, software and hardware audits, backups, and records of any changes to automated data entries; and
- n) Method performance criteria including expected quality control requirements.

12.3.4 Administrative Records

The following are maintained:

- a) Personnel qualifications, experience and training records;
- b) Records of demonstration of capability for each analyst; and
- c) A log of names, initials and signatures for all individuals who are responsible for signing or initialing any laboratory record.

13.0 LABORATORY REPORT FORMAT AND CONTENTS

The results of each test, or series of tests carried out by the laboratory must be reported accurately, clearly, unambiguously and objectively. The results normally reported in a test report and include all the information necessary for the interpretation of the test results and all information required by the method used. Some regulatory reporting requirements or formats, such as monthly operating reports may not require all items listed below, however, Calscience will provide all the required information to their client for use in preparing such regulatory reports.

- a) Except as discussed in 13.b, each report to an outside client includes at least the following information (those prefaced with “where relevant” are not mandatory):
 - 1) A title, e.g., "Analytical Report," or "Test Certificate," "Certificate of Results" or "Laboratory Results”;
 - 2) Name and address of laboratory, and location where the test was carried out if different from the address of the laboratory and phone number with name of contact person for questions;
 - 3) Unique identification of the certificate or report (such as serial number) and of each page, and the total number of pages;

This requirement may be presented in several ways:

- i. The total number of pages may be listed on the first page of the report as long as the subsequent pages are identified by the unique report identification and consecutive numbers, or
- ii. Each page is identified with the unique report identification, the pages are identified as a number of the total report pages (example: 3 of 10, or 1 of 20).

Other methods of identifying the pages in the report may be acceptable as long as it is clear to the reader that discrete pages are associated with a specific report, and that the report contains a specified number of pages.

- 4) Name and address of client, where appropriate and project name if applicable;

- 5) Description and unambiguous identification of the tested sample including the client identification code;
 - 6) Identification of test results derived from any sample that did not meet NELAC sample acceptance requirements such as improper container, holding time, or temperature;
 - 7) Date of receipt of sample, date and time of sample collection, date(s) of performance test, and time of sample preparation and/or analysis if the required holding time for either activity is less than or equal to 72 hours;
 - 8) Identification of the test method used, or unambiguous description of any nonstandard method used;
 - 9) If the laboratory collected the sample, reference to sampling procedure;
 - 10) Any deviations from (such as failed quality control), additions to or exclusions from the test method (such as environmental conditions), and any nonstandard conditions that may have affected the quality of results, and including the use and definitions of data qualifiers.
 - 11) Measurements, examinations and derived results, supported by tables, graphs, sketches, and photographs as appropriate, and any failures identified; identify whether data are calculated on a dry weight or wet weight basis; identify the reporting units such as µg/l or mg/kg;
 - 12) When required, a statement of the estimated uncertainty of the test results;
 - 13) A signature and title, or an equivalent electronic identification of the person(s) accepting responsibility for the content of the certificate or report (however produced), and date of issue;
 - 14) At the Calscience's discretion, a statement to the effect that the results relate only to the items tested or to the sample as received by the laboratory;
 - 15) At the Calscience's discretion, a statement that the certificate or report shall not be reproduced except in full, without the written approval of the laboratory;
 - 16) Clear identification of all test data provided by outside sources, such as subcontracted laboratories, clients, etc.; and
 - 17) Clear identification of numerical results with values outside of quantitation limits.
- b) Where the certificate or report contains results of tests performed by subcontractors, these results are clearly identified by subcontractor name or applicable accreditation number.
 - c) After issuance of the report, the laboratory report remains unchanged. Material amendments to a calibration certificate, test report or test certificate after issue may be made only in the form of a further document, or data transfer, including the statement "Supplement to Test Report or Test Certificate, serial number . . . [or as otherwise identified]", or equivalent form of wording. Such amendments meet all the relevant requirements of the NELAC Standard.
 - d) Calscience notifies clients promptly, in writing, of any event such as the identification of defective measuring or test equipment that casts doubt on the validity of results given in any calibration certificate, test report or test certificate or amendment to a report or certificate.
 - e) The laboratory will, where clients require transmission of test results by telephone, telex, facsimile or other electronic or electromagnetic means, follow documented procedures that ensure that the requirements of this Standard are met and that confidentiality is preserved.

- f) Calscience will certify that all its NELAC-certified test results reported meet all requirements of NELAC or provide reasons and/or justification if they do not.

14.0 SUBCONTRACTING ANALYTICAL SAMPLES

When Calscience subcontracts work whether because of unforeseen circumstances (e.g. workload, need for further expertise or temporary incapacity) or on a continuing basis (e.g. through client direction, contractual arrangement or permanent subcontracting), this work shall be placed with a laboratory accredited under NELAP for the tests to be performed or with a laboratory that meets applicable statutory and requirements for performing the tests and submitting the results of tests performed. The laboratory performing the subcontracted work shall be indicated in the final report.

- a) Calscience will advise its client via written, facsimile or e-mail notification of its intention to subcontract any portion of the testing to another party in cases when unforeseen circumstances occur. Calscience shall gain approval by the client preferably in writing, facsimile or via e-mail response.
- b) Calscience may subcontract samples on a continuing basis without written, facsimile or e-mail notification under the following (but not limited to) cases:
 - 1) Client direction or instruction
 - 2) Contractual specification or requirement
 - 3) Project historical precedent
- c) Calscience retains records demonstrating that the above requirements have been met.
- d) If the samples to be subcontracted are submitted to Calscience under special regulatory, agency or governmental accreditation, Example: Department of Defense (Navy), that have more comprehensive or differing quality criteria, Example: DoD QSM for Environmental Laboratories January 2006, then the subcontract laboratory MUST have certification for the subcontracted analysis from the same entity and MUST have undergone similar assessment as the primary laboratory for the subcontracted component. Written authorization from the client or authorizing body must be obtained prior to usage of each subcontract laboratory.

15.0 OUTSIDE SUPPORT SERVICES AND SUPPLIES

Calscience does not procure outside services and supplies, other than those referred to in this Manual.

16.0 INQUIRIES AND COMPLAINTS

Calscience SOP-T018 addresses the policies and procedures for the resolution of inquiries and complaints received from clients or other parties about the laboratory's activities. Where an inquiry or complaint, or any other circumstance, raises doubt concerning the laboratory's compliance with the laboratory's policies or procedures, or with the requirements of this manual or otherwise concerning the quality of the laboratory's calibrations or tests, the laboratory shall ensure that those areas of activity and responsibility involved are promptly audited in accordance with NELAC Section 5.3.1. Records of the complaint and subsequent actions are maintained and are available for audits.

NELAC APPENDICES

APPENDIX A - REFERENCES

NELAC Standards, Chapters 1-6. July 12, 2002, Effective July 01, 2004.

40 CFR Part 136, Appendix A, paragraphs 8.1.1 and 8.2.

American Association for Laboratory Accreditation April 1996. General Requirements for Accreditation.

“American National Standards Specification and Guidelines for Quality Systems for Environmental Data Collection and Environmental Technology Programs (ANSI/ASQC E-4),” 1994.

ASTM E1598-94 Conducting Early Seedling Growth Tests, American Society for Testing and Materials, West Conshocken, PA 1999.

ASTM E11676-97 Conducting a Laboratory Soil Toxicity Test with Lumbricid Earthworm *Eisenia foetida*, American Society for Testing and Materials, West Conshocken, PA 1999.

Catalog of Bacteria, American Type Culture Collection, Rockville, MD.

EPA 2185 - Good Automated Laboratory Practices, 1995 available at www.epa.gov/docs/etsdwe1/irm_galp/

EPA/600/3-89/013 Ecological Assessment of Hazardous Waste Sites, Office of Research and Development, Washington, DC, 1991.

EPA/503/8-91/001 Evaluation of Dredged Material Proposed for Ocean Disposal – Testing Manual. Office of Water, Washington, DC, 1991.

EPA/600/4-90/031 Manual for Evaluation of Laboratories Performing Aquatic Toxicity Tests, Office of Research and Development, Washington, DC, 1991.

EPA/600/3-88/029 Protocol for Short-term Toxicity Screening of Hazardous Wastes, Office of Research and Development, Washington, DC, 1991.

EPA/600/4-90/027F Methods for Measuring the Acute Toxicity of Effluents and Receiving Waters to Freshwater and Marine Organisms, 4th Ed., Office of Research and Development, Washington, DC, 1993.

EPA/823/B-98/004 Evaluation of Dredged Material Proposed for Discharge in Waters of the U.S. – Inland Testing Manual. Office of Water, Washington, DC, 1994.

EPA/600/R-94/025 Methods for Assessing the Toxicity of Sediment-associated Contaminants with Estuarine and Marine Amphipods, Office of Research and Development, Washington, DC, 1994.

EPA/600/R-94/024 Methods for Measuring the Toxicity and Bioaccumulation of Sediment-associated Contaminants with Freshwater Invertebrates, Office of Research and Development, Washington, DC, 1994.

EPA/600/4-91/002 Short-term Methods for Estimating the Chronic Toxicity of Effluents and Receiving Waters to Freshwater Organisms, 3rd Ed., Office of Research and Development, Washington, DC, 1994.

EPA/600/4-91/003 Short-term Methods for Estimating the Chronic Toxicity of Effluents and Receiving Water to Marine and Estuarine Organisms, 2nd Ed., Office of Research and Development, Washington, DC, 1994.

“Glossary of Quality Assurance Terms and Acronyms,” Quality Assurance Division, Office of Research and Development, USEPA.

“Guidance on the Evaluation of Safe Drinking Water Act Compliance Monitoring Results from Performance Based Methods,” September 30, 1994, Second draft.

International vocabulary of basic and general terms in metrology (VIM): 1984. Issued by BIPM, IEC, ISO and OIML.

ISO Guide 3534-1: “Statistics, vocabulary and symbols - Part 1: Probability and general statistical terms.”

ISO Guide 7218: Microbiology - General Guidance for Microbiological Examinations.

ISO Guide 8402: 1986. Quality – Vocabulary.

ISO Guide 9000: 1994. Quality management and quality assurance standards - Guidelines for selection and use.

ISO Guide 9001: 1994. Quality Systems - Model for quality assurance in design/development, production, installation and servicing

ISO Guide 9002: 1994. Quality systems - Model for quality assurance in production and installation.

ISO/IEC Guide 2: 1986. General terms and their definitions concerning standardization and related activities.

ISO/IEC 17025: 1999. General requirements for the competence of calibration and testing laboratories.

“Laboratory Biosafety Manual,” World Health Organization, Geneva, 1983.

Manual for the Certification of Laboratories Analyzing Drinking Water, Revision 4, EPA 815-B-97-001.

Manual of Method for General Bacteriology, Philipp Gerhard et al., American Society for Microbiology, Washington, D.C. 1981.

Performance Based Measurement System, EPA EMMC Method Panel, PBMS Workgroup, 1996.

APPENDIX B - GLOSSARY

The following definitions are used in the text of Quality Systems. In writing this document, the following hierarchy of definition references were used: ISO 8402, ANSI/ASQC E-4, EPA's Quality Assurance Division Glossary of Terms, and finally definitions developed by NELAC. The source of each definition, unless otherwise identified, is the Quality Systems Committee.

Acceptance Criteria: Specified limits placed on characteristics of an item, process, or service defined in requirement documents. (ASQC)

Accreditation: The process by which an agency or organization evaluates and recognizes a laboratory as meeting certain predetermined qualifications or standards, thereby accrediting the laboratory. In the context of the National Environmental Laboratory Accreditation Program (NELAP), this process is a voluntary one. (NELAC)

Accrediting Authority: The Territorial, State, or Federal agency having responsibility and accountability for environmental laboratory accreditation and which grants accreditation. (NELAC) [1.5.2.3]

Accuracy: The degree of agreement between an observed value and an accepted reference value. Accuracy includes a combination of random error (precision) and systematic error (bias) components which are due to sampling and analytical operations; a data quality indicator. (QAMS)

Analysis Duplicate: The second measurement of the target analyte(s) performed on a single sample or sample preparation.

Analyst: The designated individual who performs the "hands-on" analytical methods and associated techniques and who is the one responsible for applying required laboratory practices and other pertinent quality controls to meet the required level of quality. (NELAC)

Analytical Reagent (AR) Grade: Designation for the high purity of certain chemical reagents and solvents given by the American Chemical Society. (Quality Systems)

Assessment: The evaluation process used to measure or establish the performance, effectiveness, and conformance of an organization and/or its systems to defined criteria (to the standards and requirements of NELAC). (NELAC)

Audit: A systematic evaluation to determine the conformance to quantitative and qualitative specifications of some operational function or activity. (EPA-QAD)

Batch: Environmental samples, which are prepared and/or analyzed together with the same process and personnel using the same lot(s) of reagents. A **preparation batch** is composed of one to 20 environmental samples of the same NELAC-defined matrix, meeting the above-mentioned criteria and with a maximum time between the start of processing of the first and last sample in the batch to be 24 hours. An **analytical batch** is composed of prepared environmental samples (extracts, digestates or concentrates) which are analyzed together as a group. An analytical batch can include prepared samples originating from various environmental matrices and can exceed 20 samples. (NELAC Quality Systems Committee)

Blank: A sample that has not been exposed to the analyzed sample stream in order to monitor contamination during sampling, transport, storage or analysis. The blank is subjected to the usual analytical and measurement process to establish a zero baseline or background value and is sometimes used to adjust or correct routine analytical results. (ASQC)

Blind Sample: A sub-sample for analysis with a composition known to the submitter. The analyst/laboratory may know the identity of the sample but not its composition. It is used to test the analyst's or laboratory's proficiency in the execution of the measurement process. (NELAC)

Calibration: To determine, by measurement or comparison with a standard, the correct value of each scale reading on a meter or other device. The levels of the applied calibration standard should bracket the range of planned or expected sample measurements. (NELAC)

Calibration Curve: The graphical relationship between the known values, such as concentrations, of a series of calibration standards and their instrument response. (NELAC)

Calibration Method: A defined technical procedure for performing a calibration. (NELAC)

Calibration Standard: A substance or reference material used to calibrate an instrument. (QAMS)

Certified Reference Material (CRM): A reference material one or more of whose property values are certified by a technically valid procedure, accompanied by or traceable to a certificate or other documentation which is issued by a certifying body. (ISO Guide 30 - 2.2)

Chain of Custody Form: A record that documents the possession of the samples from the time of collection to receipt in the laboratory. This record generally includes: the number and types of containers; the mode of collection; collector; time of collection; preservation; and requested analyses. (NELAC)

Compromised Samples: Those samples which are improperly sampled, insufficiently documented (chain of custody and other sample records and/or labels), improperly preserved, collected in improper containers, or exceeding holding times when delivered to a laboratory. Under normal conditions compromised samples are not analyzed. If emergency situations require analysis, the results must be appropriately qualified. (NELAC)

Confirmation: Verification of the identity of a component through the use of an approach with a different scientific principle from the original method. These may include, but are not limited to:

- Second column confirmation;
- Alternate wavelength;
- Derivatization;
- Mass spectral interpretation;
- Alternative detectors; or
- Additional cleanup procedures. (NELAC)

Conformance: An affirmative indication or judgment that a product or service has met the requirements of the relevant specifications, contract, or regulation; also the state of meeting the requirements. (ANSI/ASQC E4-1994)

Corrective Action: The action taken to eliminate the causes of an existing nonconformity, defect or other undesirable situation in order to prevent recurrence. (ISO 8402)

Data Audit: A qualitative and quantitative evaluation of the documentation and procedures associated with environmental measurements to verify that the resulting data are of acceptable quality (i.e., that they meet specified acceptance criteria). (NELAC)

Data Reduction: The process of transforming raw data by arithmetic or statistical calculations, standard curves, concentration factors, etc., and collation into a more useable form. (EPA-QAD)

Deficiency: An unauthorized deviation from acceptable procedures or practices, or a defect in an item. (ASQC)

Demonstration of Capability: A procedure to establish the ability of the analyst to generate acceptable accuracy. (NELAC)

Desorption Efficiency: The mass of target analyte recovered from sampling media, usually a sorbent tube, divided by the mass of target analyte spiked on to the sampling media expressed as a percentage. Sample target analyte masses are usually adjusted for the desorption efficiency. (NELAC)

Detection Limit: The lowest concentration or amount of the target analyte that can be identified, measured, and reported with confidence that the analyte concentration is not a false positive value. See Method Detection Limit. (NELAC)

Document Control: The act of ensuring that documents (and revisions thereto) are proposed, reviewed for accuracy, approved for release by authorized personnel, distributed properly and controlled to ensure use of the correct version at the location where the prescribed activity is performed. (ASQC)

Duplicate Analyses: The analyses or measurements of the variable of interest performed identically on two subsamples of the same sample. The results from duplicate analyses are used to evaluate analytical or measurement precision but not the precision of sampling, preservation or storage internal to the laboratory. (EPA- QAD)

Holding Times (Maximum Allowable Holding Times): The maximum times that samples may be held prior to analysis and still be considered valid or not compromised. (40 CFR Part 136)

Inspection: An activity such as measuring, examining, testing, or gauging one or more characteristics of an entity and comparing the results with specified requirements in order to establish whether conformance is achieved for each characteristic. (ANSI/ ASQC E4-1994)

Internal Standard: A known amount of standard added to a test portion of a sample as a reference for evaluating and controlling the precision and bias of the applied analytical method. (NELAC)

Instrument Blank: A clean sample (e.g., distilled water) processed through the instrumental steps of the measurement process; used to determine instrument contamination. (EPA-QAD)

Laboratory: A body that calibrates and/or tests. (ISO 25)

Laboratory Control Sample (however named, such as laboratory fortified blank, spiked blank, or QC check sample): A sample matrix, free from the analytes of interest, spiked with verified known amounts of analytes or a material containing known and verified amounts of analytes. It is generally used to establish intra-laboratory or analyst-specific precision and bias or to assess the performance of all or a portion of the measurement system. (NELAC)

Laboratory Duplicate: Aliquots of a sample taken from the same container under laboratory conditions and processed and analyzed independently. (NELAC)

Limit of Detection (LOD): The lowest concentration level that can be determined by a single analysis and with a defined level of confidence to be statistically different from a blank. See also Method Detection Limit, Detection Limit, and Quantitation Limit. (Analytical Chemistry, 55, p. 2217, December 1983, modified)

Manager (however named): The individual designated as being responsible for the overall operation, all personnel, and the physical plant of the environmental laboratory. A supervisor may report to the manager. In some cases, the supervisor and the manager may be the same individual. (NELAC)

Matrix: The component or substrate that contains the analyte of interest. For purposes of batch and QC requirement determinations, the following matrix distinctions shall be used:

- Aqueous: Any aqueous sample excluded from the definition of Drinking Water matrix or Saline/Estuarine source. Includes surface water, groundwater, effluents, and TCLP or other extracts.
- Drinking Water: Any aqueous sample that has been designated a potable or potential potable water source.
- Saline/Estuarine: Any aqueous sample from an ocean or estuary, or other salt water source such as the Great Salt Lake.
- Non-aqueous Liquid: Any organic liquid with <15% settleable solids.
- Biological Tissue: Any sample of a biological origin such as fish tissue, shellfish, or plant material. Such samples shall be grouped according to origin.
- Solids: Includes soils, sediments, sludges and other matrices with >15% settleable solids.
- Chemical Waste: A product or by-product of an industrial process that results in a matrix not previously defined.
- Air: Whole gas or vapor samples including those contained in flexible or rigid wall containers and the extracted concentrated analytes of interest from a gas or vapor that are collected with a sorbent tube, impinger solution, filter or other device. (NELAC)

Matrix Spike (spiked sample or fortified sample): A sample prepared by adding a known mass of target analyte to a specified amount of matrix sample for which an independent estimate of target analyte concentration is available. Matrix spikes are used, for example, to determine the effect of the matrix on a method's recovery efficiency. (QAMS)

Matrix Spike Duplicate (spiked sample or fortified sample duplicate): A second replicate matrix spike prepared in the laboratory and analyzed to obtain a measure of the precision of the recovery for each analyte. (QAMS)

May: Denotes permitted action, but not required action. (NELAC)

Media: Material that supports the growth of a microbiological culture.

Method Blank: A sample of a matrix similar to the batch of associated samples (when available) that is free from the analytes of interest and is processed simultaneously with and under the same conditions as samples through all steps of the analytical procedures, and in which no target analytes or interferences are present at concentrations that impact the analytical results for sample analyses. (NELAC)

Method Detection Limit: The minimum concentration of a substance (an analyte) that can be measured and reported with 99% confidence that the analyte concentration is greater than zero and is determined from analysis of a sample in a given matrix containing the analyte. (40 CFR Part 136 Appendix B)

Must: Denotes a requirement that must be met. (Random House College Dictionary)

National Accreditation Database: The publicly accessible database listing the accreditation status of all laboratories participating in NELAP. (NELAC)

National Environmental Laboratory Accreditation Conference (NELAC): A voluntary organization of State and Federal environmental officials and interest groups purposed primarily to establish mutually acceptable standards for accrediting environmental laboratories. A subset of NELAP. (NELAC)

National Environmental Laboratory Accreditation Program (NELAP): The overall National Environmental Laboratory Accreditation Program of which NELAC is a part. (NELAC)

Negative Control: Measures taken to ensure that a test, its components, or the environment do not cause undesired effects, or produce incorrect test results. (NELAC)

Objective Evidence: Any documented statement of fact, other information, or record, either quantitative or qualitative, pertaining to the quality of an item or activity, based on observations, measures, or tests that can be verified. (ASQC)

Performance Audit: The routine comparison of independently obtained qualitative and quantitative measurement system data with routinely obtained data in order to evaluate the proficiency of an analyst or laboratory. (NELAC)

Performance Based Measurement System (PBMS): A set of processes wherein the data quality needs, mandates or limitations of a program or project are specified and serve as criteria for selecting appropriate test methods to meet those needs in a cost-effective manner. (NELAC)

Positive Control: Measures taken to ensure that a test and/or its components are working properly and producing correct or expected results from positive test subjects. (NELAC)

Precision: The degree to which a set of observations or measurements of the same property, obtained under similar conditions, conform to themselves; a data quality indicator. Precision is usually expressed as standard deviation, variance or range, in either absolute or relative terms. (NELAC)

Preservation: Refrigeration and/or reagents added at the time of sample collection (or later) to maintain the chemical and/or biological integrity of the sample. (NELAC)

Proficiency Testing: A means of evaluating a laboratory's performance under controlled conditions relative to a given set of criteria through analysis of unknown samples provided by an external source. (NELAC) [2.1]

Proficiency Testing Program: The aggregate of providing rigorously controlled and standardized environmental samples to a laboratory for analysis, reporting of results, statistical evaluation of the results and the collective demographics and results summary of all participating laboratories. (NELAC)

Proficiency Test Sample (PT): A sample, the composition of which is unknown to the analyst and is provided to test whether the analyst/laboratory can produce analytical results within specified acceptance criteria. (QAMS)

Protocol: A detailed written procedure for field and/or laboratory operation (e.g., sampling, and analysis) which must be strictly followed. (EPA- QAD)

Pure Reagent Water: Shall be water (defined by national or international standard) in which no target analytes or interferences are detected as required by the analytical method. (NELAC)

Quality Assurance: An integrated system of activities involving planning, quality control, quality assessment, reporting and quality improvement to ensure that a product or service meets defined standards of quality with a stated level of confidence. (QAMS)

Quality Assurance (Project) Plan (QAPP): A formal document describing the detailed quality control procedures by which the quality requirements defined for the data and decisions pertaining to a specific project are to be achieved. (EPA-QAD)

Quality Control: The overall system of technical activities whose purpose is to measure and control the quality of a product or service so that it meets the needs of users. (QAMS)

Quality Control Sample: An uncontaminated sample matrix with known amounts of analytes from a source independent from the calibration standards. It is generally used to establish intra-laboratory or analyst specific precision and bias or to assess the performance of all or a portion of the measurement system. (EPA-QAD)

Quality Manual: A document stating the management policies, objectives, principles, organizational structure and authority, responsibilities, accountability, and implementation of an agency, organization, or laboratory, to ensure the quality of its product and the utility of its product to its users. (NELAC)

Quality System: A structured and documented management system describing the policies, objectives, principles, organizational authority, responsibilities, accountability, and implementation plan of an organization for ensuring quality in its work processes, products (items), and services. The quality system provides the framework for planning, implementing, and assessing work performed by the organization and for carrying out required QA and QC. (ANSI/ ASQC E-41994)

Quantitation Limits: Levels, concentrations, or quantities of a target variable (e.g., target analyte) that can be reported at a specific degree of confidence. (NELAC)

Range: The difference between the minimum and the maximum of a set of values. (EPA-QAD)

Raw Data: Any original factual information from a measurement activity or study recorded in a laboratory notebook, worksheets, records, memoranda, notes, or exact copies thereof that are necessary for the reconstruction and evaluation of the report of the activity or study. Raw data may include photography, microfilm or microfiche copies, computer printouts, magnetic media, including dictated observations, and recorded data from automated instruments. If exact copies of raw data have been prepared (e.g., tapes which have been transcribed verbatim, data and verified accurate by signature), the exact copy or exact transcript may be submitted. (EPA-QAD)

Reagent Blank (method reagent blank): A sample consisting of reagent(s), without the target analyte or sample matrix, introduced into the analytical procedure at the appropriate point and carried through all subsequent steps to determine the contribution of the reagents and of the involved analytical steps. (QAMS)

Record Retention: The systematic collection, indexing and storing of documented information under secure conditions. (EPA-QAD)

Reference Material: A material or substance one or more properties of which are sufficiently well established to be used for the calibration of an apparatus, the assessment of a measurement method, or for assigning values to materials. (ISO Guide 30- 2.1)

Reference Method: A method of known and documented accuracy and precision issued by an organization recognized as competent to do so. (NELAC)

Reference Standard: A standard, generally of the highest metrological quality available at a given location, from which measurements made at that location are derived. (VIM-6.08)

Reference Toxicant: The toxicant used in performing toxicity tests to indicate the sensitivity of a test organism and to demonstrate the laboratory's ability to perform the test correctly and obtain consistent results (see Chapter 5, Appendix D, Section 2.1.f). (NELAC)

Replicate Analyses: The measurements of the variable of interest performed identically on two or more sub-samples of the same sample within a short time interval. (NELAC)

Requirement: Denotes a mandatory specification; often designated by the term "shall". (NELAC)

Sampling Media: Material used to collect and concentrate the target analytes(s) during air sampling such as solid sorbents, filters, or impinger solutions.

Selectivity: (Analytical chemistry) The capability of a test method or instrument to respond to a target substance or constituent in the presence of non-target substances. (EPA-QAD)

Sensitivity: The capability of a method or instrument to discriminate between measurement responses representing different levels (e.g., concentrations) of a variable of interest. (NELAC)

Shall: Denotes a requirement that is mandatory whenever the criterion for conformance with the specification requires that there be no deviation. This does not prohibit the use of alternative approaches or methods for implementing the specification so long as the requirement is fulfilled. (ANSI)

Should: Denotes a guideline or recommendation whenever noncompliance with the specification is permissible. (ANSI)

Spike: A known mass of target analyte added to a blank sample or sub-sample; used to determine recovery efficiency or for other quality control purposes. (NELAC)

Standard: The document describing the elements of laboratory accreditation that has been developed and established within the consensus principles of NELAC and meets the approval requirements of NELAC procedures and policies. (ASQC)

Standard Operating Procedure (SOP): A written document which details the method of an operation, analysis or action whose techniques and procedures are thoroughly prescribed and which is accepted as the method for performing certain routine or repetitive tasks. (QAMS)

Standardized Reference Material (SRM): A certified reference material produced by the U.S. National Institute of Standards and Technology or other equivalent organization and characterized for absolute content, independent of analytical method. (EPA-QAD)

Supervisor (however named): The individual(s) designated as being responsible for a particular area or category of scientific analysis. This responsibility includes direct day-to-day supervision of technical employees, supply and instrument adequacy and upkeep, quality assurance/quality control duties and ascertaining that technical employees have the required balance of education, training and experience to perform the required analyses. (NELAC)

Surrogate: A substance with properties that mimic the analyte of interest. It is unlikely to be found in environment samples and is added to them for quality control purposes. (QAMS)

Systems Audit (also Technical Systems Audit): A thorough, systematic, qualitative on-site assessment of the facilities, equipment, personnel, training, procedures, record keeping, data validation, data management, and reporting aspects of a total measurement system. (EPA-QAD)

Technical Director: Individual(s) who has overall responsibility for the technical operation of the environmental testing laboratory. (NELAC)

Test: A technical operation that consists of the determination of one or more characteristics or performance of a given product, material, equipment, organism, physical phenomenon, process or service according to a specified procedure. The result of a test is normally recorded in a document sometimes called a test report or a test certificate. (ISO/IEC Guide 2-12.1, amended)

Test Method: An adoption of a scientific technique for a specific measurement problem, as documented in a laboratory SOP. (NELAC)

Testing Laboratory: Laboratory that performs tests. (ISO/ IEC Guide 2 - 12.4)

Test Sensitivity/Power: The minimum significant difference (MSD) between the control and test concentration that is statistically significant. It is dependent on the number of replicates per concentration, the selected significance level, and the type of statistical analysis (see Chapter 5, Appendix D, Section 2.4.a). (NELAC)

Tolerance Chart: A chart in which the plotted quality control data is assessed via a tolerance level (e.g. +/- 10% of a mean) based on the precision level judged acceptable to meet overall quality/data use requirements instead of a statistical acceptance criteria (e.g. +/- 3 sigma) (applies to radiobioassay laboratories). (ANSI)

Traceability: The property of a result of a measurement whereby it can be related to appropriate standards, generally international or national standards, through an unbroken chain of comparisons. (VIM - 6.12)

Validation: The process of substantiating specified performance criteria. (EPA- QAD)

Verification: Confirmation by examination and provision of evidence that specified requirements have been met. (NELAC)

NOTE: In connection with the management of measuring equipment, verification provides a means for checking that the deviations between values indicated by a measuring instrument and corresponding known values of a measured quantity are consistently smaller than the maximum allowable error defined in a standard, regulation or specification peculiar to the management of the measuring equipment.

The result of verification leads to a decision either to restore in service, to perform adjustment, to repair, to downgrade, or to declare obsolete. In all cases, it is required that a written trace of the verification performed shall be kept on the measuring instrument's individual record.

Work Cell: A well-defined group of analysts that together perform the method analysis. The members of the group and their specific functions within the work cell must be fully documented. (NELAC)

Sources:

American Society for Quality Control (ASQC), Definitions of Environmental Quality Assurance Terms, 1996

American National Standards Institute (ANSI), Style Manual for Preparation of Proposed American National Standards, Eighth Edition, March 1991

ANSI/ASQC E4, 1994

ANSI N42.23- 1995, Measurement and Associated Instrument Quality Assurance for Radiobioassay Laboratories

International Standards Organization (ISO) Guides 2, 30, 8402

International Vocabulary of Basic and General Terms in Metrology (VIM): 1984. Issued by BIPM, IEC, ISO and OIML

National Institute of Standards and Technology (NIST)

National Environmental Laboratory Accreditation Conference (NELAC), July 1998 Standards

Random House College Dictionary

U.S. EPA Quality Assurance Management Section (QAMS), Glossary of Terms of Quality Assurance Terms, 8/31/92 and 12/6/95

U.S. EPA Quality Assurance Division (QAD)

40 CFR, Part 136

Webster's New World Dictionary of the American Language

APPENDIX C - DEMONSTRATION OF CAPABILITY

C.1 PROCEDURE FOR DEMONSTRATION OF CAPABILITY

A demonstration of capability (DOC) must be made prior to using any test method, and at any time there is a change in instrument type, personnel or test method. (See NELAC 10.2.1.)

Note: Where tests are performed by specialized “work cells” (a well-defined group of analysts that together perform the method analysis), the work cell as a unit meets the above criteria and this demonstration is fully documented.

In general, this demonstration does not test the performance of the method in real world samples, but in the applicable and available clean matrix (a sample of a matrix in which no target analytes or interferences are present at concentrations that impact the results of a specific test method), e.g., water, solids and air. However, before any results are reported using this method, actual sample spike results may be used to meet this standard, i.e., at least four consecutive matrix spikes within the last twelve months. In addition, for analytes that do not lend themselves to spiking, e.g., TSS, the demonstration of capability may be performed using quality control samples.

All demonstrations shall be documented through the use of the form in this appendix.

The following steps, which are adapted from the EPA test methods published in 40 CFR Part 136, Appendix A, are performed if required by mandatory test method or regulation. Note: For analytes for which spiking is not an option and for which quality control samples are not readily available, the 40 CFR approach is one way to perform this demonstration. The laboratory documents that other approaches to DOC are adequate, and this is documented in the laboratory's Quality Manual.

- a) A quality control sample is obtained from an outside source. If not available, the QC sample may be prepared by the laboratory using stock standards that are prepared independently from those used in instrument calibration.
- b) The analyte(s) is diluted in a volume of clean matrix sufficient to prepare four aliquots at the concentration specified, or if unspecified, to a concentration approximately 10 times the method-stated or laboratory-calculated method detection limit.
- c) At least four aliquots are prepared and analyzed according to the test method either concurrently or over a period of days.
- d) Using all of the results, the mean recovery (\bar{X}) is calculated in the appropriate reporting units (such as $\mu\text{g/L}$) and the standard deviations of the population sample (n-1) (in the same units) for each parameter of interest. When it is not possible to determine mean and standard deviations, such as for presence/absence and logarithmic values, the laboratory will assess performance against established and documented criteria.
- e) Compare the information from (d) above to the corresponding acceptance criteria for precision and accuracy in the test method (if applicable) or in laboratory-generated acceptance criteria (if there are no established mandatory criteria). If all parameters meet the acceptance criteria, the analysis of actual samples may begin. If any one of the parameters do not meet the acceptance criteria, the performance is unacceptable for that parameter.
- f) When one or more of the tested parameters fail at least one of the acceptance criteria, the analyst must proceed according to 1) or 2) below.

- 1) Locate and correct the source of the problem and repeat the test for all parameters of interest beginning with c) above.
- 2) Beginning with c) above, repeat the test for all parameters that failed to meet criteria. Repeated failure, however, will confirm a general problem with the measurement system. If this occurs, locate and correct the source of the problem and repeat the test for all compounds of interest beginning with c).

C.2 CERTIFICATION STATEMENT

The following certification statement shall be used to document the completion of each demonstration of capability. A copy of the certification statement shall be retained in the personnel records of each affected employee (see Calscience QSM Section 6.3 and 12.3.4.b.).

**Demonstration of Capability
Certification Statement**

Date:
Laboratory Name:
Laboratory Address:
Analyst(s) Name(s):

Page ___ of ___

Matrix: _____
(examples: laboratory pure water, soil, air, solid, biological tissue)

Method number, SOP#, Rev #, and Analyte, or Class of Analytes or Measured Parameters:
_____ (examples: barium by 200.7, trace metals by 6010, benzene by 8021, etc.)

We, the undersigned, CERTIFY that:

1. The analysts identified above, using the cited test method(s), which is in use at this facility for the analyses of samples under the National Environmental Laboratory Accreditation Program, have met the Demonstration of Capability.
2. The test method(s) was performed by the analyst(s) identified on this certification.
3. A copy of the test method(s) and the laboratory-specific SOPs are available for all personnel on-site.
4. The data associated with the demonstration capability are true, accurate, complete and self-explanatory (1).
5. All raw data (including a copy of this certification form) necessary to reconstruct and validate these analyses have been retained at the facility, and that the associated information is well organized and available for review by authorized assessors.

_____ Technical Director's Name and Title	_____ Signature	_____ Date
_____ Quality Assurance Officer's Name	_____ Signature	_____ Date

This certification form must be completed each time a demonstration of capability study is completed.

- (1) True: Consistent with supporting data.
Accurate: Based on good laboratory practices consistent with sound scientific principles/practices.
Complete: Includes the results of all supporting performance testing.
Self-explanatory: Data properly labeled and stored so that the results are clear and require no additional explanation.

(Note: Form may be modified so long as the essential items are included in the updated form)

APPENDIX D - ESSENTIAL QUALITY CONTROL REQUIREMENTS

The quality control protocols specified by the laboratory's method manual (10.1.2) shall be followed. The laboratory shall ensure that the essential standards outlined in Appendix D are incorporated into their method manuals.

All quality control measures shall be assessed and evaluated on an ongoing basis and quality control acceptance criteria shall be used to determine the validity of the data. The laboratory shall have procedures for the development of acceptance/rejection criteria where no method or regulatory criteria exists.

The requirements from the body of Chapter 5, e.g., Section 5.4, apply to all types of testing. The specific manner in which they are implemented is detailed in each of the sections of this Appendix, i.e., chemical testing.

D.1 CHEMICAL TESTING

D.1.1 Positive and Negative Controls

a) Negative Controls

- 1) Method Blanks - Shall be performed at a frequency of one per preparation batch of samples per matrix type. The results of this analysis shall be one of the QC measures to be used to assess the batch. The source of contamination must be investigated and measures taken to correct, minimize or eliminate the problem if
 - i) the blank contamination exceeds a concentration greater than 1/10 of the measured concentration of any sample in the associated sample batch or
 - ii) the blank contamination exceeds the concentration present in the samples and is greater than 1/10 of the specified regulatory limit.

Any sample associated with the contaminated blank shall be reprocessed for analysis or the results reported with appropriate data qualifying codes.

b) Positive Controls

- 1) Laboratory Control Sample (LCS) - (QC Check Samples) Shall be analyzed at a minimum of 1 per preparation batch of 20 or less samples per matrix type, except for analytes for which spiking solutions are not available such as total suspended solids, total dissolved solids, total volatile solids, total solids, pH, color, odor, temperature, dissolved oxygen or turbidity. The results of these samples shall be used to assess the batch. NOTE: The matrix spike (see 2 below) may be used in place of this control as long as the acceptance criteria are as stringent as for the LCS.
- 2) Matrix Spikes (MS) - Shall be performed at a frequency of one out of every 20 samples per matrix type prepared over time, except for analytes for which spiking solutions are not available such as, total suspended solids, total dissolved solids, total volatile solids, total solids, pH, color, odor, temperature, dissolved oxygen or turbidity. The selected sample(s) shall be rotated among client samples so that various matrix problems may be noted and/or addressed. Poor performance in a matrix spike may indicate a problem with the sample composition and shall be reported to the client whose sample was used for the spike.
- 3) Surrogates - Surrogate compounds must be added to all samples, standards, and blanks, for all organic chromatography methods except when the matrix precludes its use or when a surrogate

is not available. Poor surrogate recovery may indicate a problem with the sample composition and shall be reported to the client whose sample produced the poor recovery.

- 4) If the mandated or requested test method does not specify the spiking components, the laboratory shall spike all reportable components to be reported in the Laboratory Control Sample and Matrix Spike. However, in cases where the components interfere with accurate assessment (such as simultaneously spiking chlordane, toxaphene, and PCBs in Method 608), the test method has an extremely long list of components or components that are incompatible, a representative number (minimum of 10%) of the listed components may be used to control the test method. The selected components of each spiking mix shall represent all chemistries, elution patterns and masses, permit-specified analytes, and other client-requested components. However, the laboratory shall ensure that all reported components are used in the spike mixture within a two-year time period.

D.1.2 Analytical Variability/Reproducibility

Matrix Spike Duplicates (MSDs) or Laboratory Duplicates - Shall be analyzed at a minimum of 1 in 20 samples per matrix type per sample extraction or preparation method. The laboratory shall document its procedure to select the use of appropriate type of duplicate. The selected sample(s) shall be rotated among client samples so that various matrix problems may be noted and/or addressed. Poor performance in the duplicates may indicate a problem with the sample composition and shall be reported to the client whose sample was used for the duplicate.

D.1.3 Method Evaluation

In order to ensure the accuracy of the reported result, the following procedures shall be in place:

- a) Demonstration of Analytical Capability - (Section 10.2.1) shall be performed initially (prior to the analysis of any samples) and with a significant change in instrument type, personnel, matrix or test method.
- b) Calibration - Calibration protocols specified in Section 9.4 shall be followed.
- c) Proficiency Test Samples - The results of such analyses (4.2.j or 5.3.4) shall be used by the laboratory to evaluate the ability of the laboratory to produce accurate data.

D.1.4 Analytical Measurement Uncertainty Estimation

When estimating analytical measurement uncertainty, all significant components of uncertainty must be identified and quantified. Components that affect analytical measurement uncertainty include sampling, handling, transport, storage, preparation and testing. A typical environmental laboratory will have the greatest contribution to uncertainty in the storage, preparation and testing portion of the analytical train, hence the estimation can be limited to those three areas, assuming all other factors are within recommended guidelines for sample size, container type, preservation (chemical, temperature, temporal) and handling/transport. If the latter are *NOT* within guidelines then these additional estimations of variability must be accounted for, and may supersede the laboratory contribution to uncertainty.

Definitive references and procedural manuals for calculating Analytical Measurement Uncertainty are listed below. Note that there are different theories on the “best” way to estimate uncertainty, it is up to the end user to determine that which best meets their project needs.

- a) “Environmental Analytical Measurement Uncertainty Estimation – Nested Hierarchical Approach”, William Ingersoll, Defense Technical Information Center # ADA396946, 2001

- b) "Quantifying Uncertainty in Analytical Measurement", Eurachem / CITAC Guide CG 4, Second Edition, QUAM 2000.1
- c) "Quantifying Measurement Uncertainty in Analytical Chemistry – A Simplified Practical Approach", Thomas W. Vetter, National Institute of Standards and Technology

The process in general involves the following steps:

1. Specify the Measurand – Write down a clear statement of what is being measured, including the relationship between the measurand and the input quantities, i.e., measured quantities, constants, calibration standard values, etc.
2. Identify uncertainty sources – This will include sources that contribute to the uncertainty on the parameters in the relationships identified in step 1, but may include other sources and must include sources arising from chemical assumptions.
3. Quantify uncertainty components – Measure or estimate the size of the uncertainty component associated with each potential source of uncertainty identified. It is often possible to estimate or determine a single contribution to uncertainty from the aggregate of multiple sources.
4. Calculate combined uncertainty – The information obtained in step 3 will consist of a number of quantified contributions to overall uncertainty, whether associated with individual sources or with the combined effects of several sources.

The process outlined above relates to the measurement of uncertainty for the preparative / analytical laboratory procedure. However, there are uncertainty contributions from other factors outside the preparative / analytical procedure. These can be controlled to a great extent by specifying uniform and standardized training or conditions.

Examples:

Human Factors

- a) All personnel at Calscience undergo documented training in the method and / or instrument used. Minimum levels of education or experience are required.
- b) Initial and continuing Demonstrations of Capability (DOC) must be performed and documented prior to and in continuance of analytical work related to their areas of responsibilities.
- c) Blind Proficiency Testing samples are analyzed twice a year to gauge each department, matrix and method.
- d) Data Integrity and Ethics Training are provided to new employees and on an annual basis to all employees.

Accommodation and Environmental Conditions

- a) Calscience has standardized operating procedures for transport, storage and tracking of samples, extracts and digests through out the laboratory. All incoming orders are logged into a Laboratory Information System that assigns a specific identifier code to each work order, sample container and analytical result.
- b) The sample control areas are secured with restricted access using card key portals. Internal chain of custody is available if the project requires.

- c) The laboratory has over 35,000 sq ft of laboratory space with temperature controlled and air positive or negative environmental controls.
- d) Regular safety inspections are performed to identify potentially hazardous conditions and to ensure general cleanliness.

Environmental Test Methods and Method Validation

- a) All methods in use have Standard Operating Procedures (SOPs) based upon published methods from the EPA, ASTM, Standard Methods or other established body. These are controlled documents assigned to each department. An annual review is performed.
- b) Each method has internal and external quality control criteria for preparative efficiency, instrument performance, calibration, continuing method performance and possible matrix effects as appropriate.
- c) Ongoing Proficiency Testing program.

Equipment and Instrumentation

- a) Each instrument in use has performance parameters that must be evaluated to specific standards based on the established method prior to any analytical use.
- b) Routine and preventative maintenance is performed to maintain optimum operational performance.
- c) Complex instrument systems are covered under manufacturer service contracts as appropriate.

Measurement Traceability

- a) Every reagent used must meet the indicated purity and fitness for usage as referenced in the method SOPs.
- b) All calibration standards are certified by the manufacturer to meet or exceed purity levels as recorded in the accompanying Certificate of Traceability to NIST or other standards verification.
- c) Each reagent, standard or working standard is recorded, assigned a tracking identifier. This is referenced in the analytical log book as needed to assure traceability to the original source.
- d) All Balances, Dispensers, Pipettors, Refrigerators, Freezers and Thermometers are checked on a daily or other routine basis to specified tolerances.

D.1.5 Detection Limits

The laboratory shall utilize a test method that provides a detection limit that is appropriate and relevant for the intended use of the data. Detection limits shall be determined by the protocol in the mandated test method or applicable regulation, e.g., Method Detection Limit (MDL). If the protocol for determining detection limits is not specified, the selection of the procedure must reflect instrument limitations and the intended application of the test method.

- a) A detection limit study is not required for any component for which spiking solutions or quality control samples are not available such as temperature.
- b) The detection limit shall be initially determined for the compounds of interest in each test method in a matrix in which there are not target analytes nor interferences at a concentration that would impact the results or the detection limit must be determined in the matrix of interest (see definition of matrix).

- c) Detection limits must be determined each time there is a change in the test method that affects how the test is performed, or when a change in instrumentation occurs that affects the sensitivity of the analysis.
- d) All samples processing steps of the analytical method shall be included in the determination of the detection limit.
- e) All procedures used must be documented. Documentation must include the matrix type. All supporting data must be retained.
- f) The laboratory must have established procedures to relate detection limits with quantitation limits.
- g) The test method's quantitation limits must be established and must be above the detection limits.

D.1.6 Data Reduction

The procedures for data reduction, such as use of linear regression, shall be documented.

D.1.7 Quality of Standards and Reagents

- a) The source of standards shall comply with 9.2.
- b) Reagent Quality, Water Quality and Checks:
 - 1) Reagents - In methods where the purity of reagents is not specified, analytical reagent grade shall be used. Reagents of lesser purity than those specified by the test method shall not be used. The labels on the container should be checked to verify that the purity of the reagents meets the requirements of the particular test method. Such information shall be documented.
 - 2) Water - The quality of water sources shall be monitored and documented and shall meet method specified requirements.
 - 3) The laboratory will verify the concentration of titrants in accordance with written laboratory procedures.

D.1.8 Selectivity

- a) Absolute retention time and relative retention time aid in the identification of components in chromatographic analyses and to evaluate the effectiveness of a column to separate constituents. The laboratory shall develop and document acceptance criteria for retention time windows.
- b) A confirmation shall be performed to verify the compound identification when positive results are detected on a sample from a location that has not been previously tested by the laboratory. Such confirmations shall be performed on organic tests such as pesticides, herbicides, or acid extractable or when recommended by the analytical test method except when the analysis involves the use of a mass spectrometer. Confirmation is required unless stipulated in writing by the client. All confirmation shall be documented.
- c) The laboratory shall document acceptance criteria for mass spectral tuning.

D.1.9 Constant and Consistent Test Conditions

- a) The laboratory shall assure that the test instruments consistently operate within the specifications required of the application for which the equipment is used.
- b) Glassware Cleaning - Glassware shall be cleaned to meet the sensitivity of the test method.

Any cleaning and storage procedures that are not specified by the test method shall be documented in laboratory records and SOPs.

END OF DOCUMENT